

PTR2E DRIVER LOADING INSTRUCTIONS FOR WINDOWS 2000

- 1) Click on **“Start”**
- 2) Go to **“Settings”** and then select **“Printers”**
- 3) Double click on **“Add Printer”**
- 4) At **“Welcome to the Add Printer Wizard”**, select **“Next”**
- 5) At **“Local or Network Printer”**, select **“Local Printer”** and then **“Next”**
*If you receive the following message, follow the instructions and select **“Next”**.
(Windows was unable to detect any Plug and Play Printers. Click Next if you want to install the printer manually)
- 6) At **“Select a Printer Port”**: select **“LPT1”** and then **“Next”**
- 7) At the **“Manufacturers:/Printers:”** screen click **“Have Disk”**
- 8) At **“Install from Disk”**: click **“Browse”**
- 9) At **“Locate File”**: select **“Local Disk (C:)”**
- 10) At Look In: *Local Disk (C:)*, double click on **“Program Files”**
- 11) At Look In: *Program Files*, double click on **“pmus”**
- 12) At Look In: *pmus*, double click **“Drivers”**
- 13) At Look In: *Drivers*, double click **“PTR2”**
- 14) At Look In: *PTR2*, double click **“Win2k”**
- 15) At Look In: *Win2k*, double click **“Oemsetup.inf”**
- 16) At *Copy Manufacturers File From: C:\Program Files\pmus\Drivers\PTR2\Win2k*, click **“OK”**
- 17) The Panduit PTR2 will now be listed under *Printers*, click **“Next”**
- 18) At *Name Your Printer*, you can opt to keep the printer name supplied or change it. Unless you want to use this printer as your Default printer, you will need to select **“No”** and then **“Next”**
- 19) At *Printer Sharing*, select **“Do not share this printer”** and click **“Next”**
- 20) At *Print Test Page* (it’s your option) select **“No”** and click **“Next”**
- 21) At *Completing the Add Printer Wizard* click **“Finish”**

PRINTER SETUP INSTRUCTIONS

- 1) Click on **“Start”** – **“Settings”** – **“Printers”**
- 2) **Right click** on the **“PTR2”** and click **“Properties”**
- 3) At the **“General”** tab click on **“Printing Preferences”**
- 4) At the **“Paper/Quality”** tab click the **“Down Arrow”** and choose **Labels (w/o TOF Backup)**. Then click **“Apply”**.
- 5) Click on the **“Advanced”** button and change **“Media:”** to **“Speed 1 ips”**. Next change the **“Print Quality:”** to **“Density 3”** and then **“OK”** and **“OK”** again.
- 6) At the **“Device Settings”** tab, select **“Labels (with TOF Backup)”** change the setting to **“Not Available”**. Then select **“Label (wo TOF Backup)”** and change the setting to the desired label you wish to use.
- 7) Then click **“Apply”**, **“OK”** and close out of your printers.

You may now send print jobs to the PTR2E printer

*Not every computer is the same. Your system may give you prompts not seen on the units used in our testing. If you encounter any problems with these instructions, call Panduit™ Tech Support at 1-888-506-5400, ext. 7468.