



\* Denotes Instruction Sheet revision letter.

\*\* Denotes color.

### 9 T568B Wiring

**Color Key:**  
 R: Blue, B: Orange, F: Brown, A: Green

**Wiring Options:**  
 Option 1: Wires cross between R and B, and F and A.  
 Option 2: Wires do not cross between R and B, and F and A.

**Steps:**  
 1. Initial wiring setup.  
 2. Final wiring configuration.

### 9 T568A Wiring

**Color Key:**  
 R: Blue, B: Orange, F: Brown, A: Green

**Wiring Options:**  
 Option 1: Wires cross between R and B, and F and A.  
 Option 2: Wires do not cross between R and B, and F and A.

**Steps:**  
 1. Initial wiring setup.  
 2. Final wiring configuration.

### 10

### 11

### 12

EGJT

### Use proper bend radius control

### REMOVAL STEPS

**1**

**2**

- Notes:**
1. For specified performance, follow TIA/EIA 568-C installation guidelines.
  2. Jack Modules can terminate 28 AWG solid or stranded and 30 AWG solid only IWC data cable with 0.025" (.635mm) maximum insulated conductor outside diameter.
  3. Jack Modules may be re-terminated a minimum of 20 times.
  4. For technical and performance information, consult Panduit Technical Support.

**As with all Wiring Accessories, the following statements apply:**

1. Never install communications wiring during a lightning storm.
2. Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
3. Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
4. Use caution when installing or modifying communication wiring.

<p>For Instructions in Local Languages and Technical Support:</p> <p><a href="http://www.panduit.com/resources/install_maintain.asp">www.panduit.com/resources/install_maintain.asp</a></p>	<p><b>PANDUIT</b></p> <p><a href="http://www.panduit.com">www.panduit.com</a></p>	<p><b>E-mail:</b> techsupport@panduit.com</p> <p><b>Phone:</b> 866-405-6654</p>
---	---	---