




# FIBERRUNNER to FIBERRUNNER Reducer and Transition Fittings

PANDUIT Part Numbers: FRRF4FD2, FRRF6FR4, FRT12X4W4, FRFWC12X4W4, FRRF126, FRT12X4W6, FRFWC12X4W6, FRY126, FRRF126L, FRRF126R, FRRF2412, FRT24X4W12, FRFWC24X12W12, FRRF6FR4SC, FRTSC12W4, FRFWCSC12W4, FRTSC12W6, FRFWCSC12W6, FRRF126SC, FRRF126LSC, FRRF126RSC, FRY126SC



## INSTALLATION INSTRUCTIONS

© PANDUIT Corp. 2001

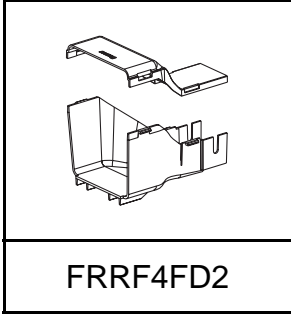



FRRF4FD2

### FIBERRUNNER 4x4 to FIBERRUNNER 2x2 Reducer

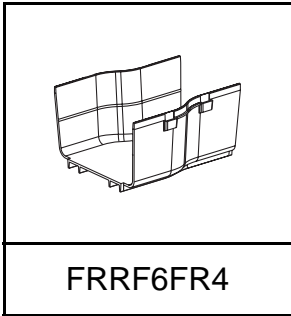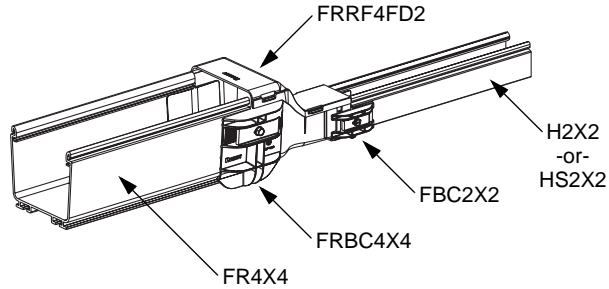



FRRF6FR4

### FIBERRUNNER 6x4 to FIBERRUNNER 4x4 Reducer

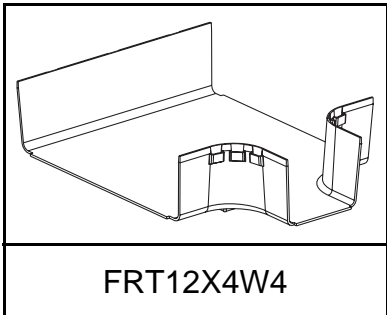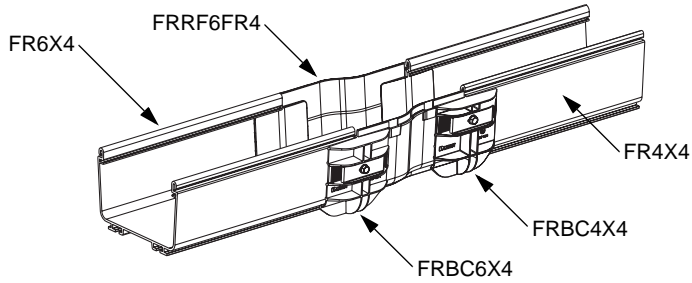


FRT12X4W4

### FIBERRUNNER 12x4 Horizontal Tee with 4" Exit

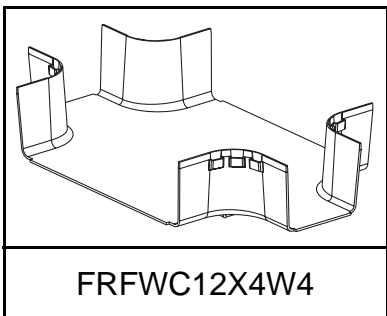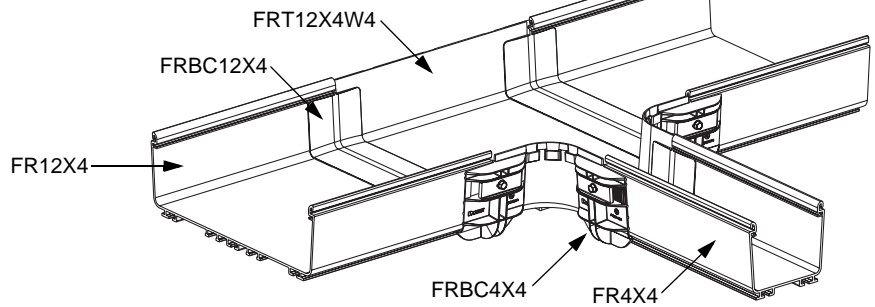

FRFWC12X4W4



### FIBERRUNNER 12x4 Four-Way Cross with 4" Exits

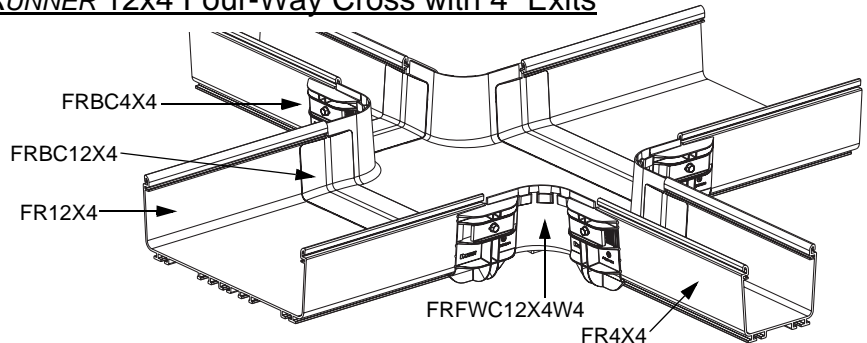



For Technical Assistance, Call: 800-777-3300

# INSTALLATION INSTRUCTIONS



## FIBERRUNNER 12x4 to FIBERRUNNER 6x4 Reducer

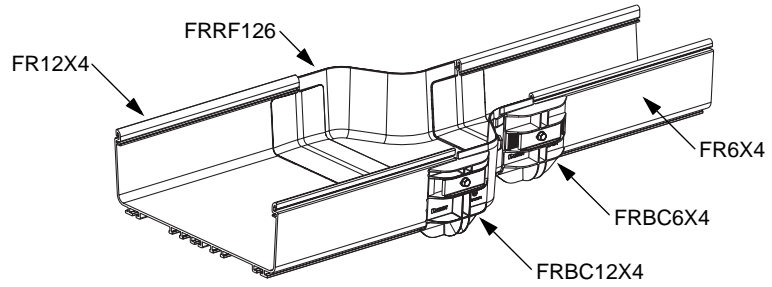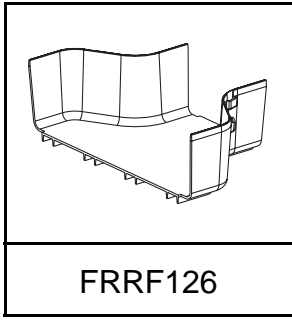



## FIBERRUNNER 12x4 Horizontal Tee with 6" Exit

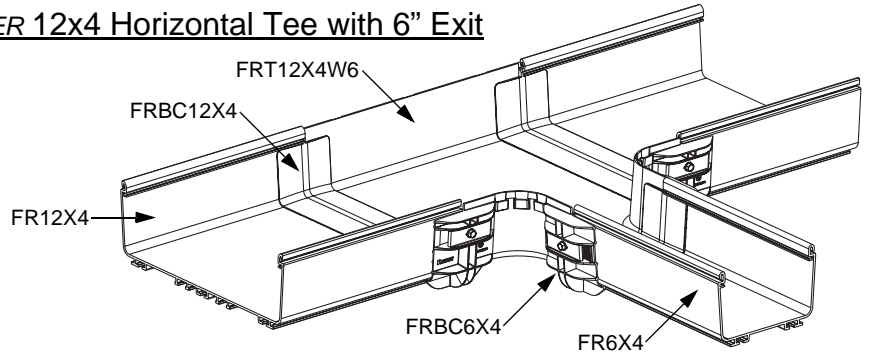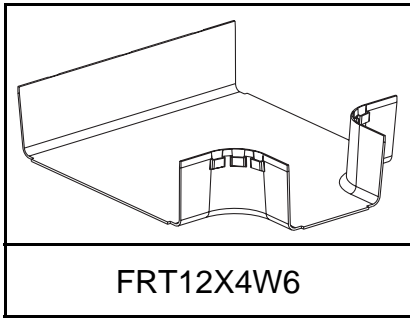



## FIBERRUNNER 12x4 Four-Way Cross with 6" Exits

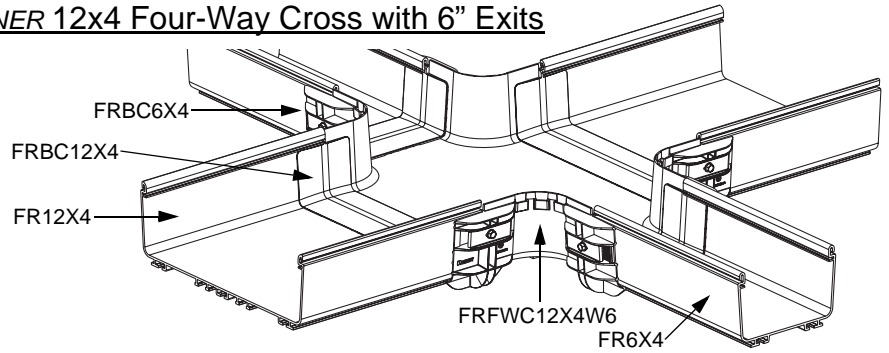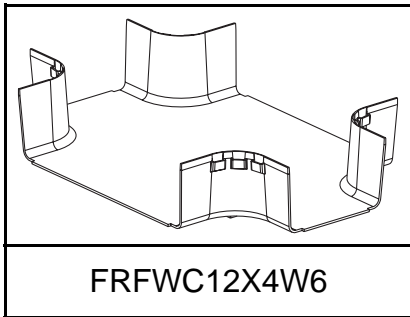

## FIBERRUNNER 12x4 "Y" Transition with 6" Exits

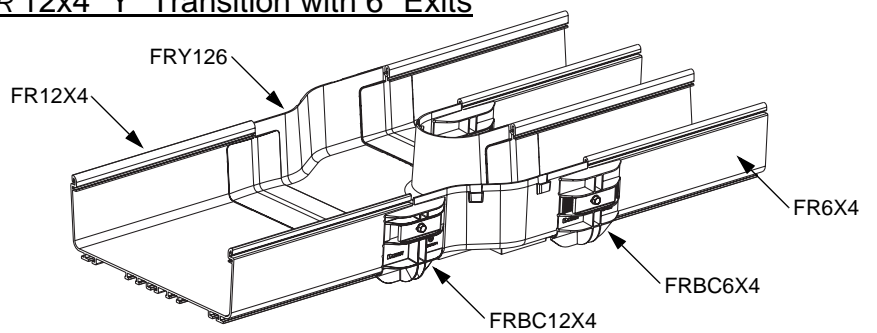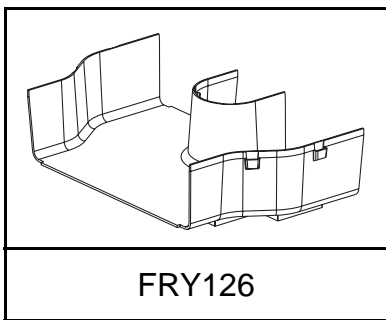


## FIBERRUNNER 12x4 Transition Left with 6" Exit

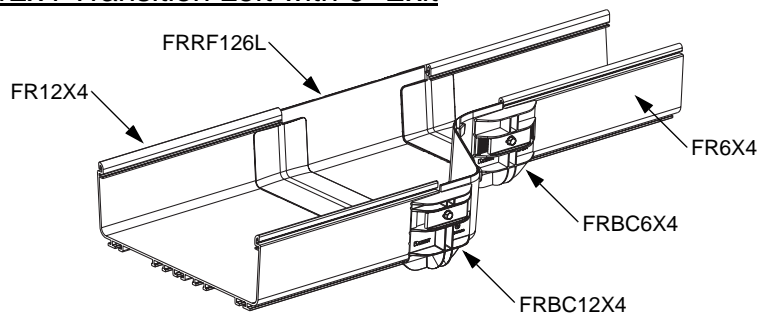
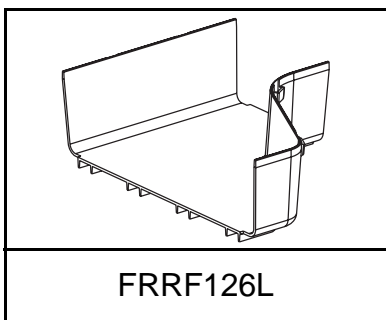


For Technical Assistance, Call: 800-777-3300



# INSTALLATION INSTRUCTIONS

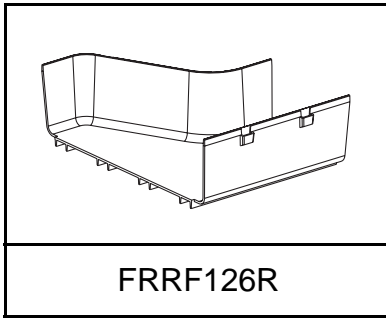



## FIBERRUNNER 12x4 Transition Right with 6" Exit

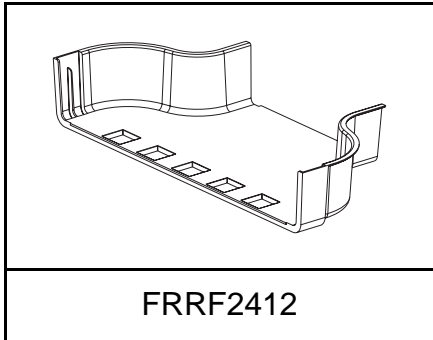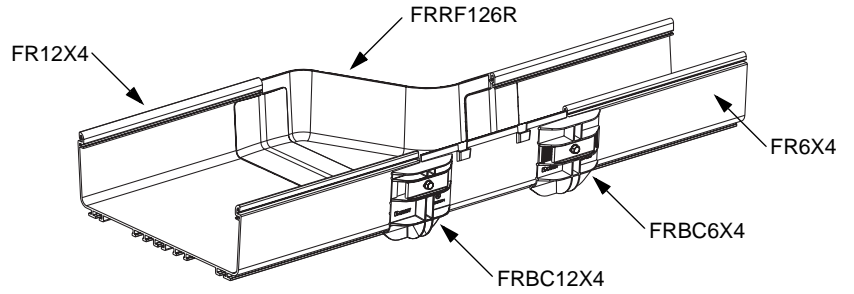


## FIBERRUNNER 24x4 to FIBERRUNNER 12x4 Reducer

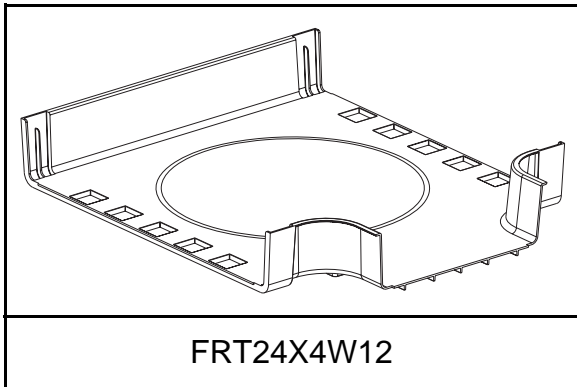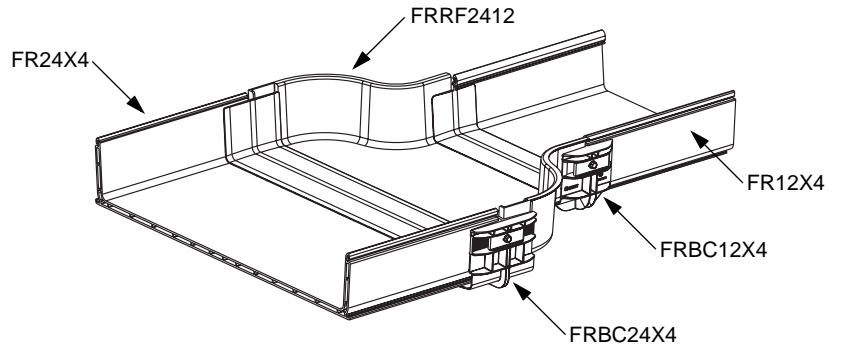


## FIBERRUNNER 24x4 Horizontal Tee with 12" Exit

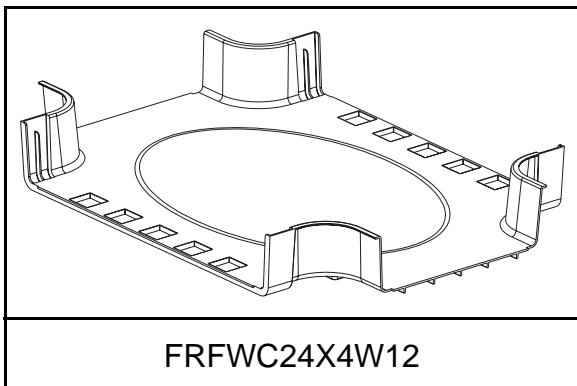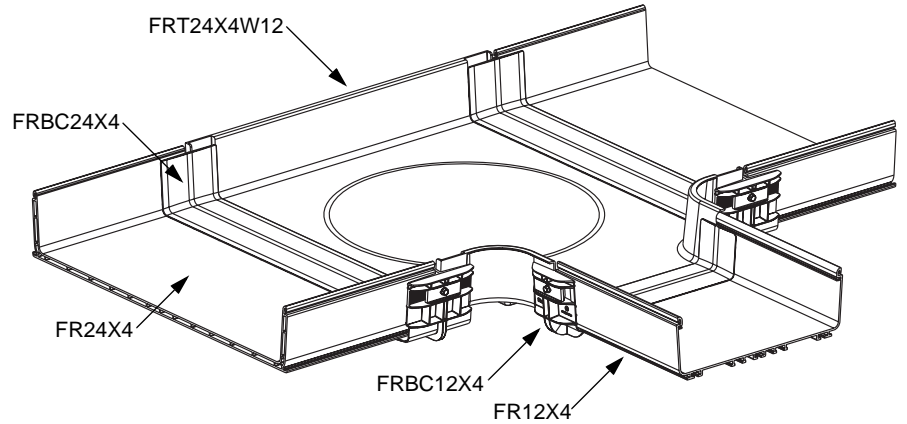


## FIBERRUNNER 24x4 Four-Way Cross with 12" Exit

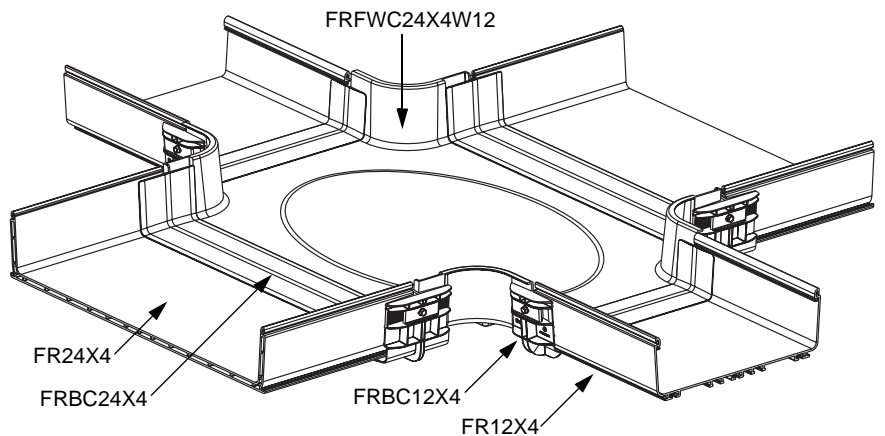


# INSTALLATION INSTRUCTIONS

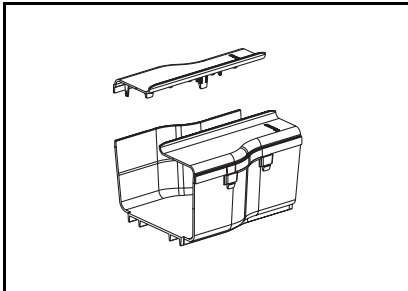


**FRRF6FR4SC**  
(split cover for FRRF6FR4)

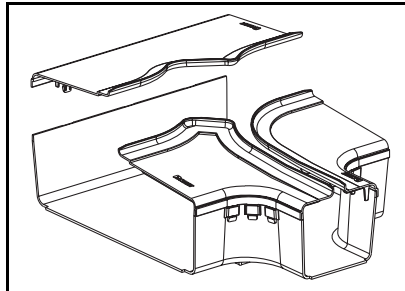


**FRTSC12W4**  
(split cover for FRT12X4W4)

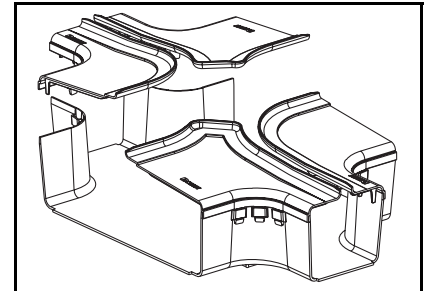


**FRFWCSC12W4**  
(split cover for FRFWC12X4W4)

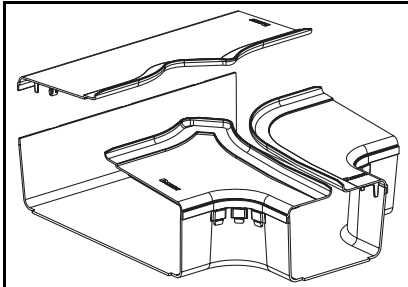


**FRTSC12W6**  
(split cover for FRT12X4W6)

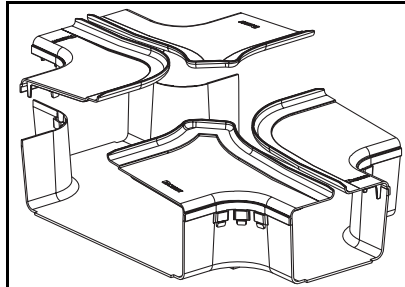


**FRFWCSC12W6**  
(split cover for FRFWC12X4W6)

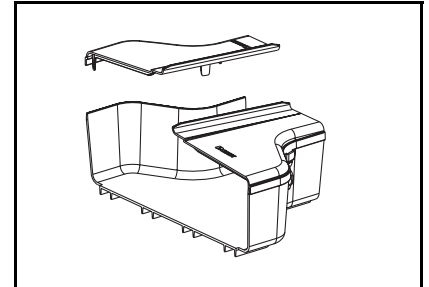


**FRRF126SC**  
(split cover for FRRF126)

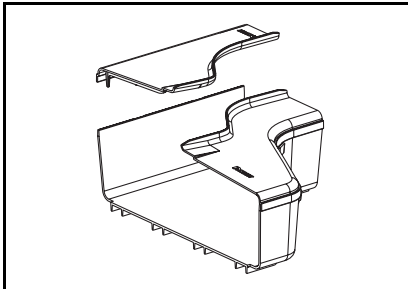


**FRRF126LSC**  
(split cover for FRRF126L)

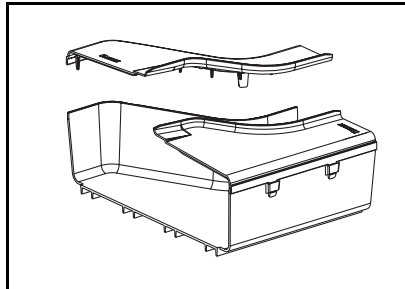


**FRRF126RSC**  
(split cover for FRRF126R)

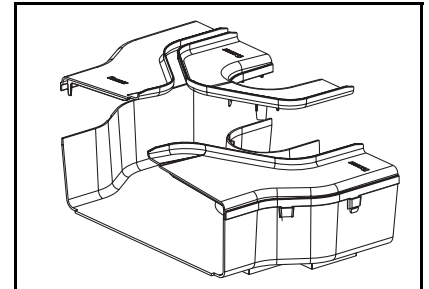


**FRY126SC**  
(split cover for FRY126)

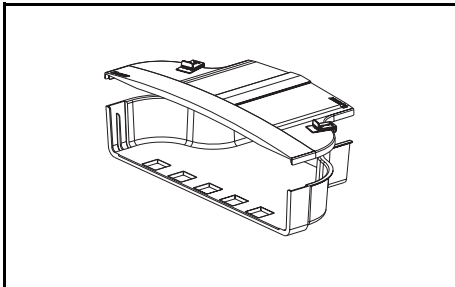

**FRRF2412CV**  
(cover for FRRF2412)

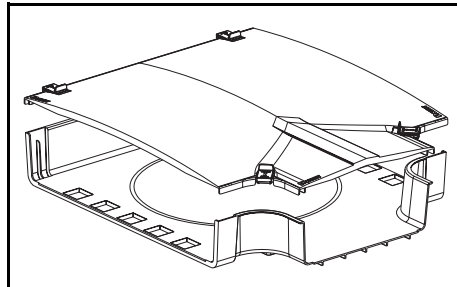

**FRTCVCV24W12**  
(cover for FRT24X4W12)

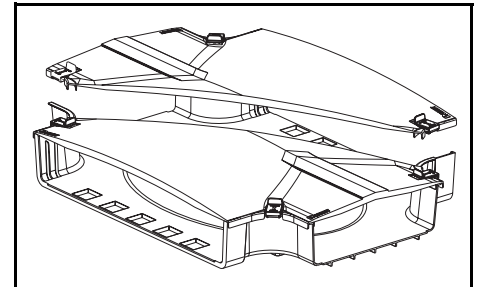

**FRFWCCV24W12**  
(cover for FRFWC24X4W12)

Instruction Sheet RW138B

## WORLDWIDE SUBSIDIARIES AND SALES OFFICES

17301 Ridgeland Avenue  
Tinley Park, IL 60477-3901  
Web Site: [www.panduit.com](http://www.panduit.com)



Fax: 708-532-1811  
Technical Support: 800-777-3300  
E-mail: [cs@panduit.com](mailto:cs@panduit.com)