

© Panduit Corp. 2020


# Mini-Com™ Corrosive Resistant UTP Jack Modules


Part Number(s): All CJE\*88TG\* Parts


#### INSTALLATION INSTRUCTIONS


PN647


## **TERMINATION STEPS**

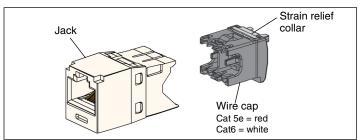


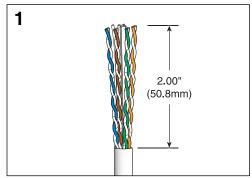


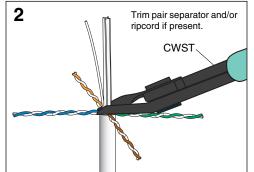


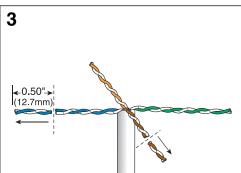


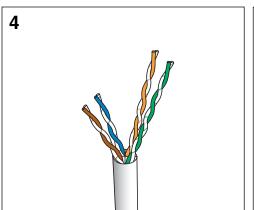

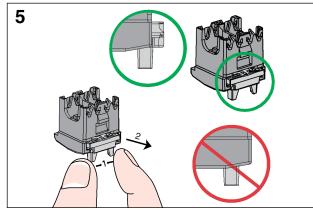


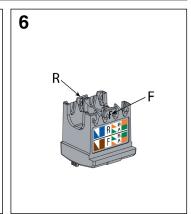


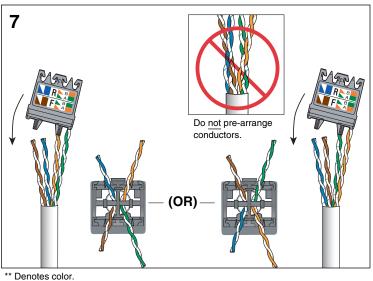


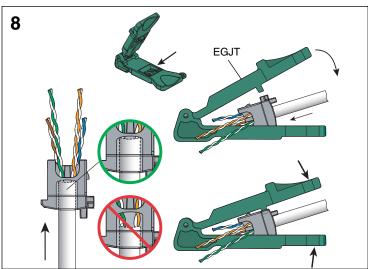



Note: For bulk packaged TG style jack modules, add -24 to end of part number.

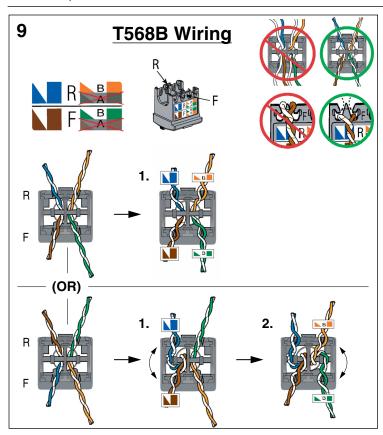

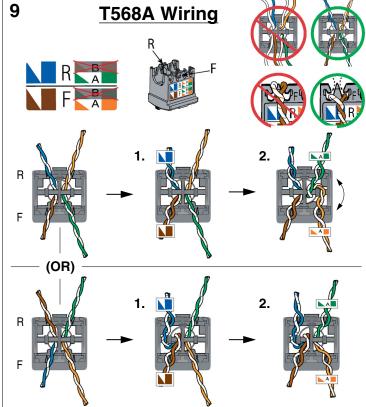


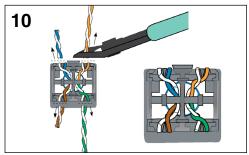


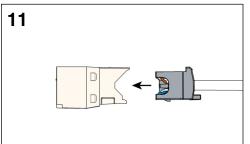


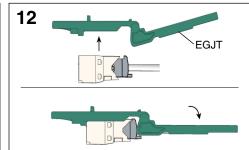

## **REMOVAL STEPS**

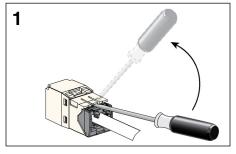

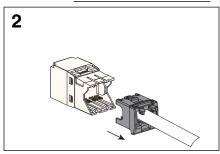

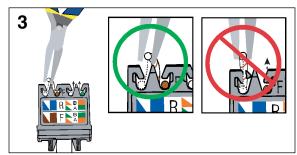

- Corrosion Resistant jack modules may be re-terminated a maximum of 3 times at the wire cap and a maximum of 5 plug insertions.
- For specified performance, follow TIA/EIA 568-C installation guidelines.
- Corrosion resistant jack modules can terminate 22-26 AWG solid or stranded IWC data cable with 0.062" (1.57mm) maximum insulated conductor outside diameter.
- For technical and performance information, consult PANDUIT technical support.

#### As with all Communication Components, the following statements apply:


- Never install communications wiring during a lightning storm.


  Never install communications wiring during a lightning storm.


  Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.

  Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- Use caution when installing or modifying communication wiring.

## **CJE\*\* INSTALLATION BEST PRACTICES**

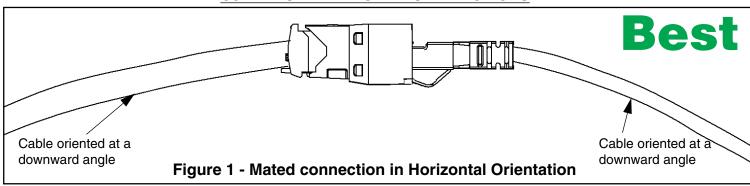

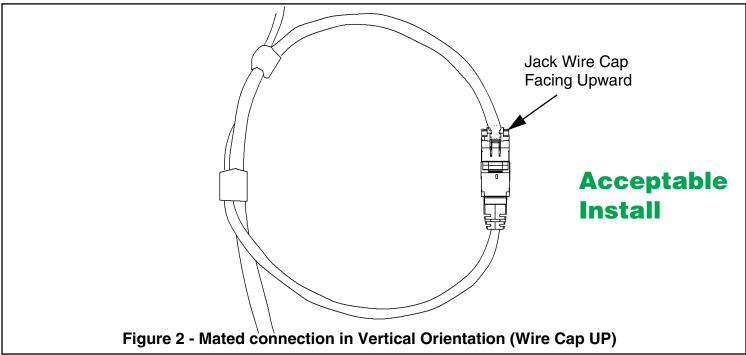

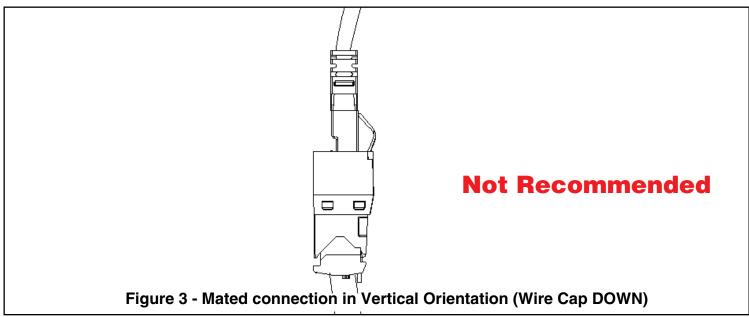

For Instructions in Local Languages and Technical Support: www.panduit.com/resources/install\_maintain.asp

www.panduit.com

E-mail: techsupport@panduit.com Phone: 866-405-6654