
ADJUSTABLE DEPTH WALL MOUNT RACK

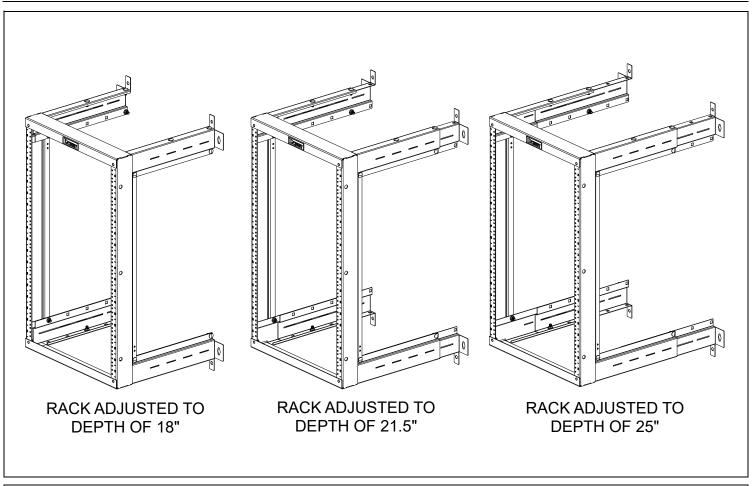

Part Number(s): AWMR9, AWMR12, AWMR18

© Panduit Corp. 2022 INSTALLATION INSTRUCTIONS V00029WG



Required hardware - included

(16) M8-16mm CARRIAGE BOLT



(20) M8 SERRATED FLANGE NUT



Required tools - not included


RATCHET W/ M13 SOCKET




For Technical Support: www.panduit.com


RACK DEPTH ADJUSTMENT


Rack depth is adjustable in 3 1/2" increments, from 18" to 25" depth. Secure the bridge to the front bracket with M8 carriage bolt & M8 serrated flange hex nuts. **Completely tighten all nuts to 14 ft-lbs (19.0 N-m)**

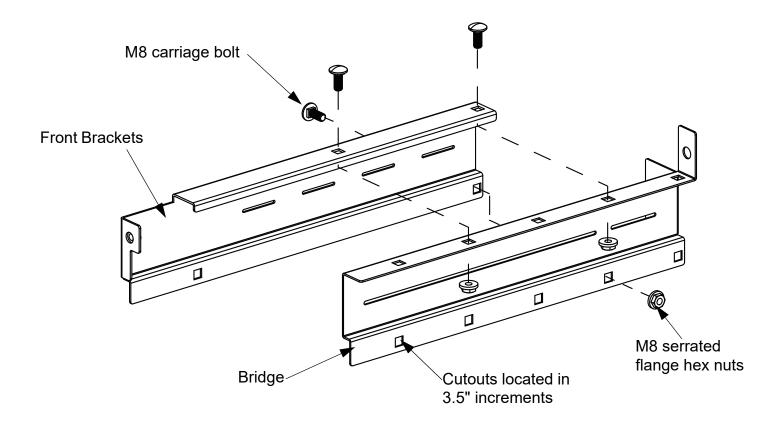


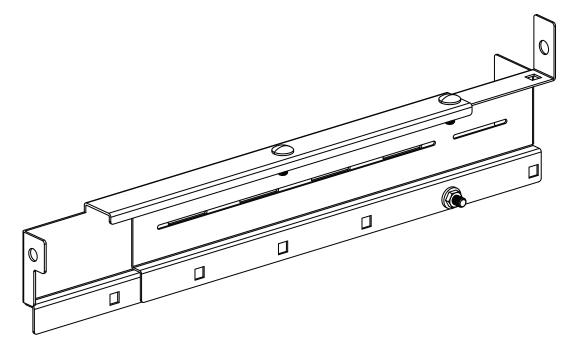


FRAME ASSEMBLY

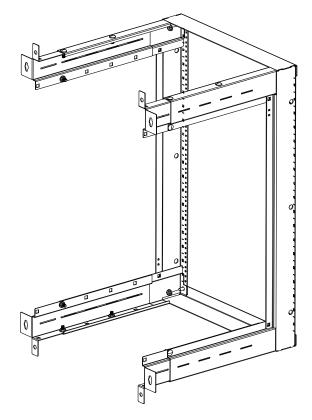

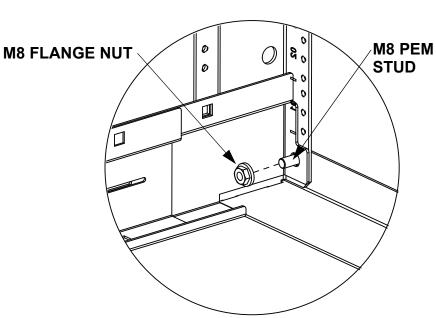

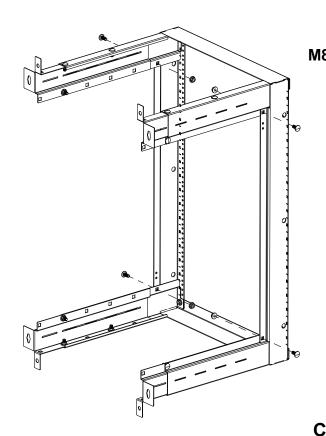


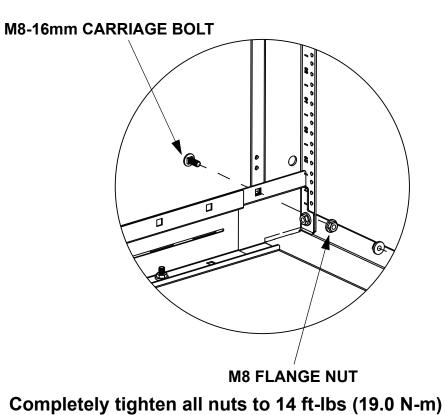

For Technical Support: www.panduit.com

GROUNDING


Note: Grounding jumpers sold separately.

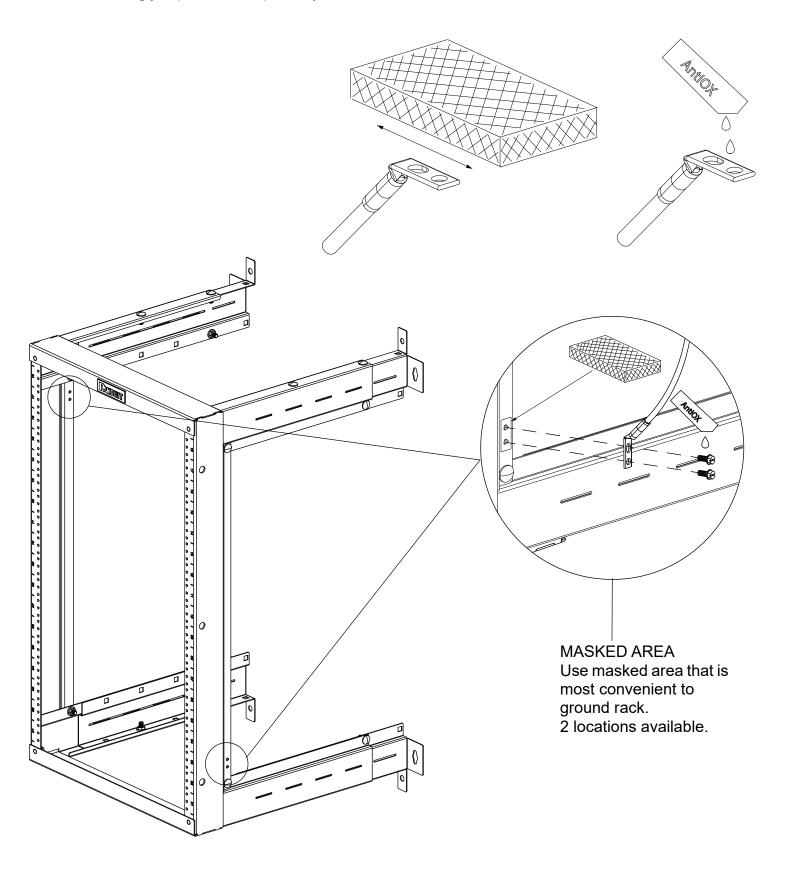


Securing Rack to Wall

Note Adjustable Wall-mount rack must be secured using all available mounting holes to 3/4" plywood backboard secured to wall framing to assure load bearing capability. Lag screws are intended for mounting to wooden surface; for masonry surface, the installer must provide appropriate hardware.

The mounting holes are spaced 21.9" (556.26mm) as reflected in the diagram. Warning: Do not attempt to mount to wall, when equipment is already mounted inside the rack. Make sure the wall surface can hold the weight of the rack-mounted equipment.

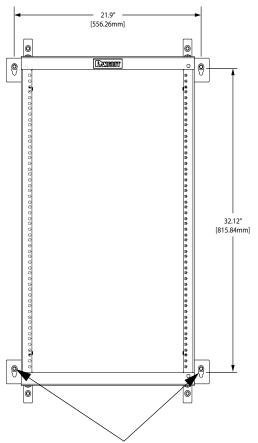

Keyhole mounting slots (.600"/ 15.24mm) allows for rapid, single-person instalation by pre-installing lag screws.

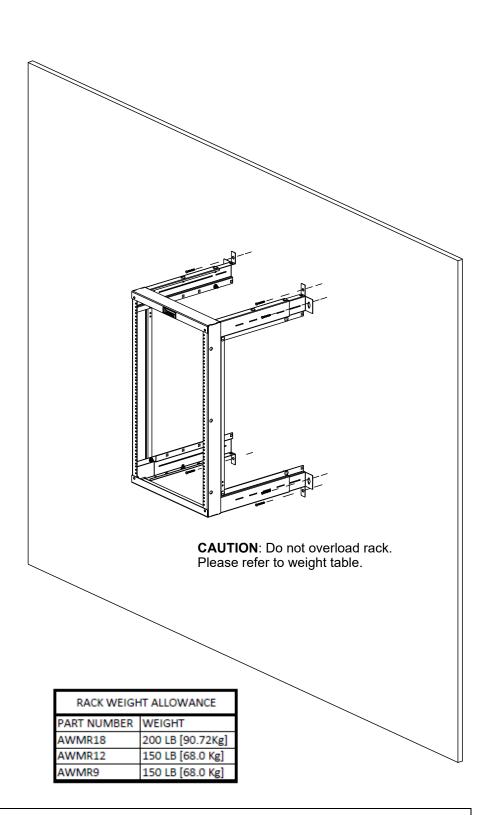

For Instructions in Local Languages and Technical Support:

www.panduit.com



E-mail: techsupport@panduit.com Phone: 866-405-6654