

smartzone[™] UPS

User Manual V3.2

Uninterruptible Power Supply

1-3kVA (SINGLE PHASE)

Table of Contents

| | |
|--|----|
| Section 1 – System Overview | 3 |
| Key Features | 4 |
| Basic Operations | 5 |
| Double Conversion Overview | 5 |
| Line Interactive Overview | 6 |
| UPS Modes | 6 |
| Normal Mode | 6 |
| ECO Mode | 8 |
| Convert Frequency (CF) Mode | 9 |
| Generator Mode | 10 |
| UPS States | 12 |
| Normal State | 12 |
| ECO State | 12 |
| CF State | 12 |
| Gen State | 12 |
| AVR State | 13 |
| Battery State | 13 |
| Bypass State | 13 |
| Fault State | 13 |
| Battery Test State | 14 |
| UPS Physical Features and Accessories | 15 |
| Physical Features | 15 |
| UPS Front Panel | 15 |
| UPS Rear Panel | 16 |
| UPS Accessories | 22 |
| External Battery Pack (UVP024, UVP036, UVP048, UVP072) | 22 |
| Battery Cartridge | 23 |
| Network Card (UNCP01) | 24 |
| Relay Card (URC005) | 26 |
| Section 2 – Front Panel Display (FPD) | 28 |
| Status LEDs | 28 |

| | |
|--|----|
| Function Buttons | 29 |
| Turning ON/OFF the UPS | 30 |
| Starting the UPS on Main Input Power:..... | 30 |
| Cold Starting the UPS (Start the UPS on Battery):..... | 30 |
| Properly Shutting Down the UPS:..... | 31 |
| Color Display Operation..... | 31 |
| Monitor Operation | 31 |
| Setup Operation..... | 37 |
| Double Conversion VRLA UPS | 38 |
| Double Conversion Li UPS | 42 |
| Line Interactive Li UPS..... | 46 |
| Appendix A: 1 to 3kVA Fault Codes & Alert LEDs | 49 |
| Appendix B: Troubleshooting | 52 |
| Appendix C: State Transitions Based on External Events | 54 |
| Appendix D: Maintenance and Storage | 56 |
| Maintenance | 56 |
| Storage/Transportation | 56 |

Section 1 – System Overview

The Panduit SmartZone™ UPS units in this manual are line interactive or true on-line double conversion systems that deliver highly efficient and reliable power protection for your computer, IT, communications, and automatic equipment. These units have high electrical performance, intelligent monitoring, and network functionality to properly monitor and condition the world's power anomalies (power failures, power sags, power surges, under-voltages, over-voltages, electrical line noises, frequency variations, switching transients, and harmonic distortion).

Each UPS comes equipped with a color display and has multiple options for interfacing with the unit. The UPS is standardly equipped with a network card for remote network monitoring, control, and configuration. The UPS may be optionally ordered without a network card. Additionally, a Network Card or a Dry Contact Relay Card may be ordered as accessories.

These UPS units support Li (Lithium-Ion) or VRLA (Valve Regulated Lead-acid) batteries as the backup power storage system. The UPS topology of these units is either on-line double conversion with a built-in economy (ECO) mode or line interactive.

The on-line double conversion topology supplies the best power conditioning by recreating a true sinewave on the UPS outputs. The on-line double conversion topology converts the input AC power to a DC power and then regenerates the AC power on the UPS outputs. This double conversion allows the UPS to eliminate the inconsistencies in the input power provided by the utility company. The UPS may be optionally switched to ECO mode to increase the unit's efficiency when the input power is known to be stable (requires minimal conditioning).

The line interactive architecture supplies good power conditioning by monitoring the input and adjusting the UPS outputs. Like the double conversion topology, line interactive topology allows the UPS to eliminate most inconsistencies in the input power, provided by the utility company. The line interactive topology compensates for power failures, power sags, power surges, under-voltages, over-voltages, electrical line noises, switching transients, and harmonic distortion on the input AC power. However, the line interactive topology does not compensate for frequency variations. The line interactive UPS provides good power conditioning with an increased efficiency.

Key Features

- **Integrated data center solution** – All VRLA UPS units integrate with multiple External Battery Packs (EBP), offering an excellent choice for data center deployment.
- **Easy to Maintain** – All UPS units support hot swappable battery cartridges. All UPS double conversion units support options to switch to a bypass state.
- **Long Lasting** – UPS units are available with Lithium-Ion battery cartridges for extended battery life.
- **Reliable** - All UPS units are controlled by Digital Signal Processors (DSPs) which increases reliability, performance, self-protection, and self-diagnostics.
- **User Friendly Color Display with Color Status LEDs** - allow the user to easily set operational parameters and get UPS status.
- **Intelligent Monitoring Function** – UPS units are standardly equipped with a Network card for remotely controlling and monitoring the UPS via a user-friendly Web Interface.
- **Load Shedding** – All UPS units with outlets have one or two controllable outlet groups may be used to shed non-critical loads while on battery backup. All UPS units with a network card have the capability to gracefully shutdown smart loads.
- **EPO Function** - All UPS units are equipped with an Emergency Power Off (EPO) interface to turn OFF the UPS output via a remote dry contact switch.

Basic Operations

The basic operations of a double conversion UPS are explained through the high-level generic block diagram in Figure 1. The generic diagram is only used for a simple high-level explanation of the UPS working modes and operating states. This block diagram is not the actual block diagram of the UPS units.

The basic operations of a line Interactive UPS are explained through the high-level generic block diagram in Figure 2. The generic diagram is only used for simple high-level explanation of the UPS working modes and operating states. This block diagram is not the actual block diagram of the UPS units.

Double Conversion Overview

The UPS input is connected to an AC power source via an input plug. The output is connected to loads via outlets on the UPS. The load may be powered from the input source (directly or through the rectifier/inverter) or the battery (through the inverter). The UPS power-switching circuitry may be isolated from the power chain while continuing to power the load (ECO Mode or bypass state). The following UPS Modes and UPS States sections use the simplified block diagram to help explain the modes and states of the UPS.

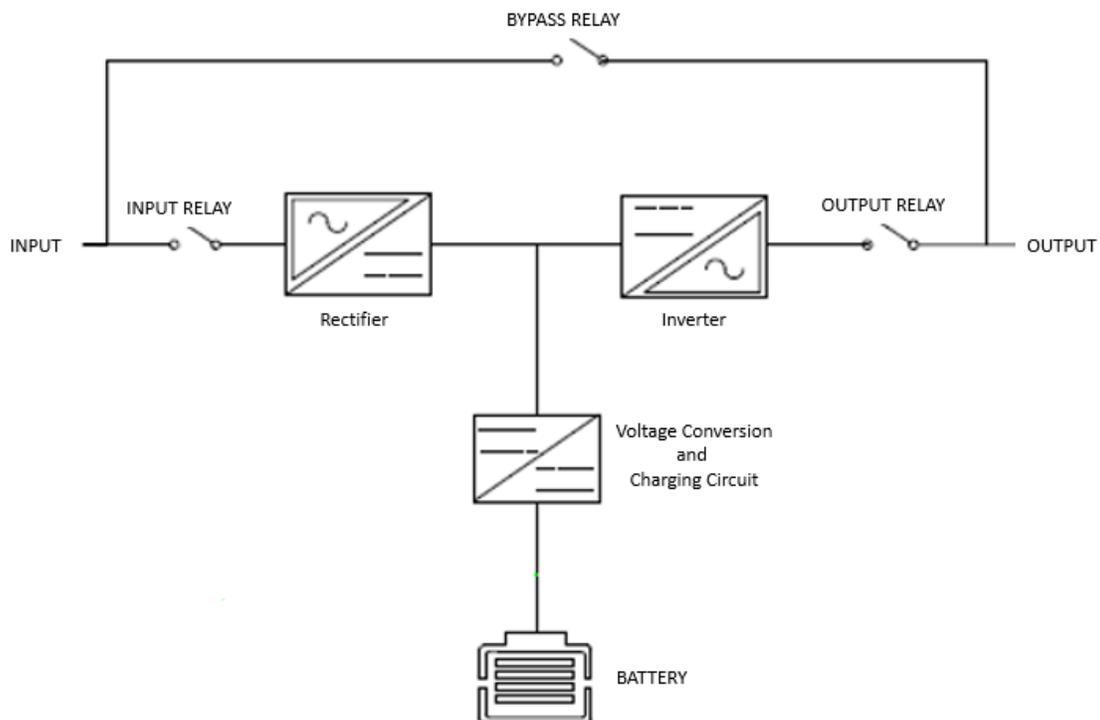


Figure 1: High-Level Generic Double Conversion UPS Block Diagram

Line Interactive Overview

The UPS input is connected to an AC power source via an input plug. The output is connected to loads via outlets on the UPS. The load may be powered from the input source (through the Automatic Voltage Regulation (AVR) – boost/buck circuitry) or the battery (through the inverter). The following block diagram explains the UPS Modes and UPS States described in the sections below.

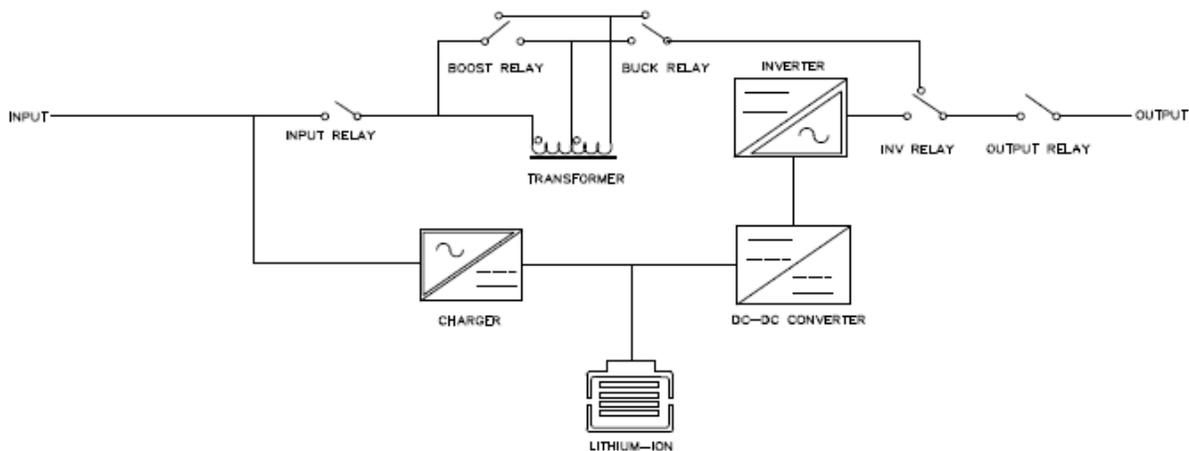


Figure 2: High-Level Generic Line Interactive UPS Block Diagram

UPS Modes

The double conversion UPS may be configured into four different working modes. The line interactive UPS may be configured into two different working modes. This section explains these settable working modes. The UPS working mode is manually configured into the UPS at setup time. The selected mode will become the Default state of the UPS until the working mode is manually changed.

Normal Mode

Double Conversion

Normal mode is the default working mode of the double conversion UPS units. When the UPS is operating in Normal mode, it provides a stable pure sinusoidal AC power output and charges or maintains the charge on the battery. In Normal mode, the input and output relays are closed, and the bypass relay is open. The rectifier/charger derives power from the AC Input and supplies DC power to the inverter while simultaneously charging or maintaining the charge on the battery. The inverter inverts the DC power to AC power and supplies it to the load with a stable pure sinusoidal AC waveform.

If the input power is lost or has anomalies outside of the set ranges while the UPS is operating in Normal mode:

- The batteries will stop charging (input relay will open)
- The bypass relay will remain opened
- The output relay will remain closed
- The battery will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load

The UPS is now in the Battery state and will indicate an alarm; the UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected).

If an internal or an external output power event occurs while operating in Normal mode:

- The input relay may open (depending on the internal event)
- The output relay will open
- The bypass relay will close (assuming the input is not outside of the input bypass range), continuing to provide minimally conditioned AC power to the load.

The UPS is now in the Bypass state and will indicate an alarm. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

Note: This unit does have short-circuit protection but only when power is being provided to the load through the inverter. If the unit is in ECO mode or in the bypass state when a short-circuit occurs on the output of the UPS, the UPS unit may be damaged.

Line Interactive

Normal mode is the default working mode of the line interactive UPS units. When the UPS is operating in Normal mode it provides a stable AC power output. The battery is always being charged or maintained if there is input power within range. In Normal mode, the input and output relays are closed, and the INV relay is switched away from the inverter. In this state the input power is filtered and provided directly to the load. If the input voltage is surging or sagging, the UPS will transition to the AVR state. In the AVR state, if the input voltage needs to be increased, the boost and buck relays will be in the boost position (up). If the input voltage needs to be decreased, the boost and buck relays will be in the buck position (down).

If the input power is lost or has anomalies are outside of the set ranges while the UPS is

operating in Normal mode, the INV relay will switch to the inverter and the battery will continue to provide uninterrupted AC power to the load through the inverter. The UPS is now in the Battery state; the UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected).

If an internal or an external output event occurs while operating in Normal mode, the input relay remains closed, the INV relay may switch to the inverter (depending on the internal or external event), and the output relay may open (depending on the internal or external event). Power may be lost to the load. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

Note: This unit does have short-circuit protection but only when power is being provided to the load through the inverter (from the battery). If the unit is in Normal mode when a short-circuit occurs on the output of the UPS, the UPS unit may be damaged.

ECO Mode

This mode is only supported on the on-line double conversion UPS units. When the UPS is in Normal mode and the power requirements for the load are not critical and the input source is stable (no power anomalies), the UPS may be set to Energy Savings (ECO) mode to increase the efficiency of the power supplied through the UPS. In ECO mode, all voltage increases and decreases will be passed along to the load.

Additionally, any frequency variations on the input will get passed on to the load. When the UPS is manually configured for ECO mode, the output relay opens, and the bypass relay closes. The input relay remains closed, continuing to keep the backup batteries charged. When the UPS is in ECO mode, the source power is minimally conditioned.

If the input power is lost while the UPS is operating in ECO mode:

- The batteries will stop charging (input relay will open)
- The bypass relay will open
- The output relay will close
- The battery will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load.

The UPS is now in the Battery State. When the UPS is operating in ECO mode, if the input power has any anomaly (power sags, power surges, under-voltages, over-voltages, electrical line noises, frequency variations, switching transients, and harmonic distortion) that are outside of the bypass set ranges:

- The input relay will remain closed (continuing to charge the battery – assuming the anomaly is still within the operating range of the UPS)
- The bypass relay will open
- The output relay will close
- The rectifier will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load.

The UPS is now in the Normal state. If the anomaly is outside of the UPS operating range, then the UPS will transition to the Battery state. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

If an internal or an external output event occurs while operating in ECO mode, the bypass relays will open, the input relay will open and the output will shut down. AC power to the load will be lost.

Note: This unit does have short-circuit protection but only when power is being provided to the load through the inverter. If the unit is in ECO mode or in the bypass state when a short-circuit occurs on the output of the UPS, the UPS unit may be damaged.

Convert Frequency (CF) Mode

This mode is only supported on the on-line double conversion UPS units. The UPS may be set to CF mode to increase the allowable input frequency range of the UPS while maintaining the desired output frequency. Setting the UPS to CF mode requires the UPS unit to be derated. The 1-3kVA UPS units in CF mode are derated to 80% of the maximum output but will maintain a 50Hz output frequency with an input frequency from 46Hz to 54Hz, or a 60Hz output frequency with an input frequency from 56Hz to 64Hz. When CF mode is set, the Bypass state is automatically disabled (the unit cannot switch to the Bypass state under any conditions, and frequency conversion is not supported through the bypass path).

If the input power is lost or has any anomalies outside of the set ranges while the UPS is operating in CF mode:

- The batteries may stop charging (input relay will open)
- The bypass relay will remain opened
- The output relay will remain closed
- The battery will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load.

The UPS is now in the Battery state; the UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected). Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

If an internal or an external output event occurs while operating in CF mode, the output relay will open and the output will shut down, AC power to the load will be lost.

Generator Mode

Double Conversion

The UPS may be set to Generator mode to enable the UPS to have a wider input frequency range (40Hz to 70Hz). Setting the double conversion UPS to Generator mode requires the UPS unit to be derated. The 1-3kVA double conversion UPS units in Generator mode are derated to 75% of the maximum output but will maintain a 50Hz or 60Hz output frequency over the full input frequency range.

Note: The Generator mode is not saved on the 1-3kVA UPS units; when the 1-3kVA UPS unit is powered OFF and restarted, the units will restart in Normal mode.

If the input power is lost or has input anomalies outside of the operating range of the UPS while the UPS is operating in Generator mode:

- The batteries will stop charging (input relay will open)
- The bypass relay will remain opened
- The output relay will remain closed and the battery will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load.

The UPS is now in the Battery state; the UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected).

If an internal or an external output event occurs while operating in Generator mode, the input and output relays open and the bypass relay closes (assuming the input is not outside of the input bypass range), continuing to provide unconditioned AC power to the load.

The UPS is now in the Bypass state with no frequency or voltage conditioning. Output frequency and voltage will equal input frequency and voltage. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on

input/output events.

Line Interactive

The UPS may be set to Generator mode to enable the UPS to have a wider input frequency range (40Hz to 70Hz). Setting the line interactive UPS to Generator mode will not require the UPS unit to be derated. The 1-3kVA line interactive UPS units does not perform frequency conversion. The output frequency will be the same as the input frequency.

Note: The Generator mode is not saved on the 1-3kVA UPS units; when the 1-3kVA UPS unit is powered OFF and restarted, the units will restart in Normal mode.

If the input power is lost or has input anomalies outside of the operating range of the UPS while the UPS is operating in Generator mode:

- The input relay will open
- The INV relay will switch to inverter
- The output relay will remain closed
- The battery will start providing the DC power to the DC to AC inverter, continuing to provide uninterrupted AC power to the load.

The UPS is now in the Battery state. The UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected).

If an internal or an external output event occurs while operating in Generator mode, the input relay may open (depending on the internal fault) and the INV relay will switch to inverter (depending on the external fault), continuing to provide conditioned AC power to the load.

The UPS is now in the Battery state. The UPS will continue to provide power to the load for a limited time (runtime of the battery backup system connected to the UPS for the percentage of load connected). If the external fault is an overload, the output relay will open and power to the load will be lost. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

Note: This unit does have short-circuit protection but only when power is being provided to the load through the inverter. If the unit is in Generator mode or in the bypass state when a short-circuit occurs on the output of the UPS, the UPS unit may be damaged.

UPS States

The UPS automatically transitions to different states based on internal or external events; the user may also force the UPS into some states through one of the user interfaces. There are eight different states that the UPS may be in. Refer to **Appendix C: State Transitions Based on External Events** for state transitions based on input/output events.

Normal State

The UPS will go into the normal state when the UPS is set to Normal Mode at setup time. This is the default mode and state that the UPS will power up in on new units from the factory. If the UPS is set for Normal Mode, the Normal state is the default state where the UPS will return to after the internal or external event has been cleared or the forced state has expired.

If an internal or external event occurs while operating in the normal state, the UPS will automatically transition to battery, bypass, fault, or battery test state depending on the event.

ECO State

The UPS will go into the ECO state when the UPS is set to ECO Mode at setup time. If the UPS is set for ECO Mode, the ECO state is the default state where the UPS will return to after the internal or external event has been cleared or the forced state has expired.

If an internal or external event occurs while operating in the ECO state, the UPS will automatically transition to battery, fault, or battery test state depending on the event.

CF State

The UPS will go into CF state when the UPS is set to CF Mode at setup time. If the UPS is set for CF Mode, the CF state is the default state where the UPS will return to after the internal or external event has been cleared or the forced state has expired.

If an internal or external event occurs while operating in the CF state, the UPS will automatically transition to battery, bypass, fault, or battery test state depending on the event.

Gen State

The UPS will go into Gen state when the UPS is set to Generator Mode at setup time. If the UPS is set for Generator Mode, the Gen state is where the UPS will return to after the internal or external event has been cleared or the forced state has expired.

If an internal or external event occurs while operating in the Gen state, the UPS will automatically transition to battery, bypass, fault, or battery test state depending on the event.

AVR State

This state is only supported on the line interactive UPS units. The UPS automatically transitions to the Automatic Voltage Regulation (AVR) state when the input voltage goes outside of the set input voltage range (refer to **Appendix C: State Transitions Based on External Events**). The UPS will automatically return to the default state when the input source recovers.

If an internal or external output event occurs while operating in the AVR state, the UPS will transition to the Battery state and continue to provide power to the load for a limited time (until the battery hits its EOD).

Battery State

The UPS automatically transitions to the battery state with no power interruption to the load when input power is out of the operating range or power is lost. The UPS will automatically return to the default state when the input source recovers.

If an internal or external output event occurs while operating in the battery state, the output will shut down. AC power to the load will be lost.

Bypass State

The UPS may automatically transition to the bypass state with no power interruption when an internal or an external output event occurs (depending on the event). The UPS may also be set to the bypass state by turning the inverter OFF, but the input voltage and frequency must be within the specified upper and lower limits of the bypass as specified during the UPS setup. For 1-3kVA UPS units, press the ON/OFF button on the Front Panel Display to turn off the inverter and force the UPS into the bypass state. While the UPS is in the bypass state, the source power is not fully conditioned as in the Normal, CF, or Gen state; most variations in frequency and voltage will get passed on to the load.

If another internal or an external output event occurs while operating in the bypass state, the UPS will transition to the Fault state and the output will shut down. AC power to the load will be lost.

Fault State

The UPS automatically transitions into the fault state when the UPS is unable to provide power to the load. The input, output, and bypass relays will all open. If the fault clears,

the UPS should transition back to the Default state (depending on the fault that is cleared).

Battery Test State

The UPS may be manually or automatically put into the battery test state, but the UPS will automatically transition back to the default state when the test is complete. The battery test will automatically run when the UPS is powered ON and periodically while the unit is operating. The battery test may also be manually executed at any time. The frequency and duration of the battery test may have an impact on the battery life. All battery tests are preset for a duration of 10 seconds. The user can select the frequency of the test. The battery test may be automated through the network card on all 1-3kVA UPS units.

The 1-3kVA UPS does not go into the battery state when the battery test is run. The UPS stays in the default state for powering the load, but the battery charger is turned OFF and the battery discharges for 10 seconds through an internal load. If the battery is damaged or disconnected, the UPS presents a No Battery Alarm, which means the user should replace the battery or check the battery connection. The UPS will automatically turn the battery charge back ON when the battery test completes.

UPS Physical Features and Accessories

The following sections provide an overview of the human and electrical interfaces on the UPS unit. All UPS units are rack mountable with a display on the front side of the unit.

Physical Features

UPS Front Panel

The UPS Front Panel for all 1-3kVA Models are the same. Air flow vents occupy $\frac{3}{4}$ of the front panel and a display module occupies the left $\frac{1}{4}$ of the front panel. The front panel display module contains four status LEDs, a 2.8-inch segmented color display and four function buttons.

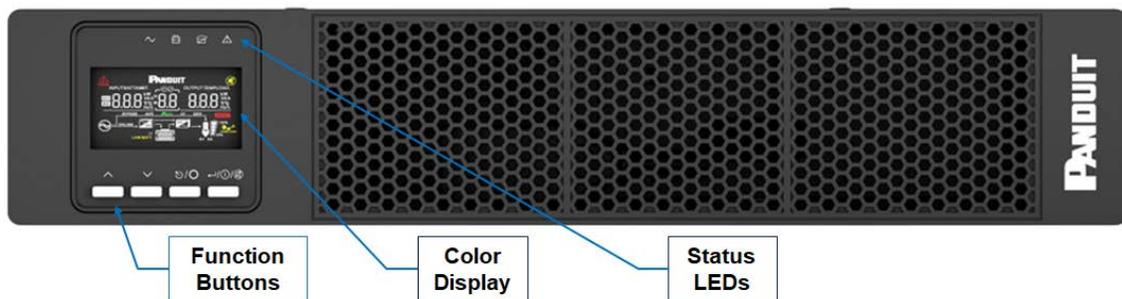


Figure 3: 1-3kVA Front Panel

Air Flow Vents

The air flow vents are critical to the operation of the UPS unit. These vents must remain clean and clear of all objects that may restrict the air flow through the UPS unit.

Status LEDs

Each unit has four Status LEDs, Normal LED (green), Battery LED (yellow), Bypass LED (blue), and Alert LED (red/yellow). These LEDs provide a quick high-level view of the unit's operating conditions. Refer to **UPS Front Panel** section for further details.

Color Display

The unit has a 2.8-inch segment color display. This display is used for monitoring, control, and configuration. The display may be manually rotated to the orientation of the unit. Remove the UPS faceplate, rotate the screen $\frac{1}{4}$ turn and then reinstall the UPS faceplate.

Function Buttons

The UPS has four function buttons, the UP button, the DOWN button, the CANCEL/OFF button, and the ENTER/ON/MUTE button. These buttons are used to navigate the Monitor and the Setup screens, used to change settings, used to turn ON/OFF the UPS

and used to mute/unmute the audio alerts.

UPS Rear Panel

The rear panel varies based on the model of the UPS unit. Refer to the UPS Physical Feature call out table and the Model specific figures in this section for details. The rear panels of models may change, refer to the Customer Drawing for the latest view of the rear panel of a specific UPS unit.

1 to 3kVA 1-Phase UPS Physical Feature Call Out Table:

| | | |
|--------------------------|-------------------------------|-----------------------------|
| 1. Input Power Cord | 5. Intelligent Slot | 9. USB Communications |
| 2. Input Circuit Breaker | 6. Net Surge Protection Ports | 10. Chassis Ground Point |
| 3. Output Receptacles | 7. EPO Signal Port | 11. Output Circuit Breakers |
| 4. EBP Connection | 8. RS232 Communication | |

Input Power Cord (INPUT)

Each UPS Model may have unique power input connector, labeled **INPUT** on the back of the unit. Refer to the corresponding Product Specification Sheet for detailed definition.

Input Circuit Breaker (BREAKER)

All UPS units have an input circuit breaker to protect from overload conditions, labeled **BREAKER** with a line to the input interface on the back of the unit. Refer to the corresponding Customer Documentation for details.

Output Receptacles

Each UPS Model has unique groups of power output connectors, labeled **GROUP 1** and **GROUP 2**. The figures in this section show output receptacle types per SKU. Refer to the corresponding Product Specification Sheet for latest detailed definition.

EBP Connection (+ xxVDC -)

Each VRLA UPS unit has an External Battery Pack (EBP) power connection, labeled with **+ 24VDC -**, **+ 36VDC -**, **+ 48VDC -**, or **+ 72VDC -** on the back of the unit. These UPS Model have been calibrated to a specific EBP and EBP Operating Voltage. These EBP units are not interchangeable between UPS units with different KVAs. **Note:** The Li UPS units do not support External Battery Pack (EBP) units.

Intelligent Slot (INTELLIGENT SLOT)

Each UPS unit is standardly equipped with a Network Management Card installed in the intelligent slot, labeled **INTELLIGENT SLOT** on the back of the unit. Alternatively, the UPS may be ordered with an empty Intelligent Slot, and later updated with a UPS

Network Management Card or a UPS Relay Card.

Network Surge Protection Ports (RJ45 NET SURGE PROTECTION)

Each UPS unit comes equipped with an internal Network/Fax/Modem Surge protection module, labeled **RJ45 NET SURGE PROTECTION** on the back of the unit. The module includes RJ45 pass-through ports, either port may be used for input or output.

EPO Signal Port (EPO)

Each UPS unit comes equipped with an Emergency Power Off Signal Port, labeled **EPO** on the back of the unit. The UPS comes equipped with a 2-pin plug wired to provide a short that results in normal UPS operation.

CAUTION!



IF THE PLUG OR SHORTING WIRE IS REMOVED, THE UPS SYSTEM WILL BE COMMANDED TO SHUT DOWN. IN TYPICAL APPLICATIONS, THE PLUG WILL BE WIRED TO A REMOTE NORMALLY CLOSED DRY CONTACT TO PROVIDE A SHORT FOR NORMAL OPERATION. THE REMOTE DRY CONTACT COULD BE OPENED TO COMMAND THE UPS TO SHUT DOWN IN AN EMERGENCY.

DB9 Coms Port (RS232)

All units have a DB9 equipped with RS232 serial communications port, labeled **RS232** on the back of the unit. This serial port is reserved for UPS core Firmware Update.

USB Coms Port (USB)

All units have a USB serial communications port, labeled **USB** on the back of the unit. This communication port is reserved for “Future Use”.

Chassis Ground Connection Point (⊕)

All units have a chassis ground connection, labeled with a ground symbol on the back of the unit. This is used to ground the UPS and EBP chassis to the rack/cabinet. For safety and proper grounding procedures, this grounding connection point must be connected to the rack/cabinet ground. Refer to the UPS Installation Manual for proper connections to this ground.

Output Circuit Breakers (BREAKER)

Some UPS units have output circuit breakers to protect from load overload conditions, labeled with **BREAKER** and a line to the outlet group it protects on the back of the unit. Refer to the corresponding Customer Documentation for details.

1kVA North America Model Rear Panels (U01x11V / U01x13V / U01x11L)

The 1kVA North American (NA) UPS units have a permanently connected input power cord with a NEMA 5-15 plug. These units have two groups of outlets. Group 1 (4x 5-15R) outlets are the main outlets that are not switchable. These outlets should contain the critical loads. Group 2 (2x 5-15R) are switchable outlets. These outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

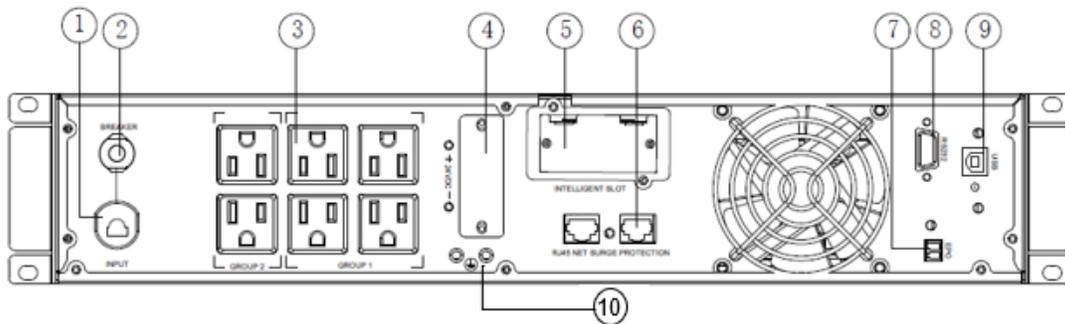


Figure 4: 1kVA VRLA NA Rear Panel View (U01x11V & U01x13V)

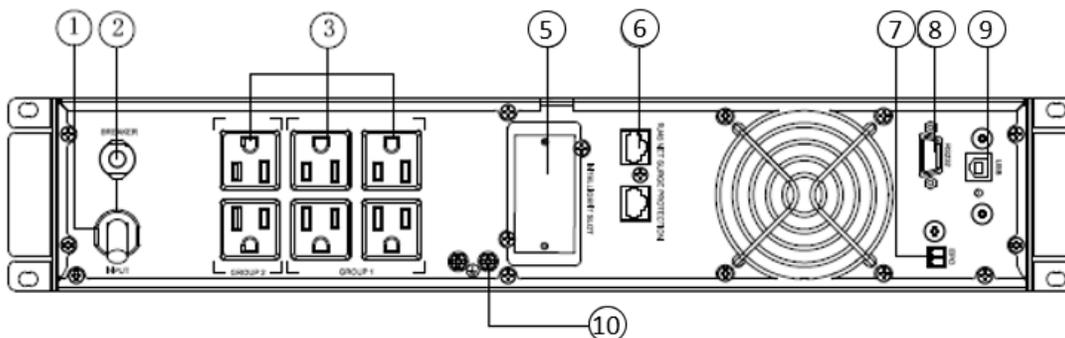


Figure 5: 1kVA Li NA Rear Panel View (U01x11L)

2kVA and 1.5kVA North America Model Rear Panels (U02x11V / U02x11L)

The 2kVA VRLA unit has a permanently connected input power cord with a NEMA 5-20P plug. The 1.5kVA Li unit has a permanently connected input power cord with a

NEMA 5-15P plug. These units have two groups of outlets. For the 2kVA VRLA UPS unit Group 1 (4x 5-20R) outlets are the main outlets that are not switchable, and Group 2 (2x 5-20R) are switchable outlets. For the 1.5kVA Li UPS unit Group 1 (4x 5-15R) outlets are the main outlets that are not switchable, and Group 2 (2x 5-15R) are switchable outlets. Group 1 outlets should contain the critical loads and Group 2 outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

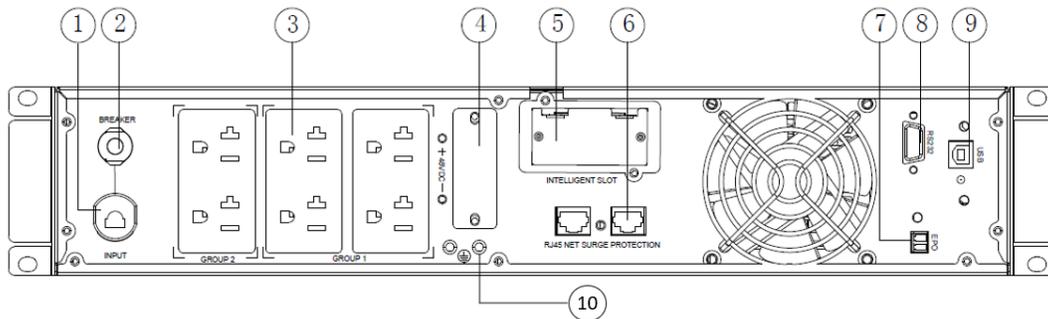


Figure 6: 2kVA VRLA NA Rear Panel View (U02x11V)

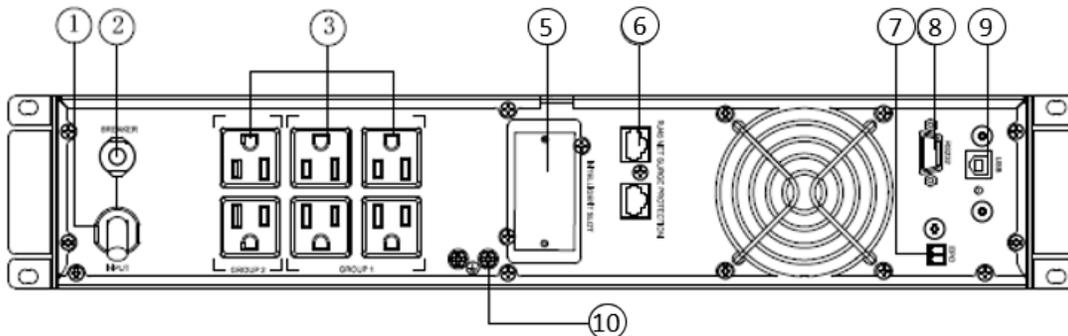


Figure 7: 1.5kVA Li NA Rear Panel View (U02x11L)

[3kVA North America Model Rear Panels \(U03x11V / U03x11L\)](#)

The 3kVA NA UPS units have a permanently connected input power cord with a NEMA L5-30 plug. These units have two groups of outlets. Group 1 (2x 5-20R and 1x L5-30R) outlets are the main outlets that are not switchable. These outlets should contain the critical loads. Group 2 (2x 5-20R) outlets are switchable. These outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

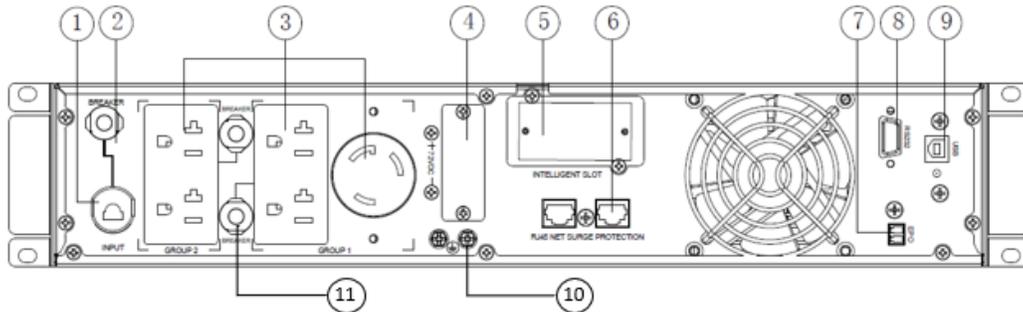


Figure 8: 3kVA VRLA NA Rear Panel View (U03x11V)

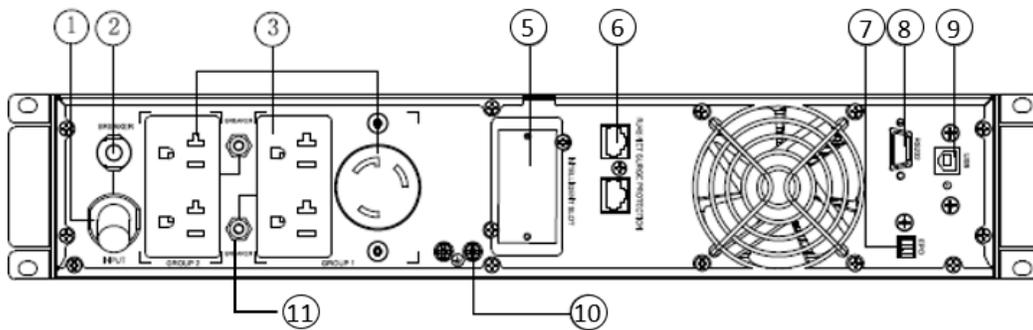


Figure 9: 3kVA Li NA Rear Panel View (U03x11L)

[1kVA Europe Models Rear Panel \(U01x12V / U01x12L\)](#)

The 1kVA European (EU) UPS units ship with two removable power input cords, a Schuko CEE 7/EU1-16P and a BS1363A input plug with a C13 connector on the other end. Either one of these input cords may be plugged into the input C14 plug on the back of the UPS unit. This unit has two groups of outlets. Group 1 (4x C13) is the main non-switchable output. These outlets should contain the critical loads. Group 2 (4x C13) are switchable outlets. These outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

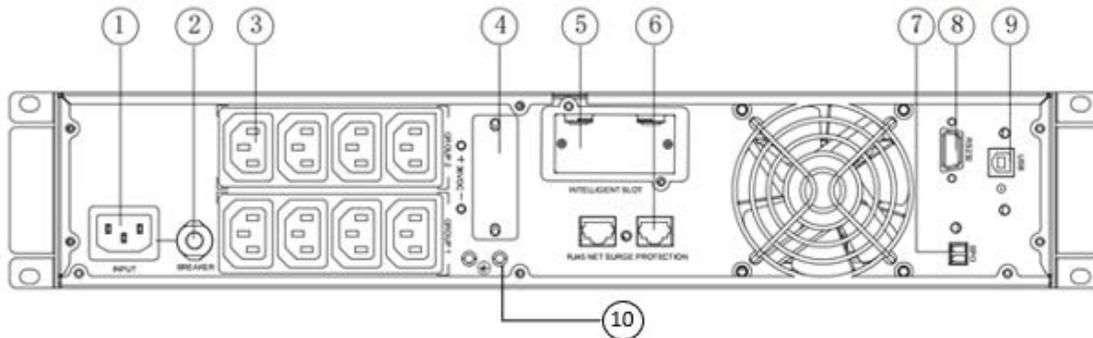


Figure 10: 1kVA VLR/Li EU Rear Panel View

[2kVA Europe Models Rear Panel \(U02x12V / U02x12L\)](#)

The 2kVA EU UPS units ship with two removable power input cords, one with a Schuko CEE 7/EU1-16P and the other with a BS1363A input plug and a C19 connector on the other end. Either one of these input cords may be plugged into the input C20 plug on the back of the UPS unit. This unit has two groups of outlets. Group 1 (4x C13) is the main non-switchable output. These outlets should contain the critical loads. Group 2 (4x C13) are switchable outlets. These outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

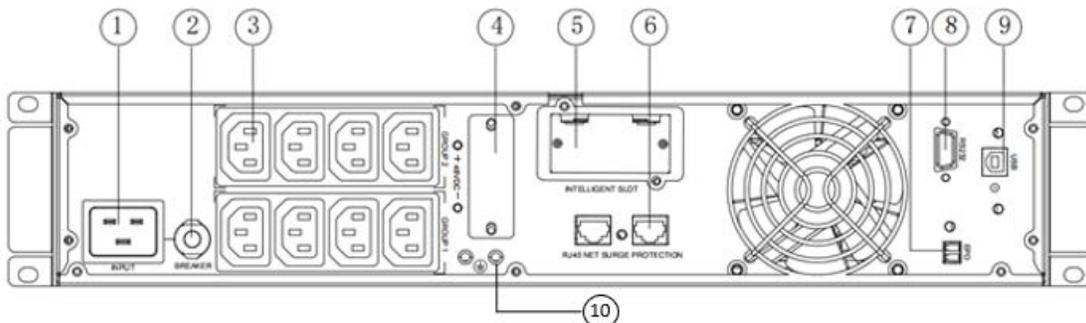


Figure 11: 2kVA VRLA/Li EU Rear Panel View

[3kVA Europe Models Rear Panel \(U03x12V / U03x12L\)](#)

The 3kVA EU UPS unit ships with two removable power input cords, one with a Schuko CEE 7/EU1-16P and the other with a BS1363A input plug and a C19 connector on the other end. Either one of these input cords may be plugged into the input C20 plug on the back of the UPS unit. This unit has two groups of outputs. Group 1 (4 xC13 and 1x C19) is the main non-switchable output. These outlets should contain the critical loads. Group 2 (4x C13) are switchable outlets. These outlets could contain the non-critical loads. When the UPS is operating in the battery state, Group 2 outlets may be programmed to turn off earlier to conserve battery capacity for the Group 1 outlets.

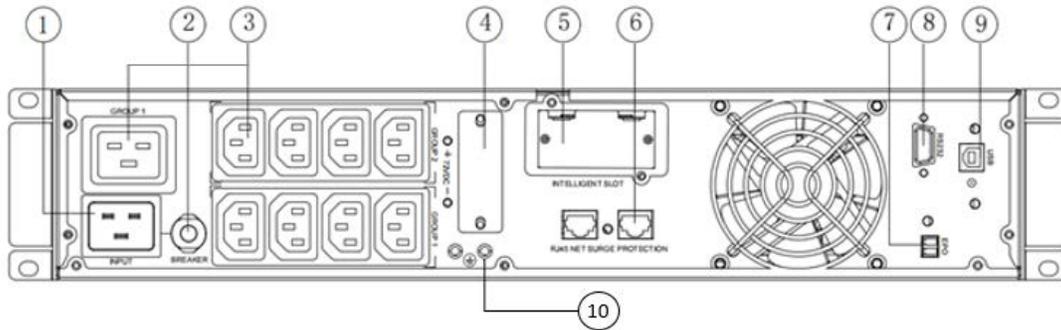


Figure 12: 3kVA VRLA/Li EU Rear Panel View

UPS Accessories

External Battery Pack (UVP024, UVP036, UVP048, UVP072)

Additional External Battery Packs (EBPs) may be connected to the UPS to extend the runtime of the UPS when operating in the battery state. The single-phase 1-3kVA VRLA UPS units support up to 4 EBPs. EBPs are not supported on the 1-3kVA Li UPS units.

The single-phase 1-3kVA UPS units support a 24Vdc, 36Vdc, 48Vdc, or 72Vdc battery pack depending on the UPS part number the EBP connects to. Each battery pack contains two battery cartridges connected in parallel; therefore, adding one EBP to the UPS will increase the runtime by at least 3 times. Each battery cartridge holds 2, 3, 4, or 6 12Vdc batteries connected in series depending on the battery cartridge voltage. A total of three wires are connected to the UPS unit from the EBP unit: The positive and negative ends of the battery pack and a ground.

When an additional EBP is connected to the UPS, the total battery amp hours must be appropriately set. All relevant settings may be performed through the WebUI or the Front Panel Display.

Warning!



Ensure that the polarities are correctly connected to the UPS unit and to subsequent EBP units. The battery cartridges cannot be mixed. Please use the Panduit recommended battery cartridges sets (P/N UVD024, UVD036, UVD048 or UVD072) for the appropriate EBP. Battery cartridges must be changed in sets. Do not mix old and new battery cartridges.

Battery Cartridge

Battery cartridges are the replaceable batteries for the UPS systems. The cartridges come in two different types (VRLA or Lithium-Ion), four different voltages (24V, 36V, 48V and 72V), different Amp hours (6Ah and 9Ah), and different sizes (depending on the voltage, Ah, and use). The appropriate battery cartridge or battery cartridge set must be used with the appropriate UPS or EBP unit.

UPS Battery Cartridge (UVCxxx)

The battery cartridge for the UPS units is a single cartridge that has the appropriate voltage and is sized for the specific UPS unit. Panduit recommends changing all the battery cartridges in a system at the same time. Do not mix new battery cartridges with old battery cartridges. If you need to replace the battery cartridge in the UPS, then you should also replace the battery cartridge sets for all EBP units connected to the UPS. The following table provides the battery cartridge part number that must be used with the specific UPS part number.

| UPS Unit SKU | Battery Cartridge SKU |
|---------------------------------------|-----------------------|
| U01N13V, U01S13V | UVC024 |
| U01N11V, U01N12V, U01S11V, U01S12V | UVC036 |
| U02N11V, U02N12V, U02S11V, U02S12V | UVC048 |
| U03N11V, U03N12V, U03S11V, U03S12V | UVC072 |
| U01N11L, U01N12L, U01S11L, U01S12L | ULC024 |
| U02N11L, U02S11L | ULC048 |
| U02N12L, U02S12L | ULC272 |
| U03N11L, U03N12L, U03S11L, U03S12L | ULC372 |

EBP Battery Cartridge Sets (UVDxxx)

The battery cartridge sets for the EBP units are a pair of cartridges that have the appropriate voltage and are sized for the specific EBP unit. Panduit recommends changing all the battery cartridges in a system at the same time. Do not mix new battery cartridges with old battery cartridges. That is why the battery cartridges for EBP units come as a set of two cartridges. The following table provides the battery cartridge set part numbers that must be used with the specific EBP part numbers.

Note: The Lithium-Ion UPS units do not support External Battery Pack (EBP) units.

| EBP Unit SKU | Battery Cartridge Set SKU |
|--------------|---------------------------|
| UVP024 | UVD024 |
| UVP036 | UVD036 |
| UVP048 | UVD048 |
| UVP072 | UVD072 |

Network Card (UNCP01)

The network card comes installed in the “N” type model UPS units (ex. U01N11V, U02N12V, U03N11V, U01N12L, U02N11L, U03N12L, etc.). Refer to the SmartZone UPS Network Management Card User Manual for monitoring and controlling the UPS through the Network card. The “S” type model UPS units (ex. U01S11V, U02S12V, U03S11V, U01S12L, U02S11L, U03S12L, etc.) may be field upgradable with a network card or a relay card.



CAUTION! DO NOT TOUCH THE NETWORK CARD WITHOUT PROPER ESD PROTECTION.

To install or remove the Network card, remove and retain the two #0 Phillips screws in the mounting holes labeled 7 in the figure below. If no network card is in the unit, the Intelligent Slot will have a blanking plate over the slot. Remove the blanking plate or card.

Note: There are card slide guides in the slot that the card must be slid into for proper installation of the card. After installing the card, secure with the two #0 Phillips screws that were removed.

Network Card Hardware Features



Figure 13: Network Card Front View

| | | |
|------------------------|-------------------------|-------------------|
| 1. Ethernet Connection | 4. Status LEDs | 7. Mounting holes |
| 2. Sensor Connection | 5. Reset button | |
| 3. MAC ID Label | 6. Micro USB Connection | |

Ethernet Connection

Connect the ethernet port on the Network card to an ethernet switch or router using a standard Cat 5E or Cat 6 ethernet patch cord.

Sensor Connection

Sensor connection supports Panduit environmental sensors and/or the sensor hub with the cables provided in the sensor installation kit.

MAC ID Label

The MAC ID of the wired ethernet port is listed on the label on the Network card’s faceplate. The MAC ID is unique to the specific Network card. The above figure shows an example of the MAC ID.

Status LEDs

The red status LED turns on automatically as soon as power is applied. After the Network card initializes, the firmware in the Network card takes control of these LEDs. In general, the green LED indicates power to the Network card and the red LED

indicates a fault or initialization of the Network card.

Reset Button

A pin hole is provided in the faceplate of the Network card to access the reset button using a paper clip or similar device. The reset behavior of the Network card is provided below and is dependent on the duration of the button press.

Reset the NMC when it does not respond: Hold the reset button for 2 seconds and release when green LED starts flashing. This will cause a reset of the NMC controller, but the entire configuration will be retained.

Reset all configurations to a factory default setting: Hold the reset button for at least 20 seconds and release when green LED starts flashing fast. This will cause a reset of the NMC controller and all configurations to be erased, including the usernames and passwords.

Micro-B USB Connection

The USB connector provides a COM port connection for configuration via a command line interface (CLI) to the Network card.

Refer to the Network card User's Manual for more details on the operations of the Network card.

Relay Card (URC005)

The intelligent slot on the UPS unit may accept either the Relay card or the Network card, not both. Follow the steps in the Network Card (UNCP01) section to install or remove the Relay card from the UPS unit.

The 12-pin relay card allows the user to monitor a specific status on the UPS. The predefined monitoring contact points on the relay card change state when the status in the UPS changes state.

| Terminal NO. | Terminal function | Description |
|--------------|-------------------|---|
| 1 | Common source | common point for all contacts on the relay card |
| 2 | UPS ON = Open | When the UPS is switched ON, Pin 1 to Pin 2 would change from NC (Normal Closed) to Open. |
| 3 | AC fail = Open | When the input utility power fails, Pin 1 to Pin 3 would change from NC (Normal Closed) to Open. |
| 4 | AC fail = Close | When the input utility power fails, Pin 1 to Pin 4 would change from NO (Normal Opened) to Close. |

| | | |
|----|-----------------------------|---|
| 5 | Batt low = Open | When the battery voltage is low, Pin 1 to Pin 5 would change from NC (Normal Closed) to Open. |
| 6 | Batt low = Close | When the battery voltage is low, Pin 1 to Pin 6 would change from NO (Normal Opened) to Close. |
| 7 | UPS alarm = Open | When the UPS has an alarm, Pin 1 to Pin 7 would change from NC (Normal Closed) to Open. |
| 8 | UPS alarm = Close | When the UPS has an alarm, Pin 1 to Pin 8 would change from NO (Normal Opened) to close. |
| 9 | Bypass active = Open | When the UPS is working in the Bypass state, Pin 1 to Pin 9 would change from NC (Normal Closed) to Open. |
| 10 | Bypass active = Close | When the UPS is working in the Bypass state, Pin 1 to Pin 10 would change from NO (Normal Opened) to Close. |
| 11 | UPS fault = Open | When the UPS has a fault, Pin 1 to Pin 11 would change from NC (Normal Closed) to Open. |
| 12 | UPS fault = Close | When the UPS has a fault, Pin 1 to Pin 12 would change from NO (Normal Opened) to Close. |

The relay card contains eleven dry contact outputs plus a common lead. The outputs are factory programmed according to the functions listed in the table above.

The replay card must be removed from the UPS intelligent slot to access the screws for connecting the remote monitoring devices.



Figure 14: Relay Card Front and Top View (showing connection points)

Section 2 – Front Panel Display (FPD)

All UPS 1 to 3kVA Models have the same front panel. The front panel contains four status LEDs, a 2.8-inch segmented color display, and four function buttons.

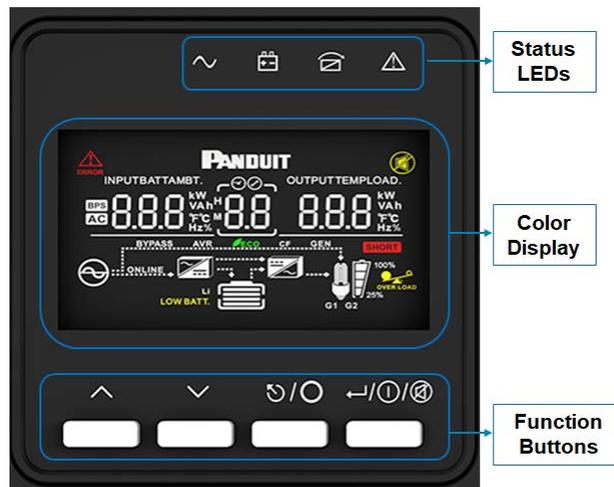


Figure 15: Front Panel Display (FPD)

Status LEDs

Each unit has four Status LEDs that provide a quick high-level view of the unit’s operating conditions.

| LED Icon | LED Name | Color - Operating Condition |
|----------|-------------|--|
| | Alert LED | Yellow – Unit has an Active Warning Alert Red - Unit has an Active Critical Alert |
| | Bypass LED | Blue - UPS is operating in Bypass state |
| | Battery LED | Yellow - UPS operating in Battery state |
| | Normal LED | Green - UPS is operating in Normal state (Unit has AC input power and is providing power to the load via the normal power path) |

Function Buttons

| Button Icon | Button Name | Function Description |
|---|-----------------|---|
|  | UP | <ul style="list-style-type: none"> • Monitor Operation: press to display previous page. • Setup Operation: press to display previous page or previous setup value. |
|  | DOWN | <ul style="list-style-type: none"> • Monitor Operation: press to display next page. • Setup Operation: press to display next page or next setup value. • Setup Operation: press past the last setup page to save the settings selected, and exit the Setup Operation. |
|  | CANCEL / OFF | <ul style="list-style-type: none"> • Setup Operation: press to exit Setup Operation without changing any settings. • Monitor Operation while in Battery state: press for 3-6 seconds (first audio beep) to turn the UPS OFF. • Monitor Operation while in Normal state: press for 3-6 seconds (first audio beep) to turn the inverter OFF and change to Bypass state. |
|  | ENTER / ON/MUTE | <ul style="list-style-type: none"> • Setup Operation: press to enter/confirm setup value and move back to Setup pages. • Monitor Operation while in Normal state: press for 3-6 seconds (first audio beep) to manually run a battery test. • Monitor Operation while in Bypass state: press for 3-6 seconds (first audio beep) to change to Normal state. • Monitor Operation: press for 6-10 seconds (second audio beep) to toggle the audible alarms OFF or ON. |

Turning ON/OFF the UPS

Starting the UPS on Main Input Power:



CAUTION! MAKE SURE GROUNDING IS PROPERLY CONNECTED!

- Remove the front faceplate from the UPS unit (if currently installed).
 - Press in the two ends of the faceplate to release the tabs.
- Ensure that the internal battery cartridge is plugged into the UPS.
- Replace the front face plate of the UPS.
 - Position the faceplate around the display and snap onto the front of the UPS.
- Connect the optional EBP unit(s) as shown in the Installation Manual.
 - Ensure that all connected EBP breakers are turned on.
- Plug the input cord into a known good power source.
- The UPS will automatically start the power up initialization process.
- After about 30 second the UPS should be fully powered up.
- Manually execute a battery test to ensure the battery is properly connected.
 - Press and hold the ENTER/ON/MUTE button until the first audio beep is heard (about 3-6 seconds).
- When test passes the UPS unit is ready to be setup for service.

Cold Starting the UPS (Start the UPS on Battery):



CAUTION! MAKE SURE GROUNDING IS PROPERLY CONNECTED!

- Remove the front faceplate from the UPS unit (if currently installed).
 - Press in the two ends of the faceplate to release the tabs.
- Ensure that the internal battery cartridge is plugged into the UPS.
- Replace the front face plate of the UPS.
 - Position the faceplate around the display and snap onto the front of the UPS.
- Connect the optional EBP unit(s) as shown in the Installation manual.
 - Ensure that all connected EBP breakers are turned on.
- Cold start the UPS.
 - Press and hold the ENTER/ON/MUTE button until the first audio beep is heard (about 3-6 seconds).
 - This will manually start the UPS and then execute a battery test after the unit has powered up and initialized.
- When test passes the UPS unit is ready to be setup for service.

Note: Ensure a known good power source is connected to the input of the UPS

before putting into service.

Properly Shutting Down the UPS:

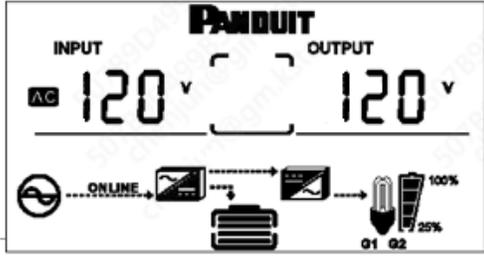
- Unplug the input cord from the power source.
- The UPS will automatically transition to the Battery state.
- Manually turn off the inverter.
- Press and hold the CANCEL/OFF button until the first audio beep is heard (about 3-6 seconds).
- The UPS has now been properly shut down.
- **Note:** Ensure to follow the above step in the above order to properly shut down the UPS. Not following these steps in this order could result in the UPS being powered from the battery until the battery is fully depleted.

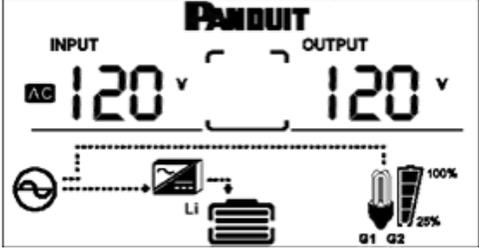
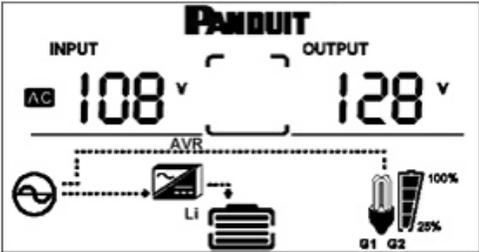
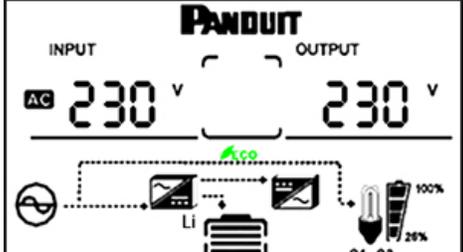
Color Display Operation

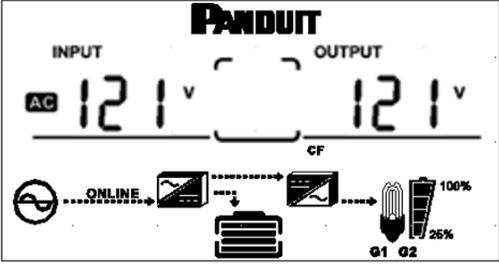
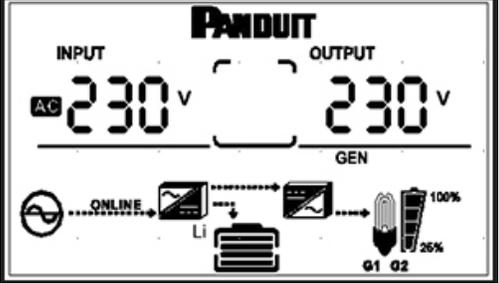
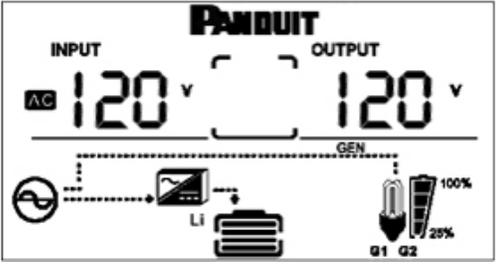
The display has two modes of operation: the Monitor Operation mode and the Setup Operation mode. Use the function buttons from above to transition between the two modes of operation.

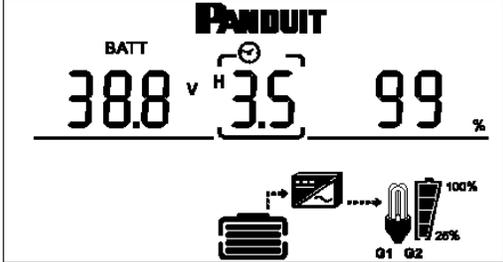
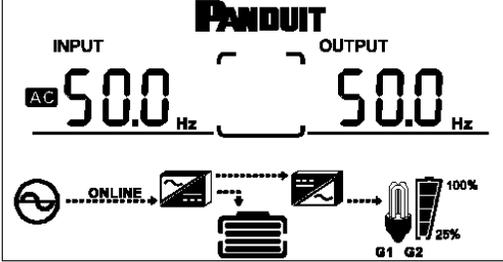
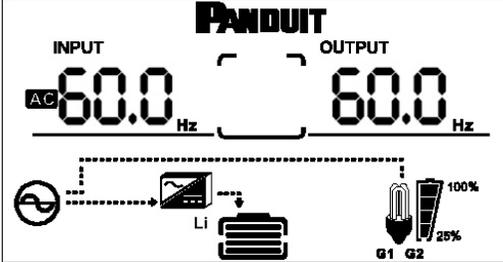
Monitor Operation

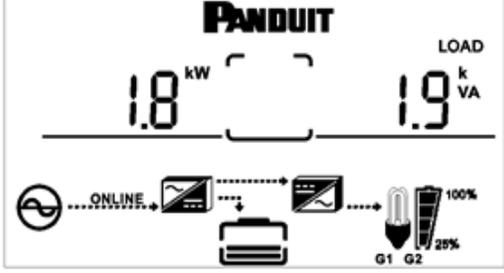
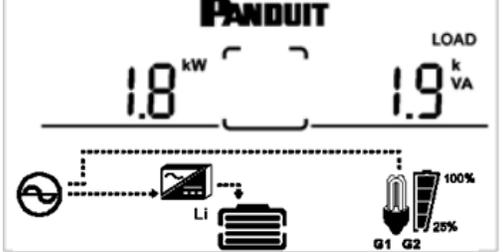
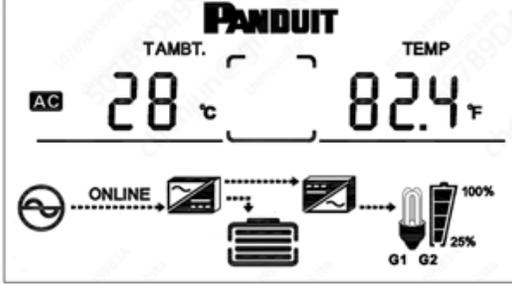
There are seven Monitor Operation pages. Monitor Operation mode is default screen mode that the UPS will always return to. When leaving the Setup Operation mode, the UPS returns to the Monitor Operation mode page that it exited. The (DC) under the Screen # means this is a Double Conversion unit. The (LI) under the Screen # means this is a Line Interactive unit. VRLA in the page description means a lead acid battery system. Li in the page description means a Lithium-ion battery system.

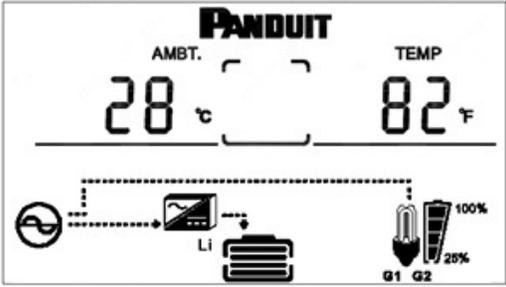
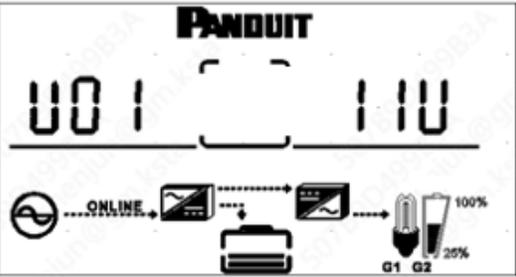
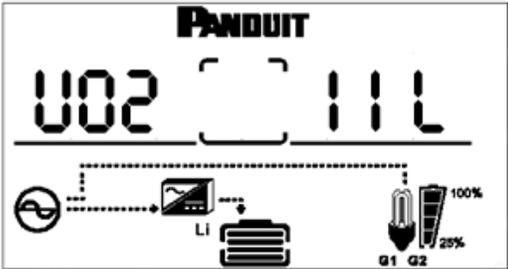
| Screen # | Parameter(s) Name(s) | Example Display Content |
|--|---|--|
| M-01A (DC) | Input Voltage & Output Voltage (Normal Mode) |  |
| <p>The above page is an example of a VRLA 120V voltage monitoring page for the double conversion UPS system. The power diagram shows that the unit is operating in the Normal state.</p> | | |

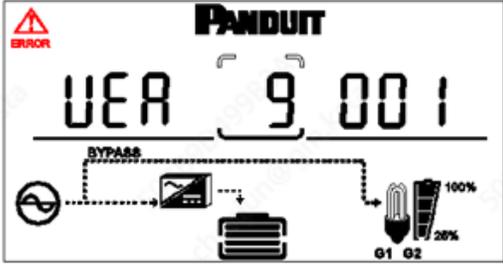
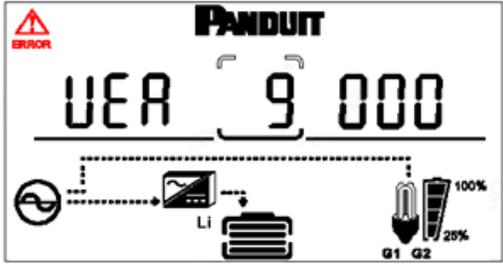
| Screen # | Parameter(s) Name(s) | Example Display Content |
|--|---|--|
| M-01A (LI) | Input Voltage & Output Voltage (Normal Mode) |  |
| <p>The above page is an example of a Li 120V voltage monitoring page for the Line Interactive UPS system. The power diagram shows that the unit is operating in Normal state with no Automatic Voltage Regulation (AVR). Note: Normal state for the Line Interactive UPS is to bypass the rectify and inverter circuitry.</p> | | |
| M-01A (LI) | Input Voltage & Output Voltage (Normal Mode with AVR Active) |  |
| <p>The above page is an example of a Li 120V voltage monitoring page for the Line Interactive UPS system. The power diagram shows that the unit is operating in the Normal state with Automatic Voltage Regulation (AVR).</p> | | |
| M-01B (DC) | Input Voltage & Output Voltage (ECO Mode) |  |
| <p>The above page is an example of a Li 230V voltage monitoring page for the double conversion UPS system. The power diagram shows that it is operating in the ECO State.</p> | | |

| Screen # | Parameter(s) Name(s) | Example Display Content |
|---|--|---|
| M-01C (DC) | Input Voltage & Output Voltage (CF Mode) |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'INPUT' and 'OUTPUT' are displayed with '121 V' on both sides. An 'AC' icon is on the left. A power diagram below shows 'ONLINE' mode with a battery icon and 'CF' (Charger/Flyback) mode indicated. Battery levels for G1 and G2 are shown as 100% and 25% respectively.</p> |
| <p>The above page is an example of a VRLA 120V voltage monitoring page for the double conversion UPS system. The power diagram shows that it is operating in the CF State.</p> | | |
| M-01D (DC) | Input Voltage & Output Voltage (Generator Mode) |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'INPUT' and 'OUTPUT' are displayed with '230 V' on both sides. An 'AC' icon is on the left. A power diagram below shows 'ONLINE' mode with a generator icon and 'GEN' (Generator) mode indicated. Battery levels for G1 and G2 are shown as 100% and 25% respectively.</p> |
| <p>The above page is an example of a Li 230V voltage monitoring page for the double conversion UPS system. The power diagram shows that it is operating in the Generator State.</p> | | |
| M-01D (LI) | Input Voltage & Output Voltage (Generator Mode) |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'INPUT' and 'OUTPUT' are displayed with '120 V' on both sides. An 'AC' icon is on the left. A power diagram below shows 'ONLINE' mode with a generator icon and 'GEN' (Generator) mode indicated. Battery levels for G1 and G2 are shown as 100% and 25% respectively.</p> |
| <p>The above page is an example of a Li 120V voltage monitoring page for the Line Interactive UPS system. The power diagram shows that it is operating in the Generator state.</p> | | |

| Screen # | Parameter(s) Name(s) | Example Display Content |
|--|---|---|
| M-02 | Battery Voltage, & Battery Hold Time & Battery Capacity % |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'BATT' is displayed. The main display shows '38.8 v' on the left, '3.5' in brackets with a clock icon in the center, and '99 %' on the right. At the bottom, there is a power diagram showing a battery icon, a converter icon, and a battery level indicator with '100%' and '25%' markings and 'G1 G2' labels.</p> |
| <p>The above page is an example of the Battery monitoring page on a VRLA system. The power diagram show that it is operating in the Battery state.</p> <p>The Battery Hold Time in the center brackets, may appear on any Monitor Operation page when the UPS is in the Battery state.</p> | | |
| M-03 (DC) | Input Frequency & Output Frequency (Normal Mode) |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'INPUT' and 'OUTPUT' are displayed. The main display shows '50.0 Hz' on the left and '50.0 Hz' on the right. At the bottom, there is a power diagram showing an AC input icon, an 'ONLINE' label, a converter icon, a battery icon, and a battery level indicator with '100%' and '25%' markings and 'G1 G2' labels.</p> |
| <p>The above page is an example of the frequency monitoring page on a 50Hz VRLA Double Conversion UPS system that is operating in the Normal state.</p> | | |
| M-03 (LI) | Input Frequency & Output Frequency (Normal Mode) |  <p>The screenshot shows the PANDUIT logo at the top. Below it, 'INPUT' and 'OUTPUT' are displayed. The main display shows '60.0 Hz' on the left and '60.0 Hz' on the right. At the bottom, there is a power diagram showing an AC input icon, an 'Li' label, a converter icon, a battery icon, and a battery level indicator with '100%' and '25%' markings and 'G1 G2' labels.</p> |
| <p>The above page is an example of the frequency monitoring page on a 60Hz Li Line Interactive UPS system that is operating in the Normal state.</p> | | |

| Screen # | Parameter(s) Name(s) | Example Display Content |
|---|---|--|
| M-04 (DC) | Actual Power (kW) & Apparent power (kVA) (Normal Mode) |  |
| <p>The above page is an example of the output power monitoring page on a VRLA Double Conversion UPS system that is operating in the Normal State.</p> | | |
| M-04 (LI) | Actual Power (kW) & Apparent power (kVA) (Normal Mode) |  |
| <p>The above page is an example of the output power monitoring page on a Li Line Interactive UPS system that is operating in the Normal State.</p> | | |
| M-05 (DC) | Ambient Temperature (°C) & Ambient Temperature (°F) (Normal Mode) |  |
| <p>The above page is an example of the temperature monitoring page on a VRLA Double Conversion system that is operating in the Normal State.</p> | | |

| Screen # | Parameter(s) Name(s) | Example Display Content |
|--|---|--|
| M-05 (LI) | Ambient Temperature (°C) & Ambient Temperature (°F) (Normal Mode) |  |
| <p>The above page is an example of the temperature monitoring page on a Li Line Interactive system that is operating in the Normal State.</p> | | |
| M-06 (DC) | UPS Partial Part Number (Normal Mode) |  |
| <p>The above page is an example of the Part Number monitoring page on a VRLA Double Conversion system that is operating in the Normal State.</p> | | |
| M-06 (LI) | UPS Partial Part Number (Normal Mode) |  |
| <p>The above page is an example of the Part Number monitoring page on a Li Line Interactive system that is operating in the Normal state.</p> | | |

| Screen # | Parameter(s) Name(s) | Example Display Content |
|---|--|--|
| M-07 (DC) | Base UPS Core FW Version & Alert Code (Alarm/Faults) (Normal Mode) |  |
| <p>The above page is an example of the Core Firmware Version monitoring page on a VRLA Double Conversion system that is operating in the Bypass state.</p> <p>The Alert Code in the center brackets, (refer to Appendix A: 1 to 3kVA Fault Codes & Alert LEDs) may appear on any Monitor Operation page when the UPS has an active alert. The error icon will also light in the upper left corner of the page, in most cases (if there is an internal error) the UPS will also transition to the Bypass state.</p> | | |
| M-07 (LI) | Base UPS Core FW Version & Alert Code (Alarm/Faults) (Normal mode) |  |
| <p>The above page is an example of the Core Firmware Version monitoring page on a Li Line interactive system that is operating in the Normal State.</p> <p>The Alert Code in the center brackets, (refer to Appendix A: 1 to 3kVA Fault Codes & Alert LEDs) may appear on any Monitor Operation page when the UPS has an active alert. The error icon will also light in the upper left corner of the page.</p> | | |

Setup Operation

One must intentionally get into the Setup Operation mode by a sequence of function button operations. Press and hold the UP and DOWN buttons at the same time until the unit a Setup page appears. Once in the Setup Operation mode, use the UP or DOWN

button to scroll up through the Setup pages or down through the Setup pages.

Note: Using the DOWN button to transition out of the last Setup page will automatically save any settings changed during the Setup Operation mode session and transition back to the Monitor Operation mode, so do not scroll down past the last page before all the settings have been changed.

Scroll to the desired Setup page that needs to be changed, by pressing the UP or DOWN button.

Note: The Setup page number appears in the center brackets on the Setup pages. Press the ENTER button. The changeable Setup value will start to blink. Scroll through the Setup values, by pressing the UP or DOWN button. When the desired Setup value is present, press the ENTER button to lock in that value. Move to another Setup page if desired, by pressing the UP or DOWN button. Repeat the above process for that Setup value.

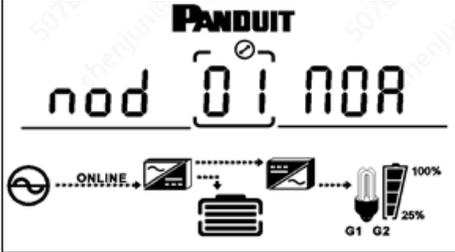
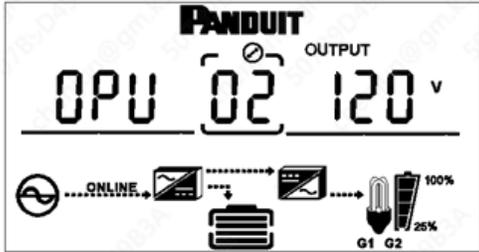
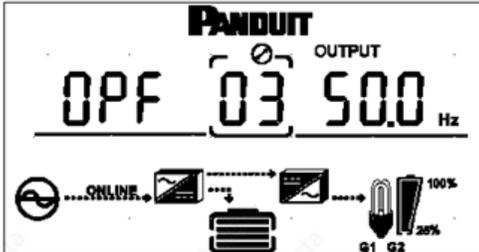
Note: The Setup Operation mode will automatically close and not save any Setup value changes after 30 seconds of no button presses.

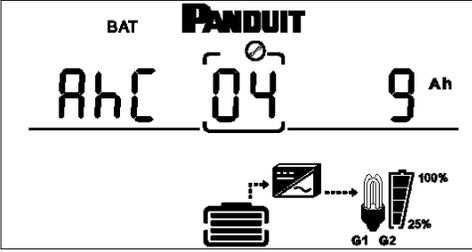
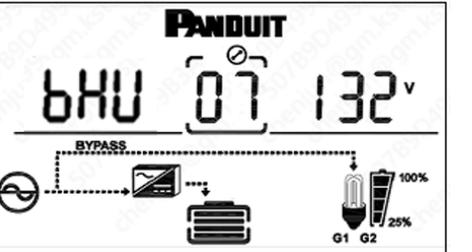
Note: Pressing the CANCEL button at any time while in the Setup Operation mode will automatically close and not save any Setup value changes. To save all Setup value changes in the current session, press the DOWN button several times to scroll down through the last Setup page, then the UPS will save all the settings and transition to a Monitor Operation mode.

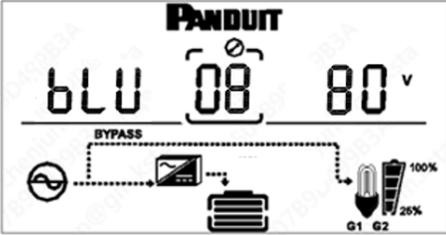
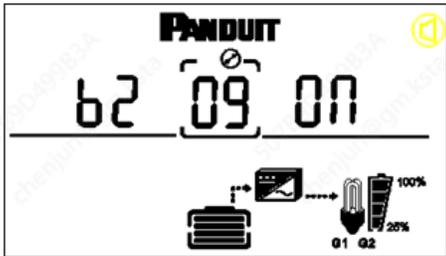
Double Conversion VRLA UPS

The double conversion VRLA UPS has nine Setup pages. Remember that scrolling down through the 9th Setup page will automatically save any settings changed during the Setup session and transition back to the Monitor Operation mode.

The following table shows an example and description of all 9 Setup pages in the double conversion VRLA UPS unit.

| Screen # | DC VRLA Settings | Content display |
|--|---|--|
| S-01 | <p align="center">Mode setting (Nor, Gen, CF, ECO)</p> |  |
| <p>The default mode setting is Normal mode for all Double Conversion UPS units.</p> | | |
| S-02 | <p align="center">Output Voltage setting (100, 110, 115, 120, 125) (220, 230, 240)</p> |  |
| <p>The default Output Voltage setting is 120V for North American UPS units and 230V for European UPS units. For maximum efficiency set the output voltage to the input source voltage.</p> | | |
| S-03 | <p align="center">Frequency setting (50, 60)</p> |  |
| <p>The default Frequency setting is 60Hz for North American UPS units and 50Hz for European UPS units.</p> | | |

| Screen # | DC VRLA Settings | Content display |
|--|--|--|
| S-04 | <p>Battery Capacity setting (1-200)</p> |  |
| <p>The default Battery Capacity setting is 9Ah for the internal UPS battery cartridge. Increase this number by 18Ah for each EBP unit connected to the UPS unit.</p> | | |
| S-05 | <p>Group 2 Battery EOD Voltage setting (1.75, 1.84, 1.92)</p> |  |
| <p>Group 2 is the switchable outlet group. This outlet group may be utilized to power non-critical loads. The default Group 2 Battery End of Discharge (EOD) voltage setting is 1.75v. This group of outlets may be configured to turn OFF before the Group 1 outlets. The lower the voltage setting, the longer outlet Group 2 will stay ON while the UPS is running on battery. However, the longer this outlet group stays ON, the less runtime there is for outlet Group 1 which may contain the critical loads. If all outlets are used for critical loads, then set Group 2 voltage equal to the Group 1 at 1.75v.</p> | | |
| S-06 | <p>Bypass Voltage Upper Limit setting (120 - 132) (230 - 264)</p> |  |
| <p>The default Bypass Voltage Upper Limit setting is 132Vac for North American UPS units and 264Vac for European UPS units. These values may be changed in 1Vac increments/decrements. This value should be set to the maximum voltage that the</p> | | |

| Screen # | DC VRLA Settings | Content display |
|---|---|--|
| <p>connected loads will tolerate. Decreasing this voltage may limit the UPS from switching to bypass (when the input voltage is high).</p> | | |
| S-07 | <p>Bypass Voltage Lower Limit setting (80 - 110) (176 - 220)</p> |  <p>The screenshot shows the PANDUIT display with 'BLU' on the left, '08' in the middle, and '80 v' on the right. Below the display is a diagram showing a bypass path from the input to the output, bypassing the inverter. A battery level indicator shows 100% and 25% levels, with 'G1 G2' labels.</p> |
| <p>The default Bypass Voltage Lower Limit setting is 80Vac for North American UPS units and 176Vac for European UPS units. These values may be changed in 1Vac increments/decrements. This value should be set to the minimum voltage that the connected loads will tolerate. Increasing this voltage may limit the UPS from switching to bypass (when the input voltage is low).</p> | | |
| S-08A | <p>Buzzer setting (ON, OFF)</p> |  <p>The screenshot shows the PANDUIT display with 'b2' on the left, '09' in the middle, and '0n' on the right. A yellow speaker icon with a line through it is in the top right corner. Below the display is a diagram showing a bypass path and battery level indicators.</p> |
| <p>The default Buzzer setting is ON.</p> | | |
| S-08B | <p>Buzzer setting (ON, OFF)</p> |  <p>The screenshot shows the PANDUIT display with 'b2' on the left, '09' in the middle, and 'OFF' on the right. A yellow speaker icon with a line through it is in the top right corner. Below the display is a diagram showing a bypass path and battery level indicators.</p> |
| <p>To mute all audible alarms, set this to OFF. The Buzzer will be muted, even with new Alerts. A speaker with a line through it will be illuminated in the upper right corner of all pages.</p> | | |

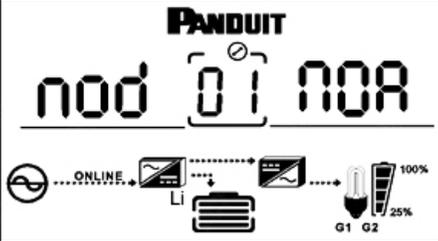
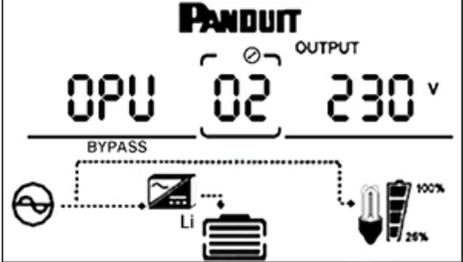
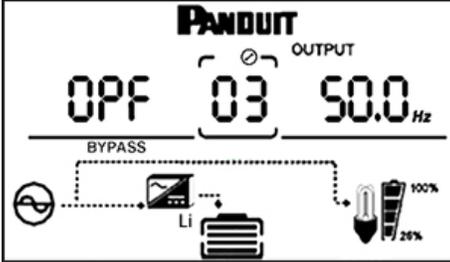
| Screen # | DC VRLA Settings | Content display |
|---|---|--|
| S-09A | <p>BYPASS Enable setting (ON, OFF)</p> |  <p>The screenshot shows the PANDUIT logo at the top. Below it, the display shows 'bEN' on the left, '10' in a box in the center, and 'ON' on the right. Below the display is a diagram showing a bypass path from the input to the output, bypassing the inverter. A battery icon shows a 25% charge level, with 'G1 G2' labels below it.</p> |
| <p>The default Bypass Enable setting is ON. This allows the UPS to switch to the Bypass State if it needs to.</p> | | |
| S-09B | <p>BYPASS Setting (ON, OFF)</p> |  <p>The screenshot shows the PANDUIT logo at the top. Below it, the display shows 'bEN' on the left, '10' in a box in the center, and 'OFF' on the right. Below the display is a diagram showing a bypass path from the input to the output, bypassing the inverter. A battery icon shows a 25% charge level, with 'G1 G2' labels below it.</p> |
| <p>To disable the bypass, set this to OFF. The UPS will not be allowed to transition to the Bypass State under any circumstances.</p> | | |

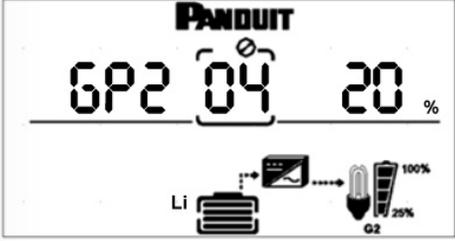
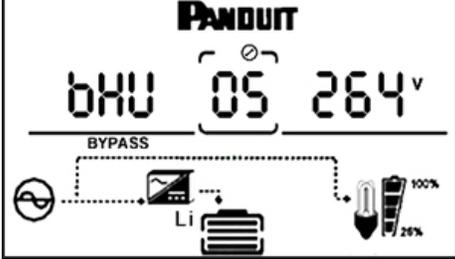
Double Conversion Li UPS

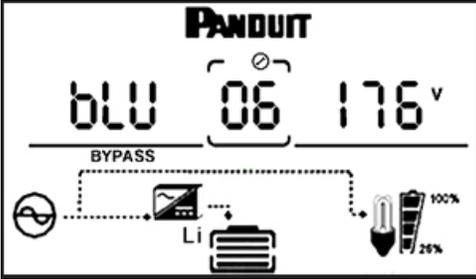
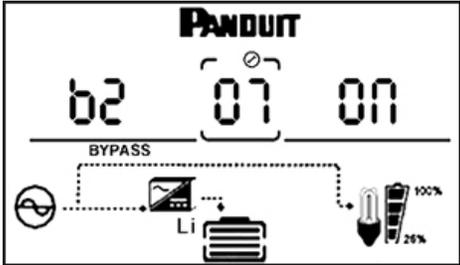
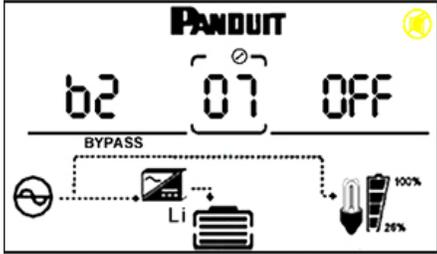
These UPS units are for the European market only.

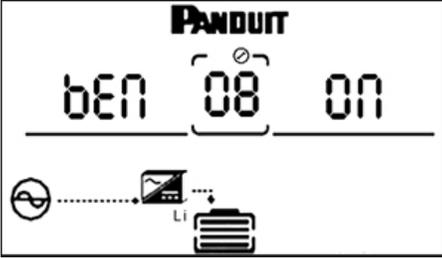
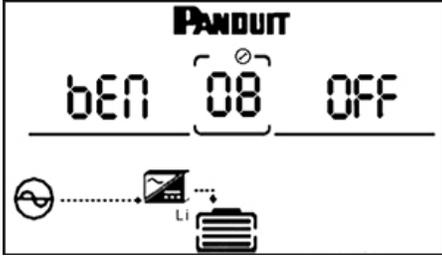
The double conversion Li UPS has eight Setup pages. Remember that scrolling down through the 8th Setup page will automatically save any settings changed during the Setup session and transition back to the Monitor Operation mode.

The following table shows an example and description of all 8 setup pages in the double conversion Li UPS unit.

| Screen # | DC Li Settings | Content display |
|---|---|--|
| S-01 | <p align="center">Mode setting (Nor, Gen, CF, ECO)</p> |  |
| <p>The default mode setting is Normal mode for all Double Conversion UPS units.</p> | | |
| S-02 | <p align="center">Output Voltage setting (220, 230, 240)</p> |  |
| <p>The default Output Voltage setting is 230V for European UPS units. For maximum efficiency, set the output voltage to the input source voltage.</p> | | |
| S-03 | <p align="center">Frequency setting (50, 60)</p> |  |
| <p>The default Frequency setting is 50Hz for European UPS units.</p> | | |

| Screen # | DC Li Settings | Content display |
|--|--|--|
| S-04 | <p>Group 2 Battery EOD setting (000, 020, 030)</p> |  |
| <p>Group 2 is the switchable outlet group. This outlet group may be utilized to power non-critical loads. The default Group 2 Battery End of Discharge (EOD) setting is 0%. This group of outlets may be configured to turn OFF before the Group 1 outlets. This setting is the percentage of battery capacity left when the outlet group turns OFF. The lower the percentage setting, the longer outlet Group 2 will stay ON while the UPS is running on battery. However, the longer this outlet group stays ON, the less runtime there is for outlet Group 1, which may contain the critical loads. If all outlets are used for critical loads, then set Group 2 capacity equal to the Group 1 at 0%.</p> | | |
| S-05 | <p>Bypass Voltage Upper Limit setting (230 – 264)</p> |  |
| <p>The default Bypass Voltage Upper Limit setting is 264Vac for European UPS units. These values may be changed in 1Vac increments/decrements. This value should be set to the maximum voltage that the connected loads will tolerate. Decreasing this voltage may limit the UPS from switching to bypass (when the input voltage is high).</p> | | |

| Screen # | DC Li Settings | Content display |
|--|--|--|
| S-06 | <p>Bypass Voltage Lower Limit setting (176 – 220)</p> |  |
| <p>The default Bypass Voltage Lower Limit setting is 176Vac for European UPS units. These values may be changed in 1Vac increments/decrements. This value should be set to the minimum voltage that the connected loads will tolerate. Increasing this voltage may limit the UPS from switching to bypass (when the input voltage is low).</p> | | |
| S-07A | <p>Buzzer setting (ON, OFF)</p> |  |
| <p>The default Buzzer setting is ON.</p> | | |
| S-07B | <p>Buzzer setting (ON, OFF)</p> |  |
| <p>To mute all audible alarms set this to OFF. The Buzzer will be muted, even with new Alerts. A speaker with a line through it, will be illuminated in the upper right corner of all pages.</p> | | |

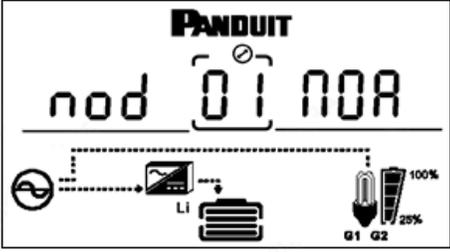
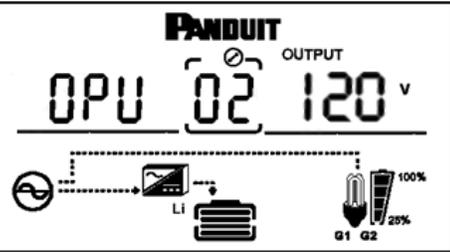
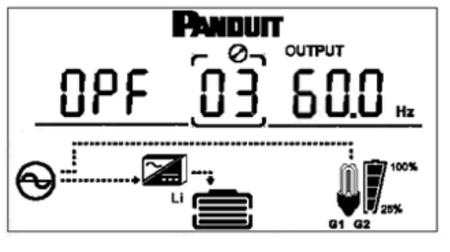
| Screen # | DC Li Settings | Content display |
|--|---|---|
| S-08A | <p>BYPASS Enable setting (ON, OFF)</p> |  |
| <p>The default Bypass Enable setting is ON. This allows the UPS to switch to the Bypass state if it needs to.</p> | | |
| S-08B | <p>BYPASS Setting (ON, OFF)</p> |  |
| <p>To disable the Bypass set this to OFF. The UPS will not be allowed to transition to the Bypass state under any circumstances.</p> | | |

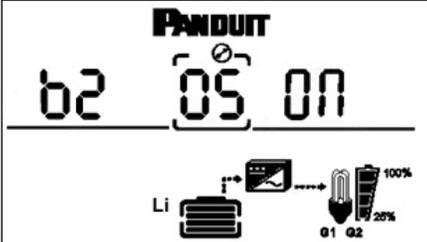
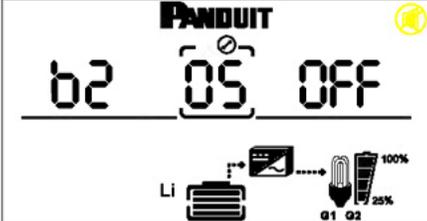
Line Interactive Li UPS

These UPS units are for the North American markets only.

The Line Interactive Lithium-Ion UPS has five Setup pages. Remember that scrolling down through the 5th Setup page will automatically save any settings changed during the Setup session and transition back to the Monitor Operation mode.

The following table shows an example and description of all 5 setup pages in the Line Interactive Li UPS unit.

| Screen # | LI Li Settings | Content display |
|---|--|--|
| S-01 | <p>Mode setting (Nor, Gen)</p> |  |
| <p>The default mode setting is Normal mode for all Line Interactive UPS units.</p> | | |
| S-02 | <p>Output Voltage setting (100, 110, 115, 120, 125)</p> |  |
| <p>The default Output Voltage setting is 120V for North American UPS units. For maximum efficiency set the output voltage to the input source voltage. Note: The output voltage must be set to a voltage that is within the operating range of all the loads connected to the UPS.</p> | | |
| S-03 | <p>Frequency setting (50, 60)</p> |  |
| <p>The default Frequency setting is 60Hz for North American UPS units.</p> | | |

| Screen # | LI Li Settings | Content display |
|---|---|--|
| S-04 | <p>Group 2 Battery EOD setting (0, 20, 30)</p> |  |
| <p>Group 2 is the switchable outlet group. This outlet group may be utilized to power non-critical loads. The default Group 2 Battery End of Discharge (EOD) setting is 0%. This group of outlets may be configured to turn OFF before the Group 1 outlets. This setting is the percentage of battery capacity left when the outlet group turns OFF. The lower the percentage setting, the longer outlet Group 2 will stay ON while the UPS is running on battery. However, the longer this outlet group stays ON, the less runtime there is for outlet Group 1 which may contain the critical loads. If all outlets are used for critical loads, then set Group 2 capacity equal to the Group 1 at 0%.</p> | | |
| S-05A | <p>Buzzer setting (ON, OFF)</p> |  |
| <p>The default Buzzer setting is ON.</p> | | |
| S-05B | <p>Buzzer setting (ON, OFF)</p> |  |
| <p>To mute all audible alarms, set this to OFF. The Buzzer will be muted, even with new Alerts. A speaker with a line through it will be illuminated in the upper right corner of all pages.</p> | | |

Appendix A: 1 to 3kVA Fault Codes & Alert LEDs

The following Alert Code Table lists the available Alarm and Fault codes that may appear on the display of the 1 to 3kVA 1-Phase UPS units. If the Buzzer is enabled, it will either make a continuous beep or periodic beep (about 1 per second). The Alert LED will either illuminate Yellow for Warning Alarm or Red for Critical Alarm.

If the Alert Code cannot be cleared, then contact Panduit Customer Technical Support at techsupport@panduit.com or techsupportemea@panduit.com with the following information.

- Product SKU and serial number.
- Detailed explanation of the fault, such as LCD display info, LED lights status, etc.

| Fault Code | Fault Description | Fault Type | Buzzer | LED | Action to Take |
|------------|---------------------------|------------|------------|--------------|--|
| 2 | Inverter Fault | Critical | Continuous | Red Alert On | Reboot the UPS unit. |
| 9 | Fan Fault | Critical | Continuous | Red Alert On | Remove ventilation obstructions. Reboot the UPS unit. |
| 12 | Initialization Fault | Critical | Continuous | Red Alert On | Reboot the UPS unit. |
| 13 | Battery Charger Fault | Critical | Continuous | Red Alert On | Reboot the UPS unit. |
| 15 | DC Bus Over Voltage | Critical | Continuous | Red Alert On | Reboot the UPS unit |
| 16 | DC Bus Under Voltage | Critical | Continuous | Red Alert On | Reboot the UPS unit |
| 17 | DC Bus Unbalanced | Critical | Continuous | Red Alert On | Reboot the UPS unit. |
| 18 | Soft Start Error | Critical | Continuous | Red Alert On | Reboot the UPS unit |
| 19 | UPS Over Temperature | Critical | Continuous | Red Alert On | Ensure that the ambient operating temperature is at or below 40°C. Reduce load (if overload). Remove ventilation obstructions. Reboot the UPS unit. |
| 20 | Heatsink Over Temperature | Critical | Continuous | Red Alert On | Ensure that the ambient operating temperature is at or below 40°C. Reduce load (if overload). Remove ventilation obstructions. Reboot the UPS unit. |

| | | | | | |
|----|-------------------------------|----------|------------|-----------------|---|
| 26 | Battery Over Voltage | Warning | Periodic | Yellow Alert On | Ensure that the EBP and battery cartridge match the UPS battery voltage. |
| 27 | Input Voltage Reversed | Warning | Periodic | Yellow Alert On | Ensure that the input source Line and Neutral are not reversed. |
| 28 | Bypass Voltage Reversed | Warning | Periodic | Yellow Alert On | Ensure that the input source Line and Neutral are not reversed. |
| 29 | Output Short-circuit | Warning | Periodic | Yellow Alert On | Remove the loads and add back one at a time to detect load that is short-circuited. |
| 30 | Input Current Limit | Warning | Periodic | Yellow Alert On | Reduce the output load. |
| 31 | Bypass Over Current | Warning | Periodic | Yellow Alert On | Reduce the output load. |
| 32 | Output Overload | Warning | Periodic | Yellow Alert On | Reduce the output load. |
| 33 | No Battery Detected | Warning | Periodic | Yellow Alert On | Ensure that the battery connector is properly seated and making a good connection. Allow the Battery to recharge. |
| 34 | Battery Depleted | Warning | Periodic | Yellow Alert On | Allow battery to recharge. |
| 35 | Battery Low | Warning | Periodic | Yellow Alert On | Allow battery to recharge. |
| 36 | Output Overload Time Out | Warning | Periodic | Yellow Alert On | Reduce the output load. |
| 37 | DC Component Over Limit Error | Critical | Continuous | Red Alert On | Reboot the UPS unit. |
| 39 | Input Voltage Abnormal | Warning | Periodic | Yellow Alert On | Ensure that the source input voltage is within the UPS operating range. |
| 40 | Input Frequency Abnormal | Warning | Periodic | Yellow Alert On | Ensure that the source input frequency is within the UPS operating range. |
| 41 | Bypass Not Available | Warning | Periodic | Yellow Alert On | Ensure that the source input voltage and frequency are within the UPS operating range. |

| | | | | | |
|----|------------------------|---------|----------|-----------------|--|
| 42 | Bypass Unable to Trace | Warning | Periodic | Yellow Alert On | Ensure that the source input voltage and frequency are within the UPS operating range. |
| 45 | EPO Activated | Warning | Periodic | Yellow Alert On | Ensure that the EPO port on the back of the UPS is shorted together. |

Appendix B: Troubleshooting

If the UPS is not properly functioning, it may be related to improper installation, wiring or operation. Follow the below troubleshooting procedures as a first pass analysis of the problem.

| No. | Problem | Possible Reason | Solution |
|-----|--|--|--|
| 1 | The source is connected but the UPS will not power ON. | Input power source is not providing power. | Make sure the panel breaker feeding the source is ON. |
| | | Input voltage and/or frequency is too low or too high. | With a multimeter measure the source voltage and frequency connected to the UPS input to ensure it is within the input operating range of the UPS. |
| | | The input breaker of the UPS is not turned ON (if applicable). | Turn ON the input breaker (if applicable). |
| 2 | The source is in range, but the Normal LED does not light on the UPS, and the UPS is operating in the battery state. | The input breaker of the UPS is not turned ON (if applicable). | Turn ON the input breaker (if applicable). |
| | | The input cable is not securely connected. | Make sure the input cable is securely connected. |
| 3 | The UPS does not indicate any failure, but there is no output voltage. | The output breaker is not turned ON (if applicable). | Turn ON the output breaker (if applicable). |
| | | The output cable is not securely connected. | Make sure the output cable is securely connected. |
| 4 | Buzzer beeps every second and the display shows "output overload". | The load on the output of the UPS exceeds the capability of the UPS. | Remove some load. Use a higher kVA UPS for this deployment. |
| 5 | The Alert Critical LED is ON and there is no battery charge voltage and current. | The battery is not connected or not securely connected. | Make sure the battery is securely connected. |
| 6 | The alarm code shown is 9 and Alert led is ON. | The UPS fan may be stuck by another object. | Remove the object stuck in the fan. |
| | | The fan sense signal could be lost. | Shut down the UPS and restart. |
| 7 | The alarm code shown is 29 and Alert led is ON. | The UPS shuts down automatically because a short circuit occurred on the UPS output. | Check output wiring or if connected loads are in short circuit status. |
| 8 | UPS cannot cold start (LCD does not light) | Battery overcurrent protection was triggered when plugging in the battery for the first time | Remove and plug the battery back in and reboot the UPS. |

| | | | |
|----|---|--|---|
| | | Battery short circuit protection was triggered | Check if the battery terminals are reversed or short circuit (measure the voltage). |
| | | Battery over discharged, battery voltage is too low | Check the battery terminal voltage, if the voltage is too low, charge the battery. |
| | | Battery over temperature protection was triggered, battery output voltage was disabled | Wait for a while, reboot the UPS after battery cool down. |
| 9 | Battery charging speed is too slow or cannot be charged | Battery low temperature protection was triggered | Ensure that the UPS and EBP are operating in an environment at or above 0°C. |
| | | Battery over temperature protection was triggered | Ensure that the UPS and EBP are operating in an environment at or below 40°C. |
| 10 | Battery backup time is shorter than nominal | The battery cartridge is not fully charged at start of the battery state. | May need more battery capacity to support frequent source power loss. Allow proper time for battery cartridges to fully recharge. |
| | | The battery is at its end-of-life expectancy. | Replace all battery cartridges (never mix old and new battery cartridges in a system for maximum battery life). |

If the troubleshooting procedures do not solve the problem, contact Panduit Customer Support at cs@panduit.com or 1-800-777-3300 with the following information.

- Product SKU and serial number.
- Detailed explanation of the fault, such as LCD display info, LED lights status, etc.

Appendix C: State Transitions Based on External Events

| 1-3kVA Double Conversion | | | |
|--|--|---|---|
| UPS Operating State | EU - Range | NA - Range | Comments |
| Normal , CF or Gen state Voltage Range | Full load: 176 ~ 264 Vac Half load: 110 ~ 300 Vac | Full load: 95 ~ 150 Vac Half load: 55 ~ 150 Vac | If the input voltage goes outside of the range, the UPS will transition to Battery state. |
| ECO state Voltage Range | Upper limit: 230 - 264Vac (Settable) Lower limit: 176 - 220Vac (Settable) | Upper limit: 120 - 132Vac (Settable) Lower limit: 80 - 110Vac (Settable) | If the input voltage goes outside of the settable range, the UPS will transition to the Normal state. |
| Bypass state Voltage Range | Upper limit: 230 - 264Vac (Settable) Lower limit: 176 - 220Vac (Settable) | Upper limit: 120 - 132Vac (Settable) Lower limit: 80 - 110Vac (Settable) | If the input voltage goes outside of the settable range, the UPS will shutdown the output. |
| Normal or ECO state Frequency Range | 50/60 ±4Hz | | If the input frequency goes outside of this range, the UPS will transition to the Battery state. |
| CF state Frequency Range | 50/60 ±4Hz | | If the input frequency goes outside of this range, the UPS will transition to the Battery state. |
| Bypass state Frequency Range | 50/60 ±4Hz | | If the input frequency goes outside of this range, the UPS will shutdown the output. |
| Gen state Frequency Range | 40 ~ 70Hz | | If the input frequency goes outside of 50 / 60 ± 4 Hz, the UPS is derated to 75% until the input frequency goes outside of this range, then the UPS will transition to the Battery state. |
| Normal or Gen state Overload | 105% ~ 125%: 1 min; 125% ~ 130%: 30 secs; > 130%: 200 ms; | | Overload Alarm for time specified and then the UPS will transition to the Bypass state. |
| CF state Overload | 105% ~ 125%: 1 min; 125% ~ 130%: 30 secs; > 130%: 200 msec; | | In CF Mode, the UPS is derated to 80%. Overload Alarm (based on derate value) for time specified and then the UPS will shutdown the output. |
| Battery state Overload | 105% ~ 125%: 1 min; 125% ~ 130%: 10 secs; > 130%: 200 msec; | | Overload Alarm for time specified and then the UPS will shutdown the output. |
| ECO or Bypass state Overload | >200%: alarm for 5 minutes; | | Overload Alarm for time specified and then the UPS will shutdown the output. |

| 1-3kVA Line Interactive | | |
|--|--|--|
| UPS Operating State | Range | Comments |
| Normal or Gen state Voltage Range | 100Vac: 90 ~ 110Vac 110Vac: 99 ~ 121Vac 115Vac: 104 ~ 126Vac 120Vac: 108 ~ 132Vac 125Vac: 113 ~ 137Vac | If the input voltage goes outside of this range, the UPS will transition to the AVR state. |
| AVR state Voltage Range | 100Vac: 75 ~ 93(Boost)/107 ~ 117(Buck) 110Vac: 83 ~ 103(Boost)/117 ~ 133(Buck) 115Vac: 86 ~ 107(Boost)/123 ~ 139(Buck) 120Vac: 90 ~ 112(Boost)/128 ~ 145(Buck) 125Vac: 94 ~ 117(Boost)/133 ~ 151(Buck) | If the input voltage goes above the Boost range and below the Buck range, then the UPS will transition back to the Normal or Gen state. If the input voltage goes below the Boost range or above the Buck range, then the UPS will transition to the Battery state. |
| CF, ECO Mode Voltage Range | NA | NA |
| Normal state Frequency Range | 50/60 ±4Hz | If the input frequency goes outside of the this range, the UPS will transition to the Battery state. |
| Gen state Frequency Range | 40 ~ 70Hz | If frequency is with in the range, the frequency variation will get passed to the load. If the frequency goes outside of this range, the UPS will transition to the Battery state. |
| CF, ECO Mode Frequency Range | NA | NA |
| Normal, Gen, or Battery state Overload | 105% ~ 110%: overload alarm indefinitely; 110% ~ 120%: 10 secs; >120%: 0 secs; | Overload Alarm for time specified and then the UPS will shutdown. |

Appendix D: Maintenance and Storage

Maintenance

The repair and replacement of any components in the UPS system must be performed by qualified personnel. If the battery cartridge has exceeded its service life (VRLA about 3-5 years and Li about 5-10 years at 25°C), contact Panduit Sales for qualified replacements.



Used battery cartridges should be properly disposed per local regulations. Refer to the Panduit Support Website at: <https://www.panduit.com/en/support/ups-battery-recycling.html>

Storage/Transportation

Before storing or transporting the UPS or EBP units with battery cartridges or replacement battery cartridges, charge the cartridge for 5 hours with no load. Disconnect the battery cartridge(s) from the system (see Installation Manual). Store/transport the product in the upright orientation in normal packaging in a dry environment. During storage, recharge and maintain according to the following table:

| Storage temperature | Charging interval | Charging time |
|---------------------|-------------------|---------------|
| -25°C - 40°C | Every 3 months | 1-2 hours |
| 40°C - 45°C | Every 2 months | 1-2 hours |

Note: Environmental factors affect battery life. High ambient temperature, high humidity, low-voltage, and frequent, short-term discharges will shorten the battery life.