



Reconfigure Connections for a Moved Asset

Applies to:	SmartZone Users
Objective:	Update the connections for an asset that has been moved to a new location
Documentation Reference:	SmartZone DCIM User Manual – Location Tree – Move a Location, Rack, Cabinet, or Device
Pre-Requisites:	SmartZone user must have Asset Tracker permissions

Description

This procedure allows SmartZone users with the proper permissions to reconfigure the connections of a moved assets. This applies only to assets that have interconnections with other assets.

Performing the Procedure

This procedure uses a switch as an example of the moved asset.

Step	Instruction	Graphic	Result
1	At the SmartZone Location Tree, navigate to the asset that was moved, right-click on it, and select the Connectivity icon.		The Connectivity window for the asset displays.

2	Right-click on the selected connection and click Reteach .		The connection loses the far end ports.
3	For each port on the asset, go to the Location Tree and select the correct PViQ panel port where the asset is connected.		The PViQ Panel port is ready to be added to the Connectivity window.
4	Drag the selected port to the Connectivity window and drop the port in the proper cell.		Do not release the port until you see a green check mark.
5	Right-click the connector icon and select Accept .		
6	Click the Save icon. (This is the check mark in the upper left corner of the Connectivity window.)		The panel goes into MAC mode and the new configuration is confirmed.
7	Repeat the steps above for all other ports on the asset.		All ports on the moved asset will be correctly reconfigured.

End State

All ports on the moved asset will be correctly reconfigured.