


- Finger Kits are available only for 800 mm wide FlexFusion XGL Cabinets.
- Finger Kits are available only in Black.
- Finger Kits can be installed either on front or rear equipment rails.

Tool List




T25 Torx driver

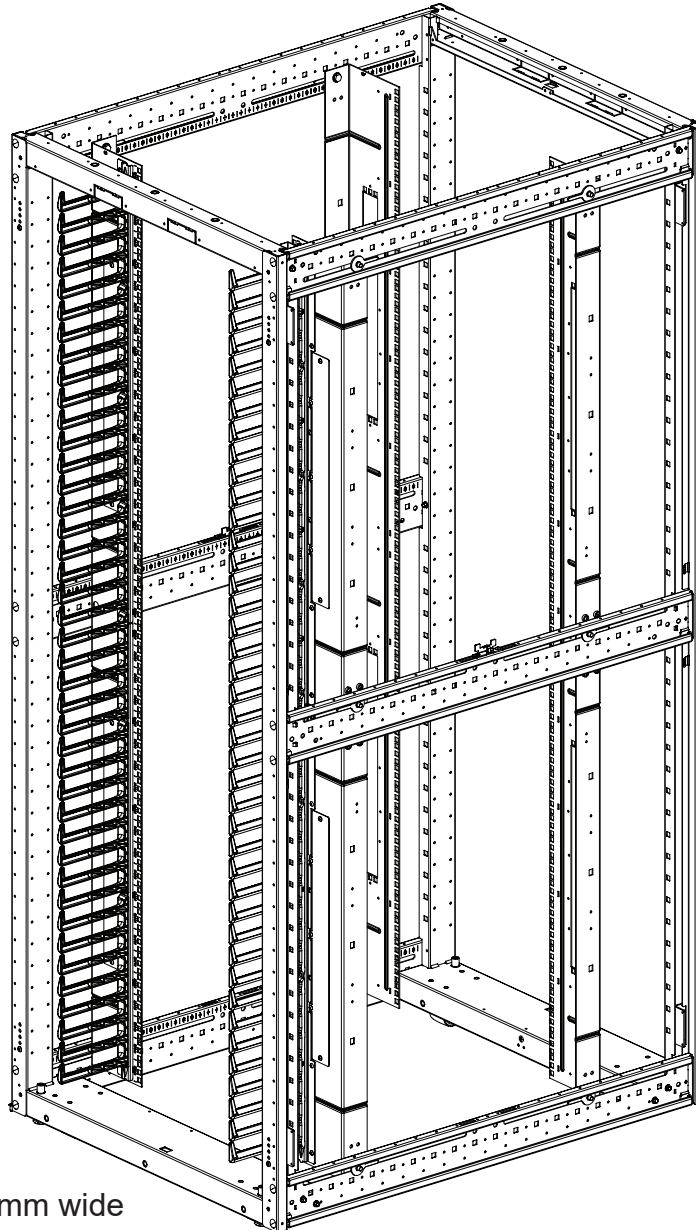

Front of 800 mm wide
FlexFusion XGL Cabinet



Install Finger Management Brackets

- Position equipment rail to a position that allows clearance for finger kit to be installed, if needed. See cabinet installation instructions for equipment rail spacing instruction.
- Install (4) Finger Management Brackets using (24) M5 X 12 screws from kit. Brackets are symmetrical. Begin by installing bottom brackets first. Note bracket tab and notch orientation on each e-rail. Bracket tab and notch should fit tightly in the middle.

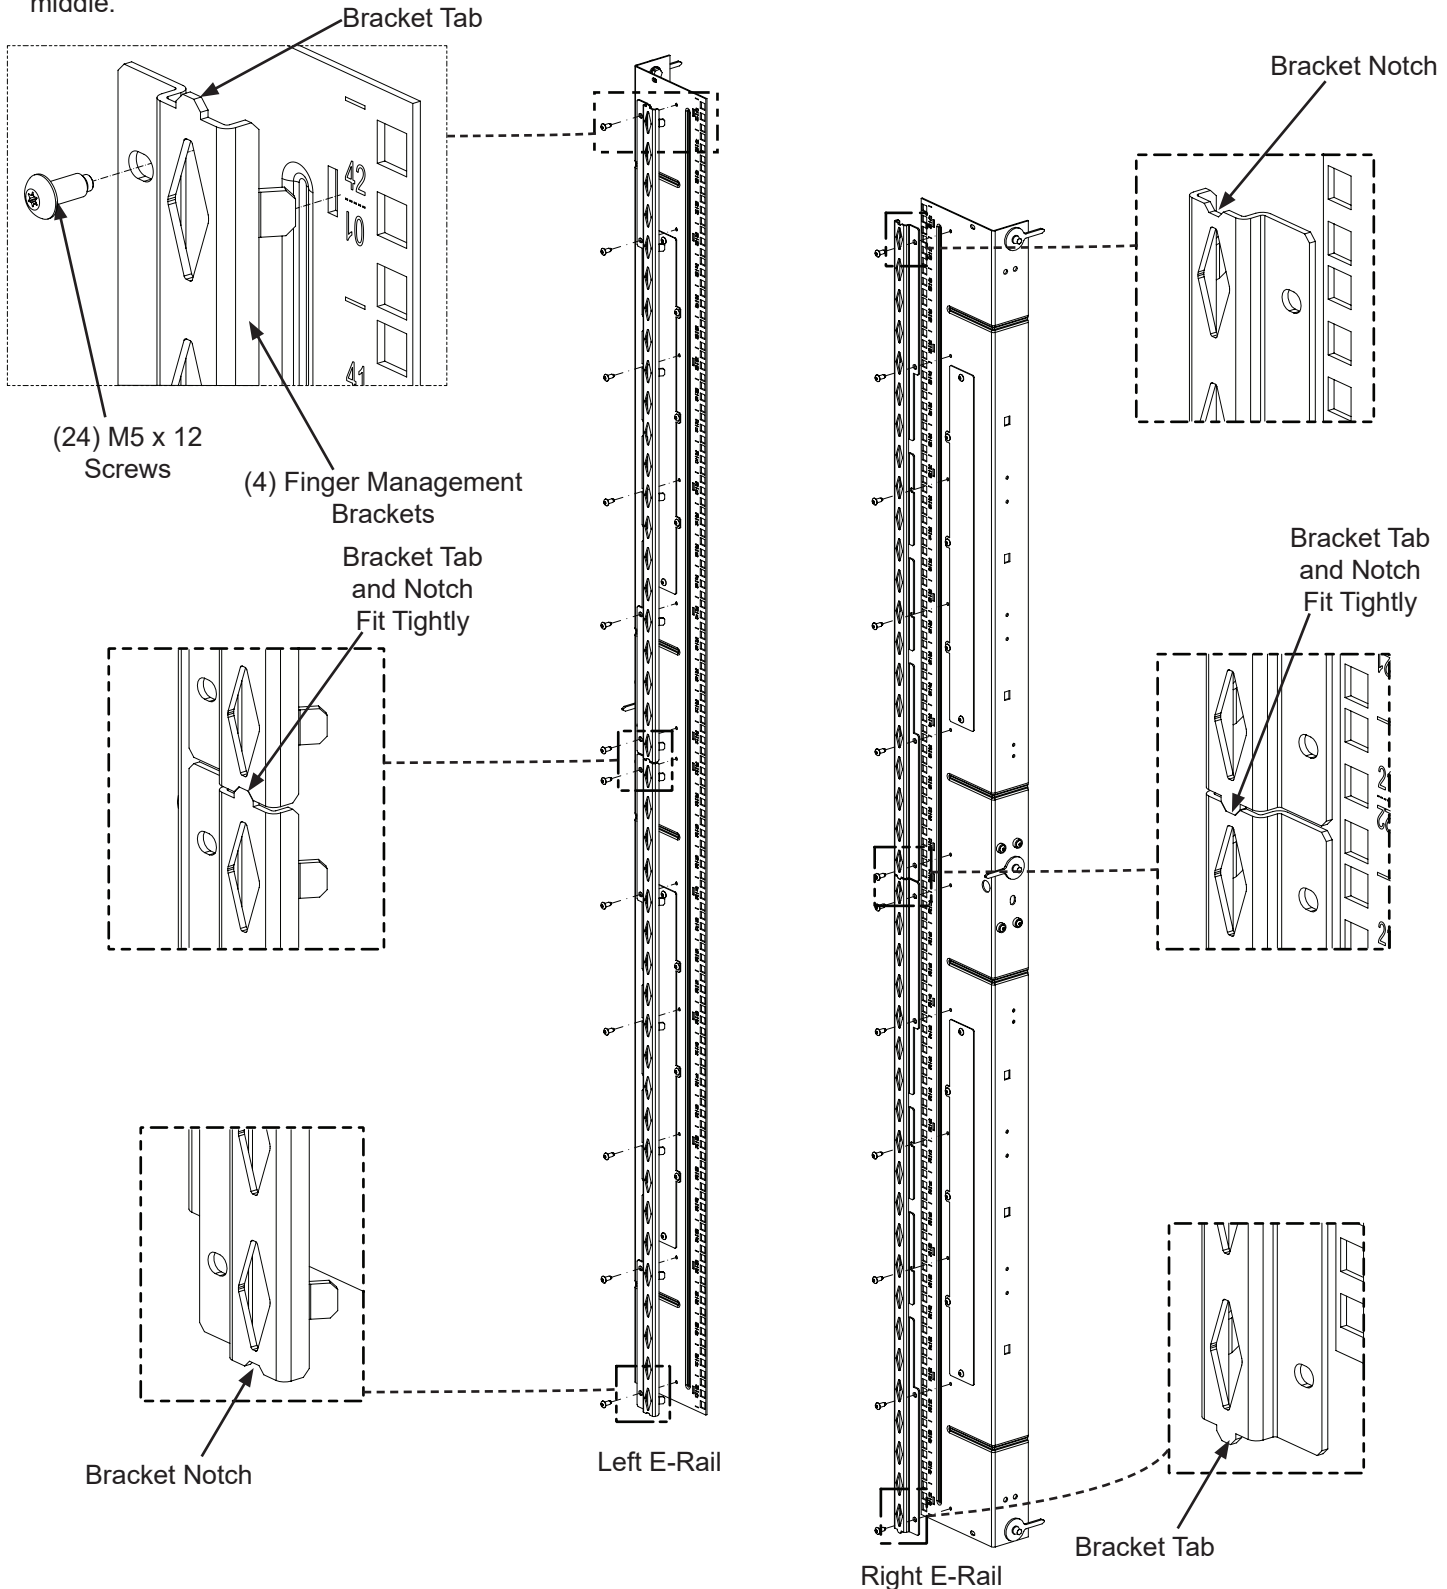


Cable Management Fingers


- Push tabs of the Cable Management Fingers into diamond patterns of Finger Management Brackets.
- Then push tabs of the Cable Management Fingers down to lock in place.

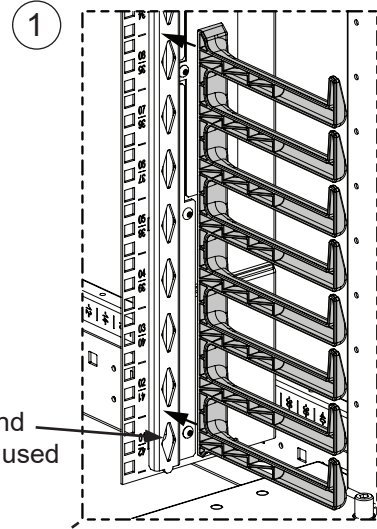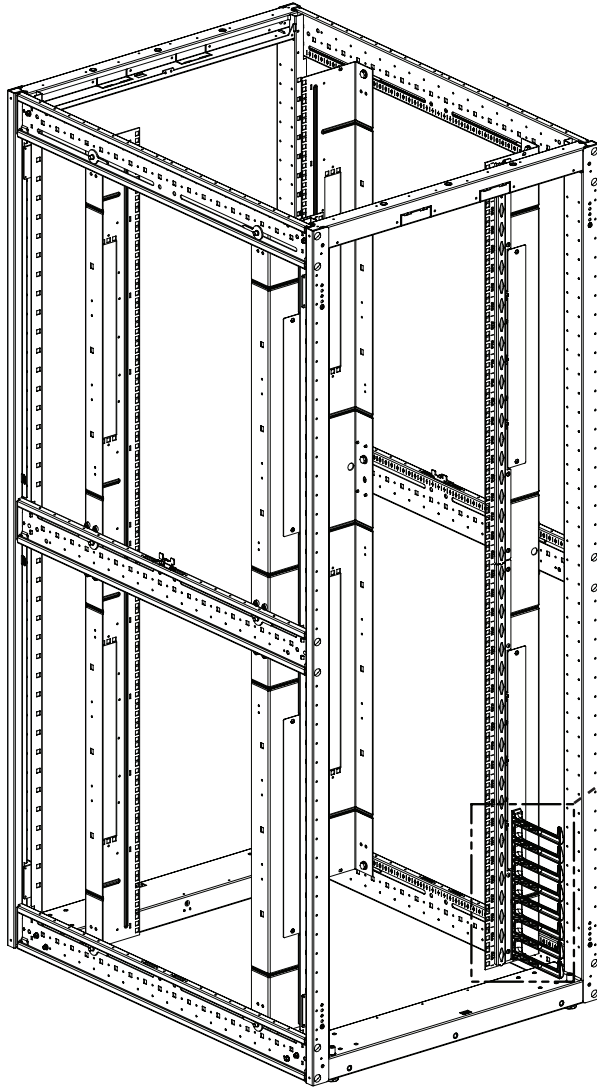

IMPORTANT:
Start installing Cable Management Finger sections at the bottom beginning with the second diamond opening

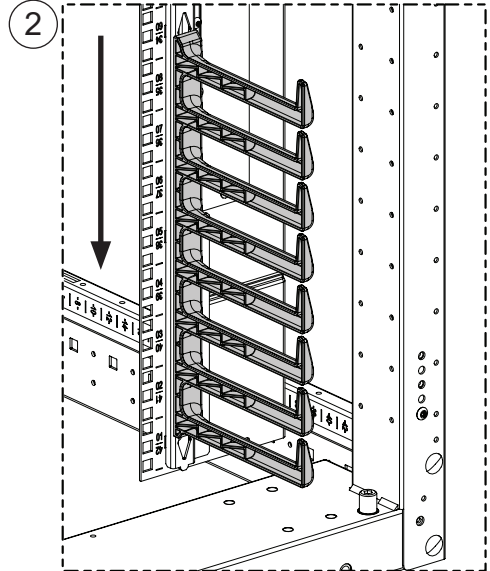

BACKSIDE VIEW

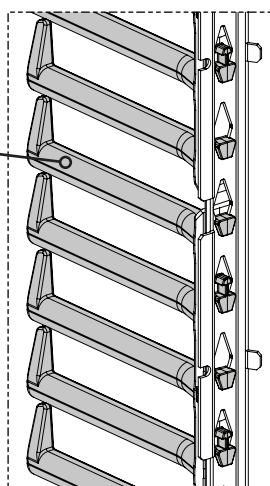

Note: The radius on fingers must face towards the outside of cabinet

Cable Management Fingers Locations

- Follow locations shown below to install Finger Kits

800 Wide Cabinet ONLY

800mm x 42RU	
RU	Finger
37 - 42	5RU Finger
32 - 37	5RU Finger
27 - 32	5RU Finger
22 - 27	5RU Finger
17 - 22	5RU Finger
9 - 17	8RU Finger
1 - 9	8RU Finger

800mm x 48RU	
RU	Finger
43 - 48	5RU Finger
38 - 43	5RU Finger
33 - 38	5RU Finger
25 - 33	8RU Finger
17 - 25	8RU Finger
9 - 17	8RU Finger
1 - 9	8RU Finger