

WMPV45EPB1

- (2) End Panels
- (4).375-16 Acorn nuts
- (4).375 -16 Bolts

Assembly:

Step 1:

Insert bolt into mounting location one.

Step 2:

Place End Panel over the bolt and hand tighten nut.

Step 3:


Insert bolt into location two a secure with acorn nut. Tighten acorn nut in location one.

Step 4:

Repeat steps 1-3 for upper End Panel

WMPV45EPB1 Installation Instructions

Note: Install lower end panel first when using a stacked configuration.

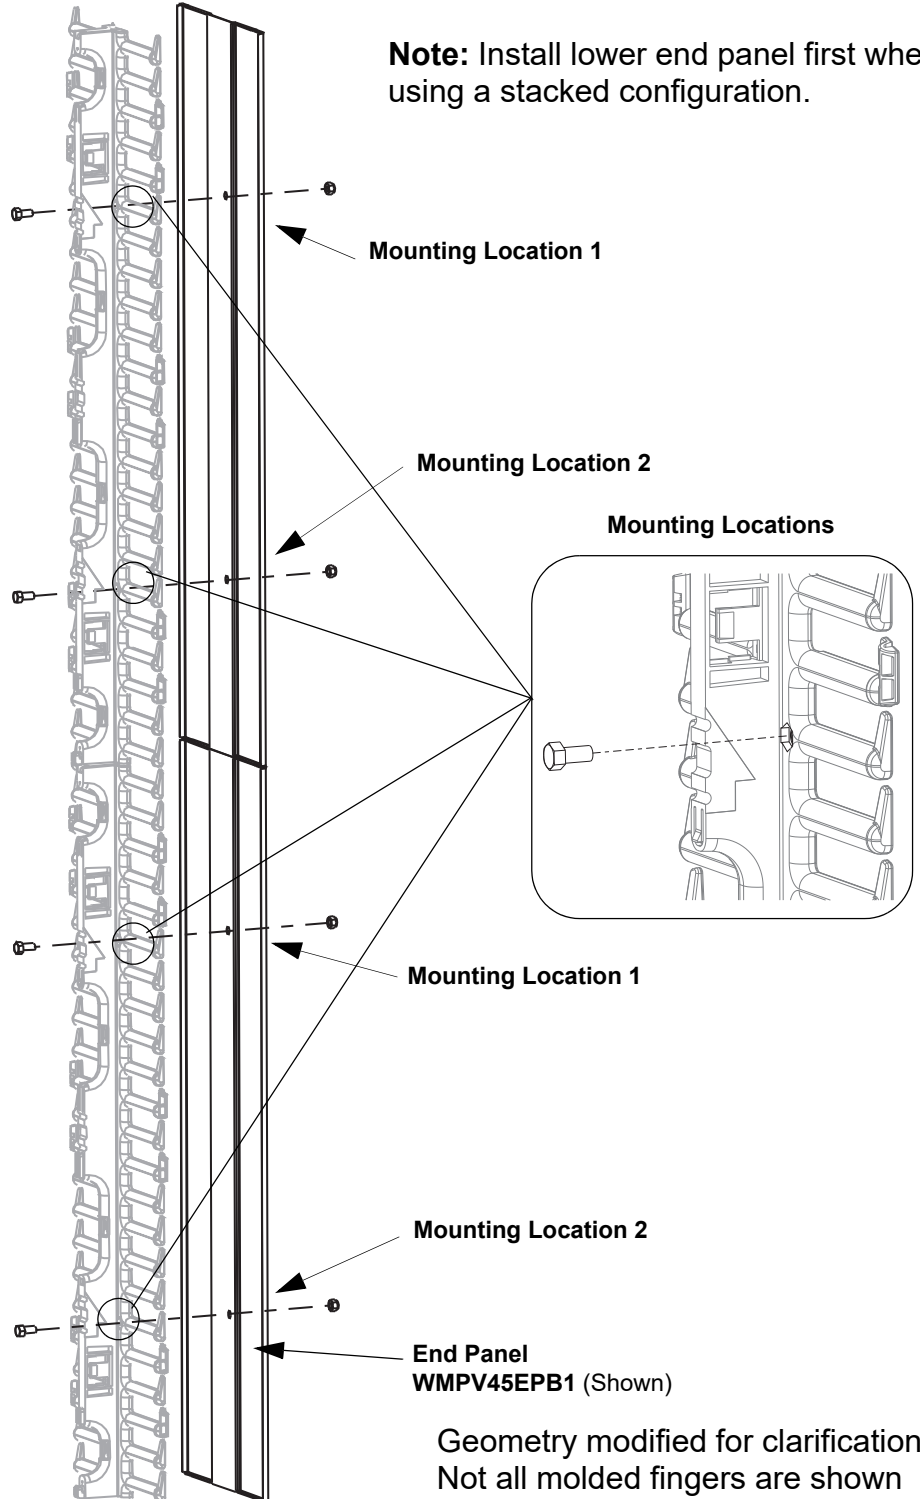

Geometry modified for clarification:
Not all molded fingers are shown