



NET-Access Slack Spool Kits

Part Numbers: CNSPE, CNSPCA

INSTRUCTIONS CM329A

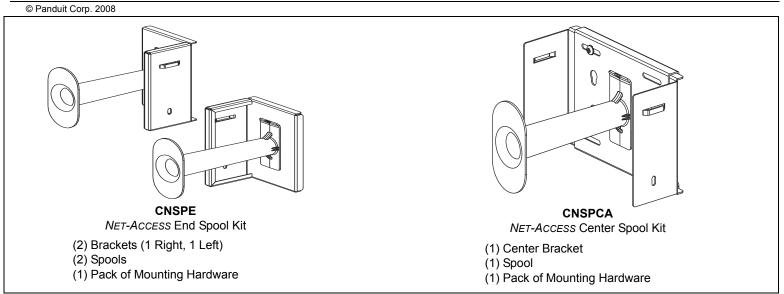


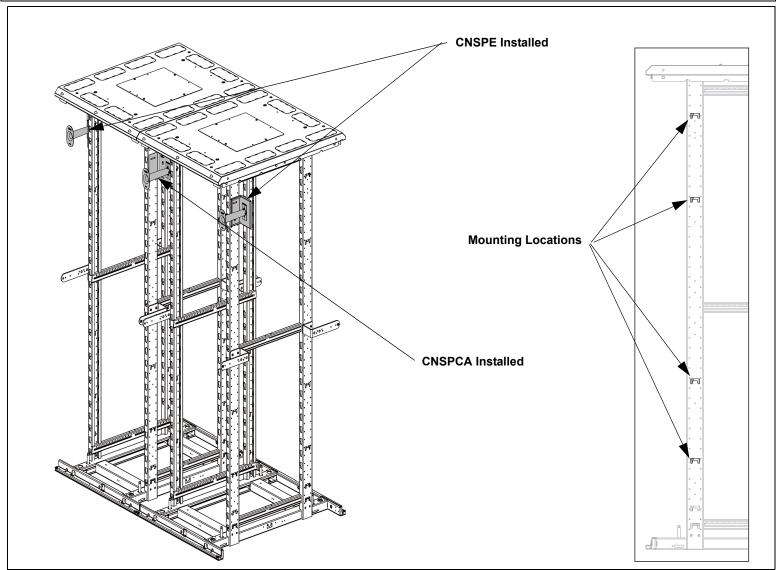

FOR TECHNICAL SUPPORT www.panduit.com/resources/install_maintain.asp

INSTRUCTIONS CM329A

Install the CNSPCA by choosing mounting location shown on Page 1. Loosen the (2) adjusting screws as shown in Figure 1 and slide the bracket between cabinet posts just above the desired mounting location until bridge lances are aligned in mounting location. Pull down and fasten with (2) #12-24 screws and washers provided as shown in Figure 2. Tighten the (2) adjusting screws on the bracket. Install the CNSPE in the desired mounting location by hooking bridge lance over tab and securing with #12-24 screw and washer provided as shown in Figure 3

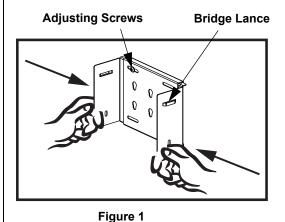

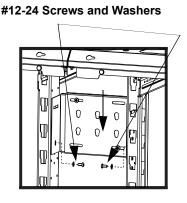


Figure 2


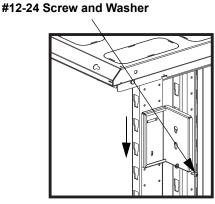


Figure 3


INSTALLATION OF SPOOLS Step 1

Align buttons with mounting leg slot

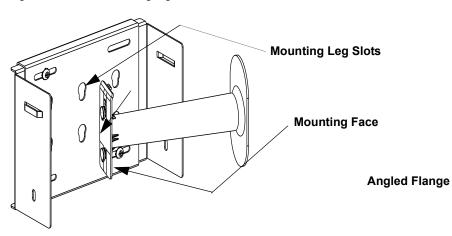

Step 2

Push buttons through bracket until mounting face is flush with bracket.

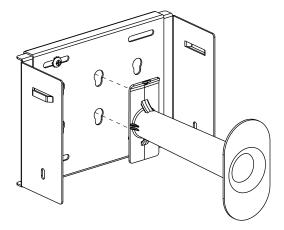

Step 3

0

Apply downward pressure until plastic spool clicks into place.

Removal/Replacement Step 4

Pull back on angled flange while applying upward pressure

Step 5

Repeat steps 1-3

For instuctions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail: cs@panduit.com Fax: (708)444-6448