

TJF "T" Junction Harness Board Accessory

© Panduit Corp. 2013


INSTALLATION INSTRUCTIONS

PR143N-TJF

ASSEMBLY


ASSEMBLY IS REQUIRED BEFORE INSTALLATION

By hand, push nail into top of housing (as shown below).

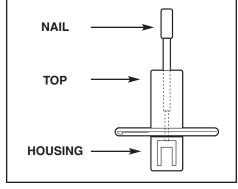

INSTALLATION

Using a minimum harness board thickness of 5/8", hammer assembly onto harness board until the top of the nail is even with the top of the housing.

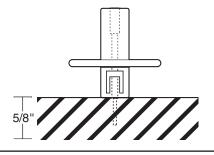

IMPORTANT: AFTER INSTALLATION, WHEN FIXTURE IS NOT IN USE, KEEP IN THE 'UP' POSITION

	USE
	TO INSTALL HARNESS
	1. Slide housing up the nail until it stops
	 Route wires around top of the housing to form a "T" junction
	TO REMOVE HARNESS
DOWN	1. Slide housing down the nail while pulling off harness
	2. Install cable ties at points "A" and "B"
For instructions in Local Language	es E-mail: techsupport@panduit.com

and Technical Support:

www.panduit.com/resources/install maintain.asp



techsupport@panduit.com

Phone: 866-405-6654