


Side Panels (Installation and Removal)

- Check for Vertical Blanking Panel Accessory. Verify notch covers are set for the cabinet configuration w/side panels (Fig 1).
- Set bottom in on angle then tilt up to engage latch.
- Attach grounding whip to frame (see page 2).
- **Reverse Steps** to remove Side Panels.

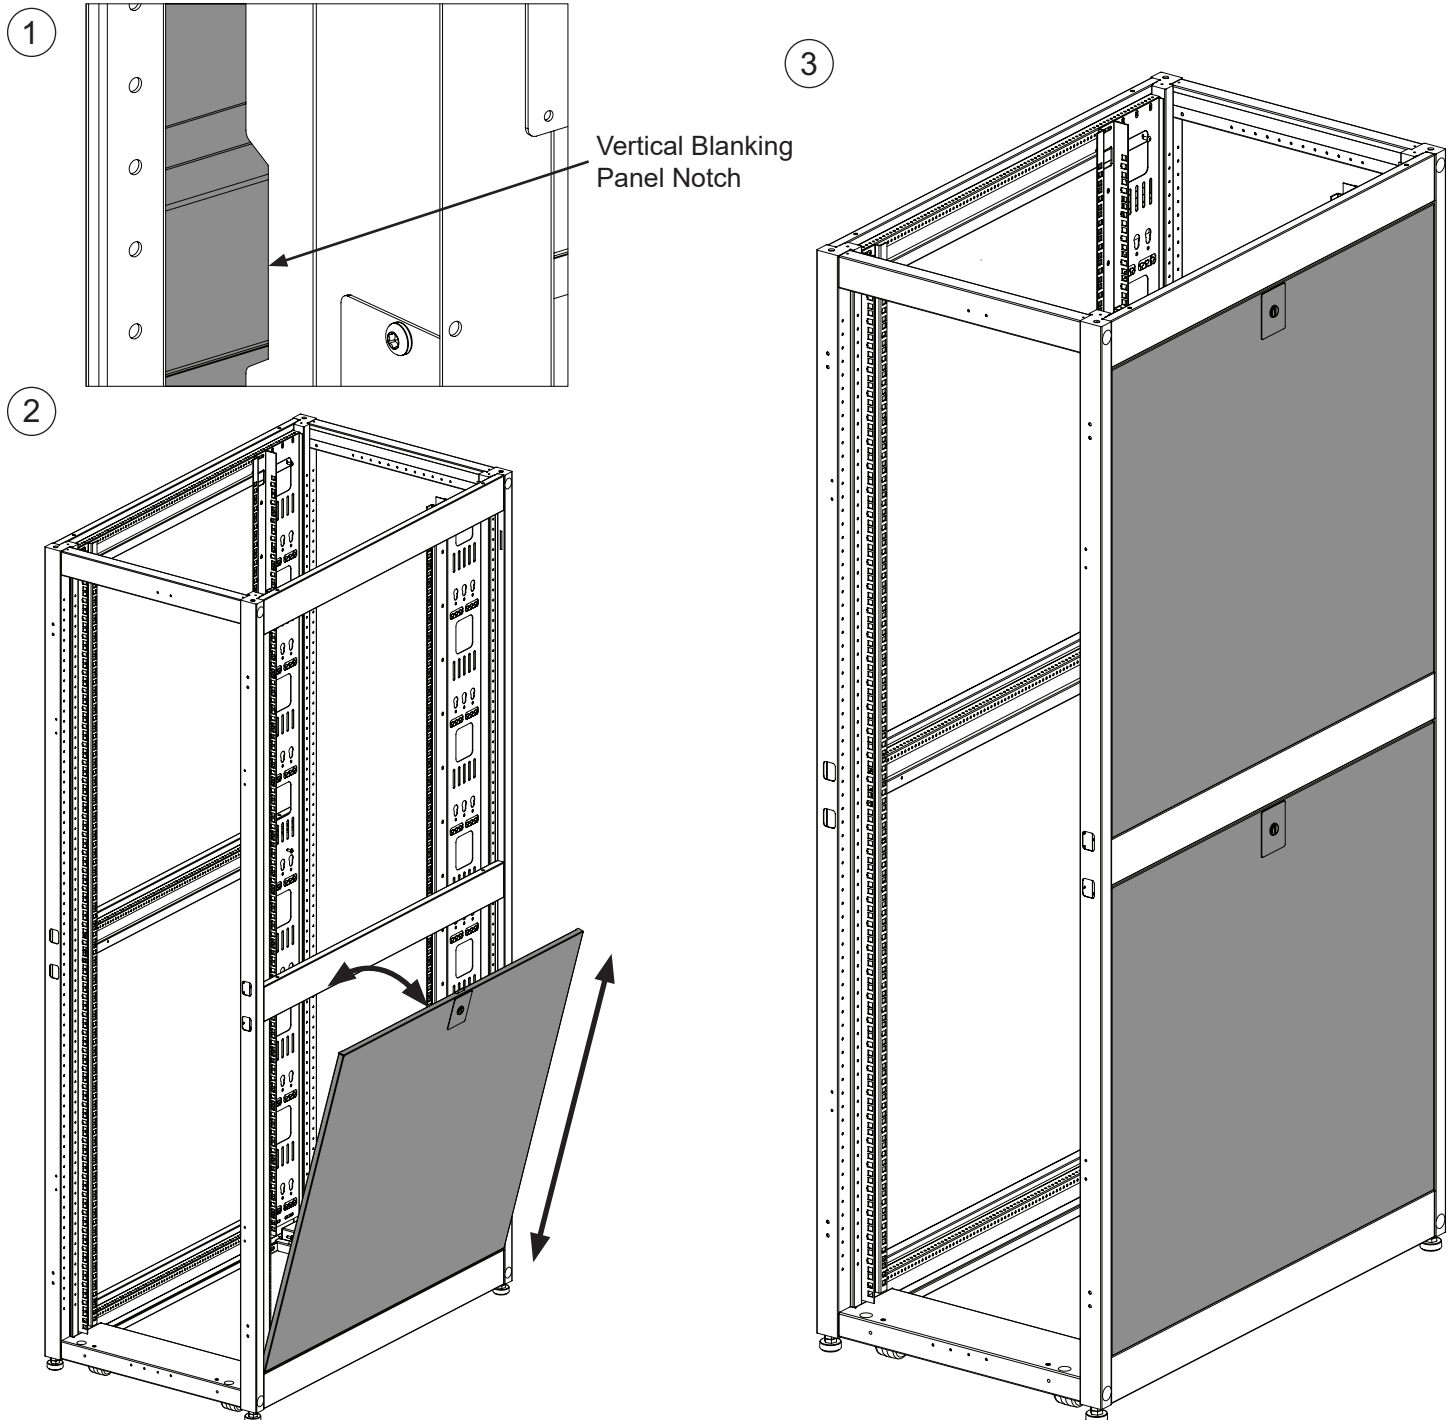



DANGER

Electrical Shock Hazard

Each cabinet must be connected to the Common Bonding Network (CBN).

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN LEAD TO SERIOUS INJURY, DEATH, OR DAMAGE TO YOUR EQUIPMENT.


Grounding

- Attach Grounding Lug or Grounding Bar (not included) to Common Bonding Network (CBN), utilizing any bonus hole along the Front-to-Rear members of the frame.
- Attach and Detach Components to Cabinet Frame by disconnecting male female terminals.


T25 Torx driver
required for
M5X0.8mm Screws.




Cabinet Terminals (not included) attach along the bonus holes running along the (6) Front-to-Rear members of the frame and front and back vertical posts shown in grey.

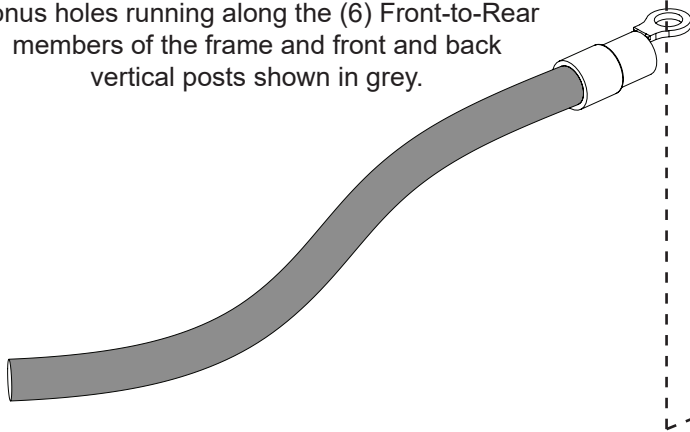

Female terminals on:
Side Panels

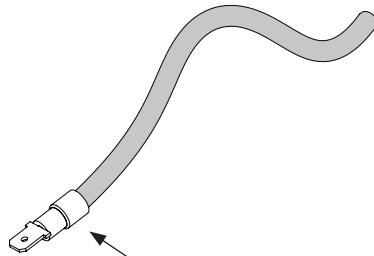

Male terminals on:
Cabinet Frame

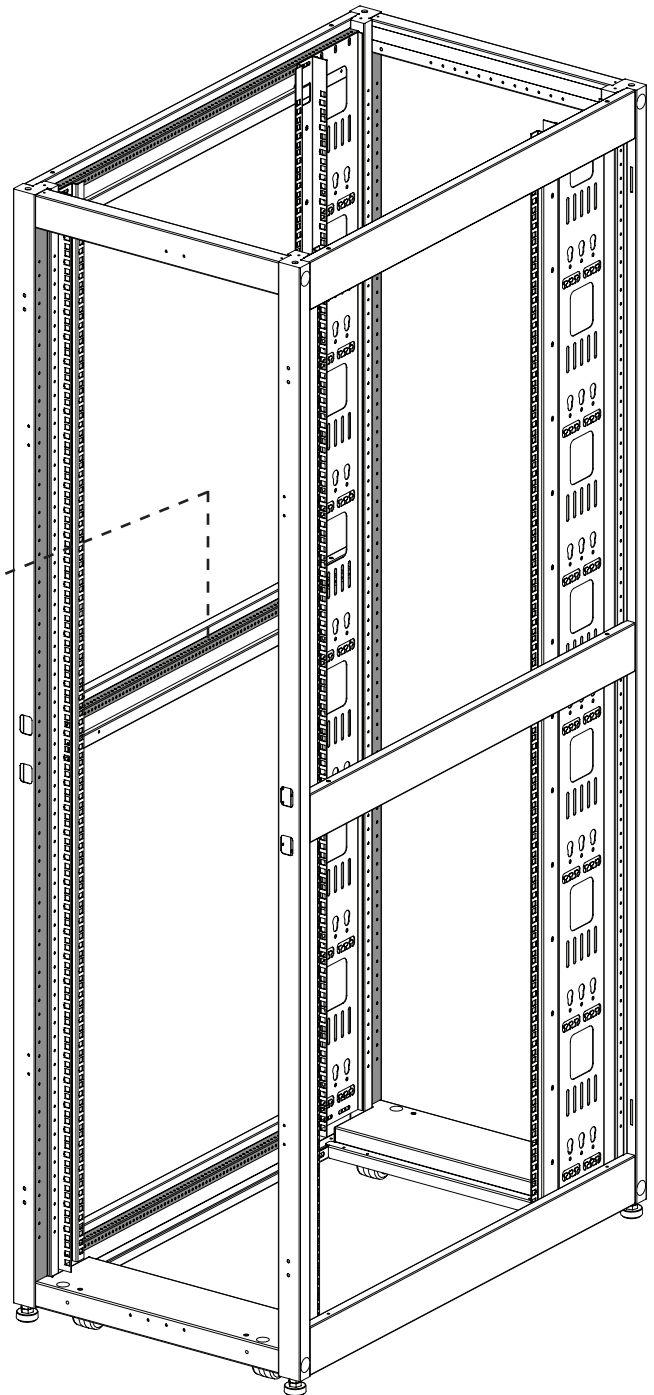

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654