


### PDU Bracket Kit Installation (*optional*)


- Install [4] M5 Torx Screws into desired top location of cabinet post, as shown below
- Do not tighten screws - Leave a gap between screw and cabinet post for bracket thickness
- Place Top PDU Bracket over screw heads and slide up (or down, depending on mounting side of cabinet)
- Install Bottom PDU Bracket at desired distance from Top PDU Bracket
- Tighten [8] M5 Torx Screws

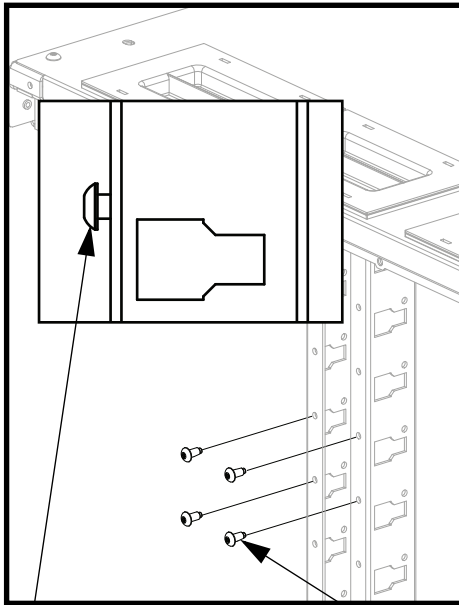

**DO NOT TIGHTEN**  
(Leave Gap Between  
Screw and Cabinet Post)

**[4] M5 Torx Screws**  
(use T25 Torx bit)


PDU Bracket

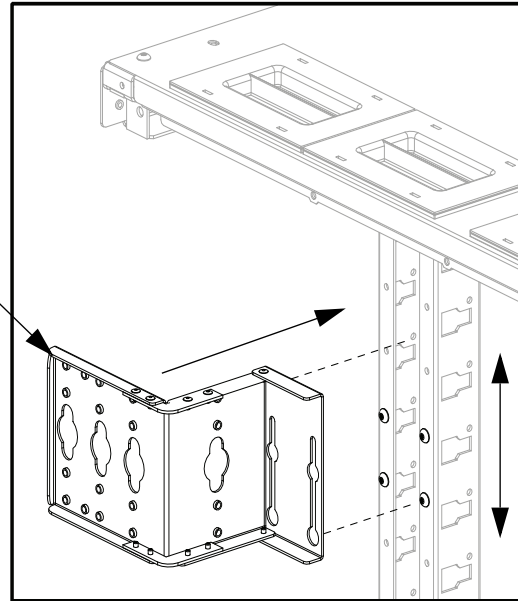

**LEFT SIDE:**  
Slide down


**RIGHT SIDE:**  
Slide up

Top PDU Bracket

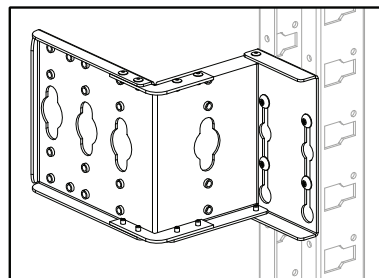

PDU Bracket  
(installed)

Bottom PDU Bracket

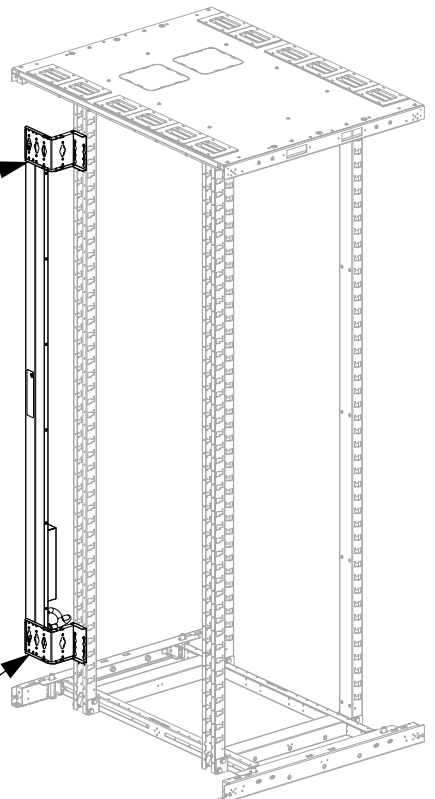

### NOTES:

- Panduit recommends installation of NVPDUB brackets prior to positioning of cabinets in row
- An angle impact driver (such as Makita® BTL061) is recommended when installing NVPDUB brackets on cabinet positioned in row