


#### CONTENTS:

- 1 - FCE Enclosure
- 1 - FCE Kit
- 1 - Port I.D. Label
- 2 - EIA Enclosure Brackets

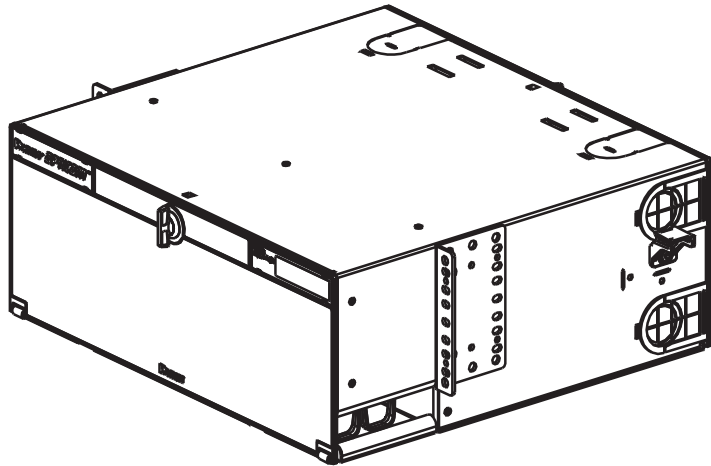


#### Assembly Instructions:

1. Determine the cable entry location on the enclosure. Remove the knockout by inserting a screwdriver into the slot located in the center of the knockout and apply a twisting upward motion then lift out. Insert grommet following proper cutting diagram. Snap in saddle clips. Grounding lug attaches to a stud at the rear, inside the enclosure on the bottom with a #10-32 nut. Apply laser warning label and caution label in a clearly visible location. Apply port I.D. label(s) on the inside of the door.


#### GROMMET CUTTING DIAGRAM




Cut the small circle for 1" diameter innerduct

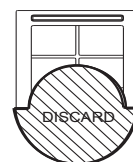


Cut the large circle for 1-1/2" diameter innerduct

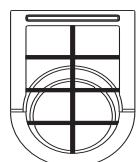


Cut the straight lines when not using any innerduct

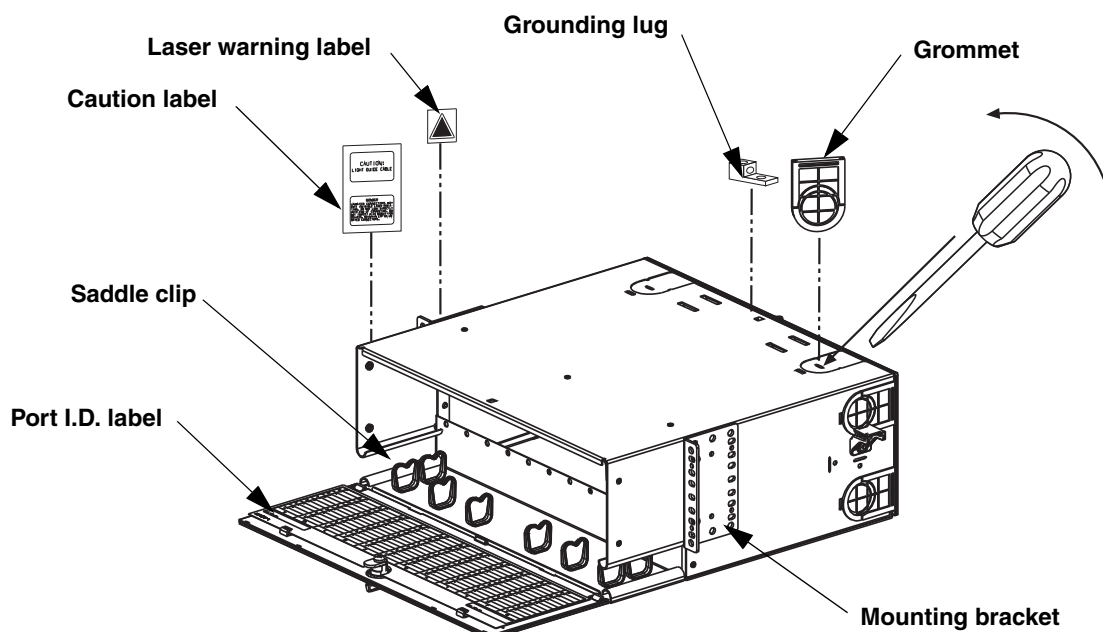


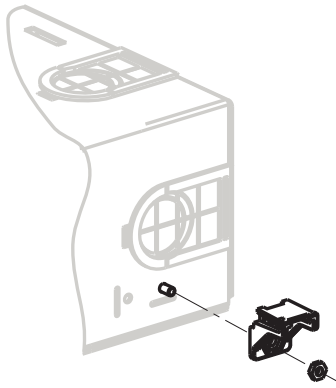


Attach strain relief clip with the #10-32 screw and nut provided.

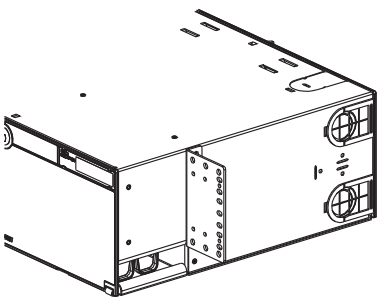

Bracket orientation for 23" rack  
Attach the short leg of the bracket to the enclosure.


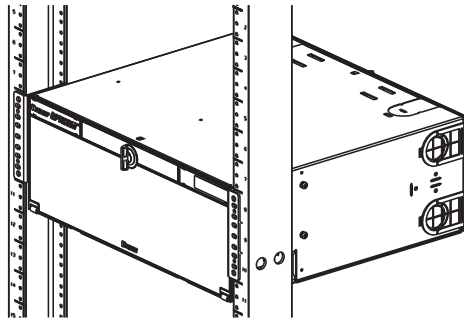


Bracket orientation for flush mount on a 19" rack  
Locate rack bracket on the front mounting holes for flush mounting.

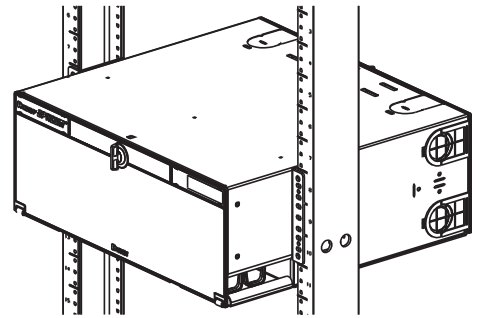

Bracket orientation for projection mount on a 19" rack  
Locate rack bracket on the mid enclosure mounting holes for projection mounting.

### Label Installation

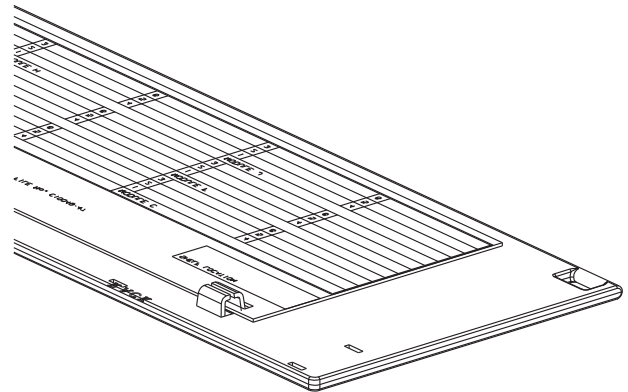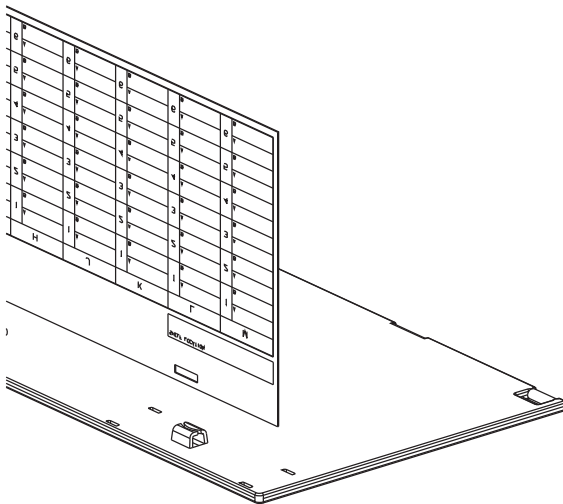

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**  
[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654