



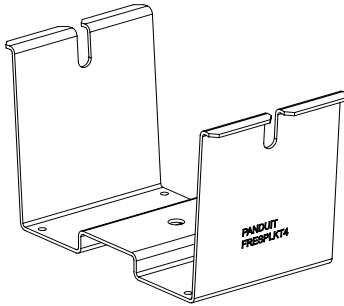


4X4 Outer Sleeve
Qty: 4

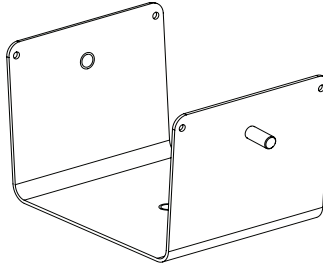

4X4 Inner Sleeve
Qty: 4

Tool List:

- 7/16" Hex Driver




1/4-20 Flange Nut
Qty: 12


Fiberrunner Expansion Splice Kit (FRESPLKT4) Installation







1. Measure Distance between pre-installed FiberRunner duct: (Dim "X"). Cut duct and duct covers if applicable. Use the following equation to calculate "L". $L = X - .75 (+/- .25)$.
2. Install Inner Sleeves
3. Install Section or Fitting with Outer Sleeve and (2) 1/4-20 Flange Nuts
4. Install remaining (4) 1/4-20 Flange Nuts
5. Install Covers if used

1

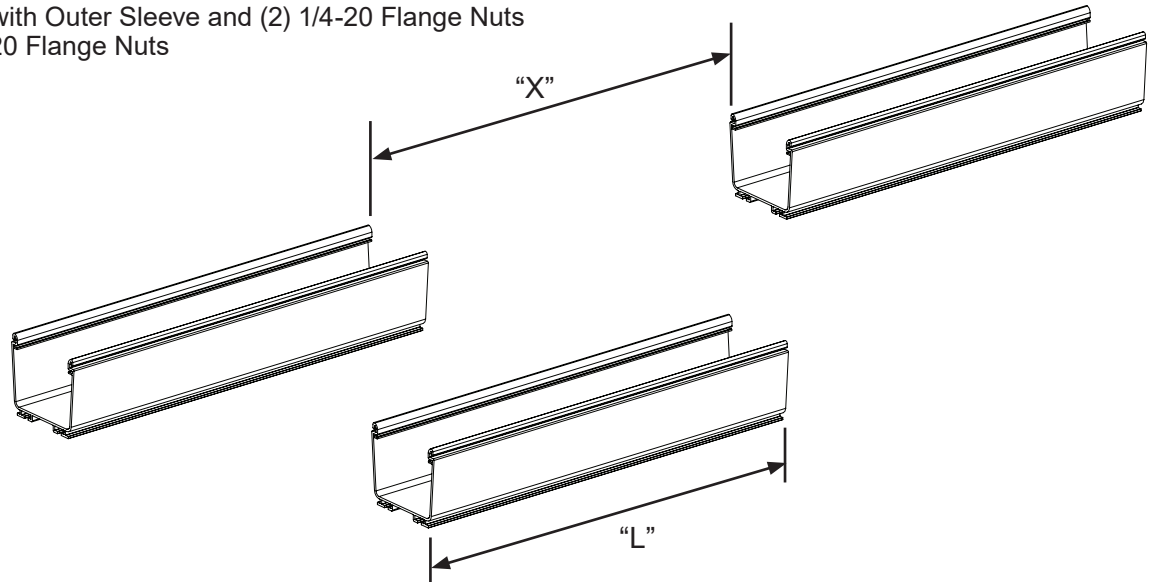

2

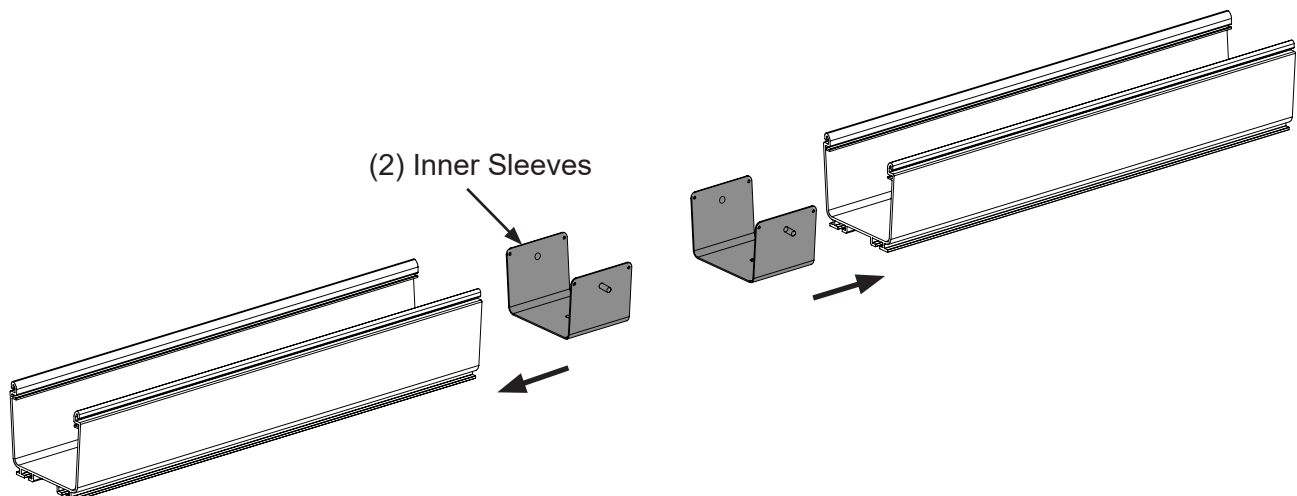

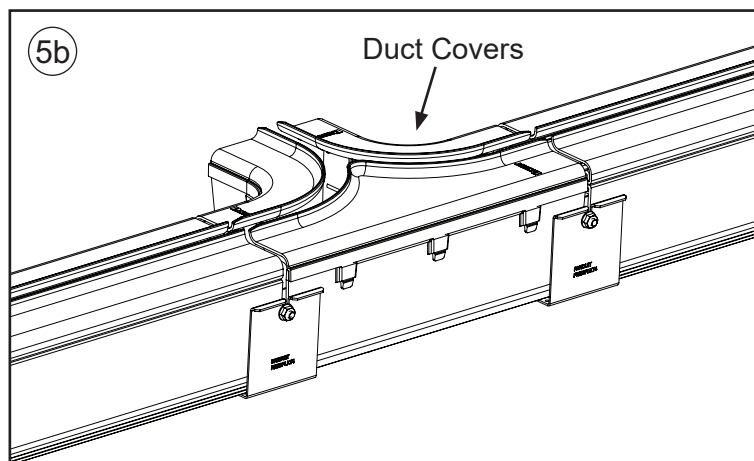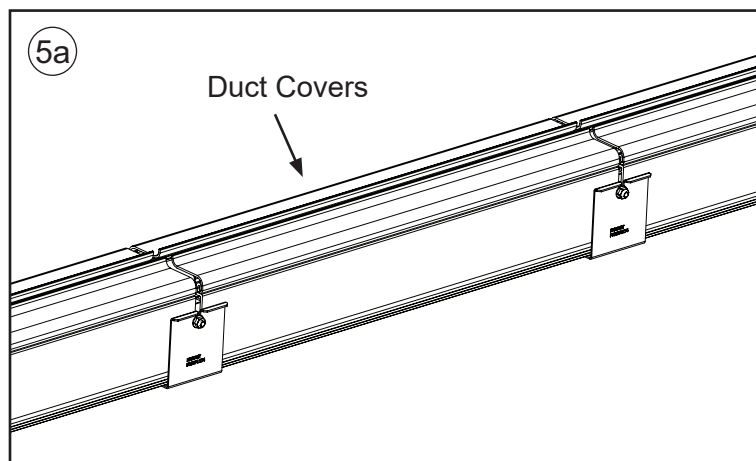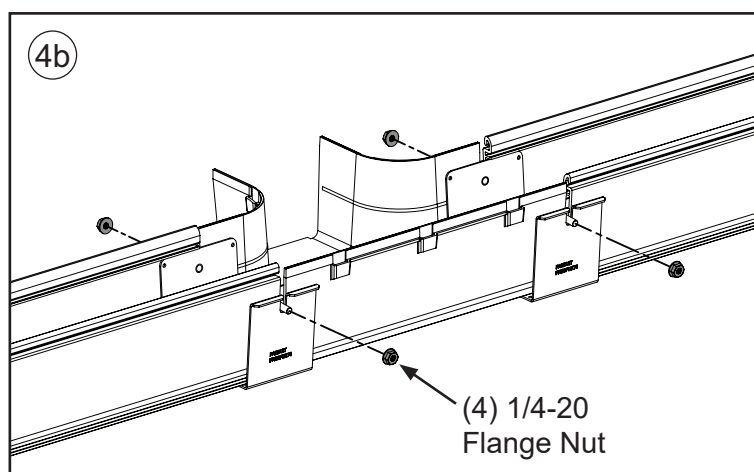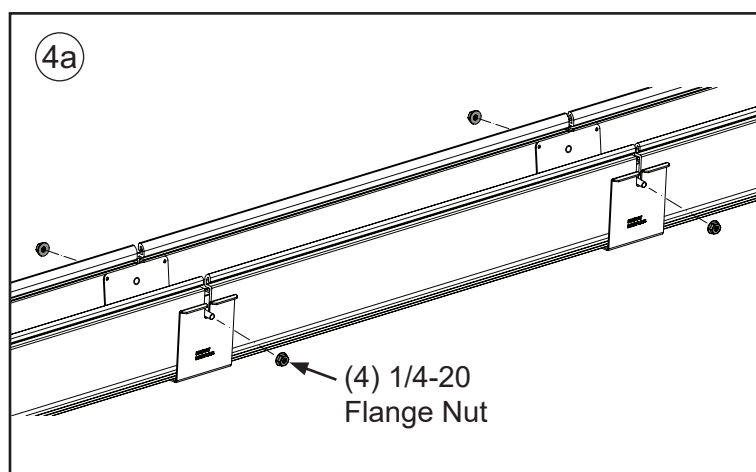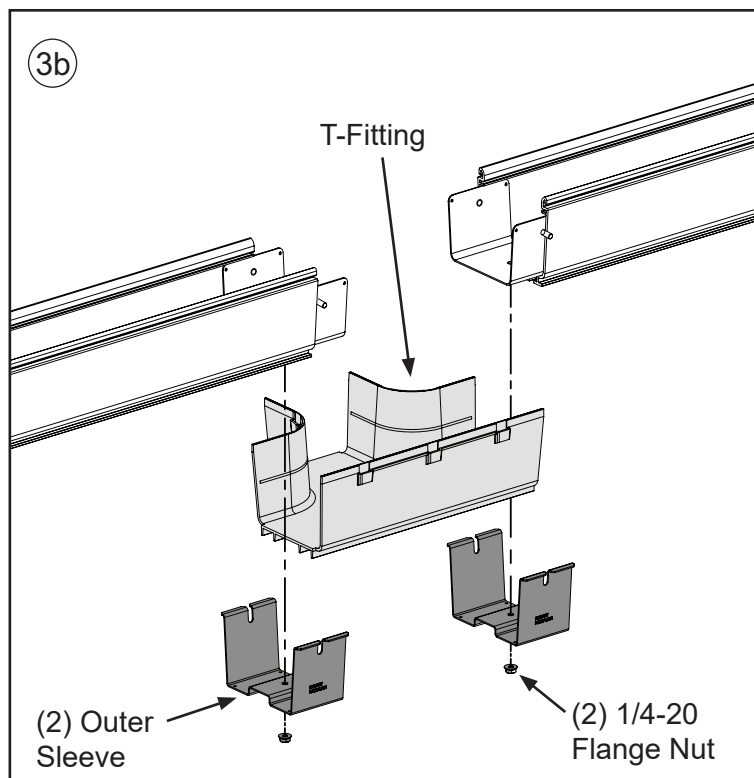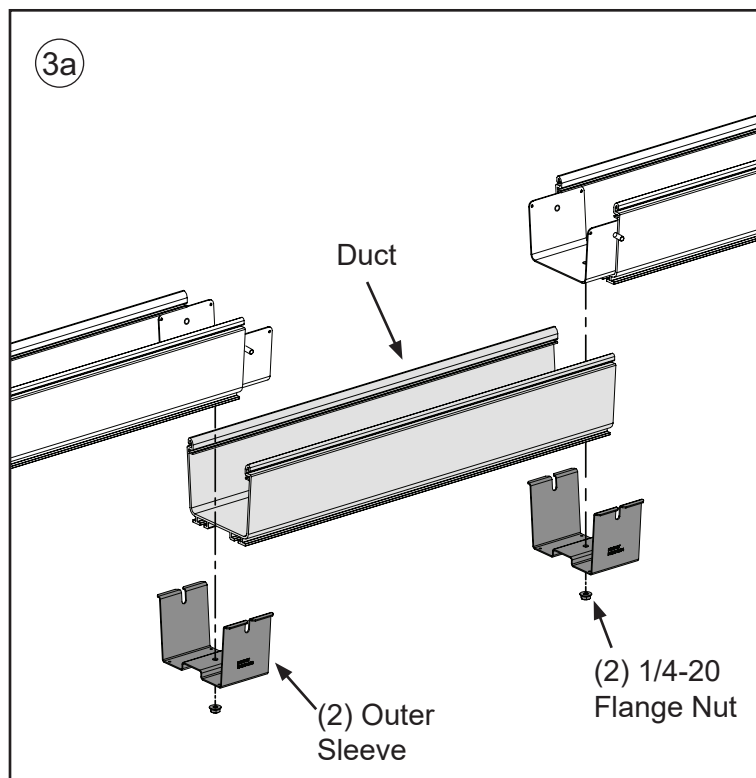

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654