



Firmware Update Instructions for OptiCam® 2 Termination Tools

1. Go to panduit.com > Support > Download Center > Software, Firmware, Printers
 - a. Scroll down to the 'OptiCam 2 Termination Tool' section.

OptiCam® 2 Termination Tool

The OptiCam® 2 Termination Tool is designed to offer 100% "Right the First Time" termination of OptiCam connectors. The tool immediately calculates insertion loss value on completion of the camming process.

[Firmware Update Instructions for Windows](#)

[Firmware Update Instructions for macOS](#)

[Registering your Opticam® 2 Tool](#)

[OptiCam® 2 Product Bulletin](#)

[OptiCam® 2 Firmware v1.1.1 for Windows](#)

[OptiCam® 2 Firmware v1.1.1 for macOS](#)

2. Click on the 'OptiCam 2 Firmware v1.1.1 for Windows' link.
 - Note the actual version number may vary.

OptiCam® 2 Termination Tool

The OptiCam® 2 Termination Tool is designed to offer 100% "Right the First Time" termination of OptiCam connectors. The tool immediately calculates insertion loss value on completion of the camming process.

[Firmware Update Instructions for Windows](#)

[Firmware Update Instructions for macOS](#)

[Registering your Opticam® 2 Tool](#)

[OptiCam® 2 Product Bulletin](#)


[OptiCam® 2 Firmware v1.1.1 for Windows](#)

[OptiCam® 2 Firmware v1.1.1 for macOS](#)


3. Open the zipped folder that appears on your computer.
4. Double-click on the file that ends with .exe, filename FOCTT2_FWUPv1_0_9.exe

Name	Type	Compressed size
Download the latest FOCTT2 firmw...	Adobe Acrobat Document	338 KB
FOCTT2_DRVrv1.01.zip	Compressed (zipped) Fol...	7 KB
FOCTT2_FWUPv1_0_9.exe	Application	7,550 KB
FOCTT2v1_1_1.img	Disc Image File	294 KB
octt2_fw_update.ini	Configuration settings	1 KB
OptiCam2_SoftwareLicenseAgree...	Adobe Acrobat Document	743 KB
ReleaseNotes_FOCTT2_FWUPv1_0_...	Adobe Acrobat Document	184 KB
ReleaseNotes_FOCTT2v1_1_1.pdf	Adobe Acrobat Document	114 KB

5. If a pop-up window appears, stating that 'This application may depend on other compressed files in this folder.' click on the 'Extract all' button.

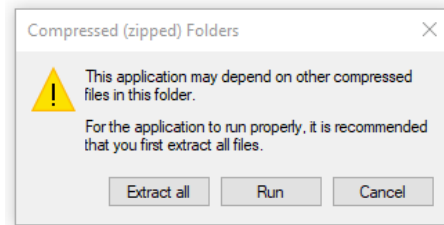


6. Panduit recommends using the default file location, which is already populated on the next window that opens. Click 'Extract' now.

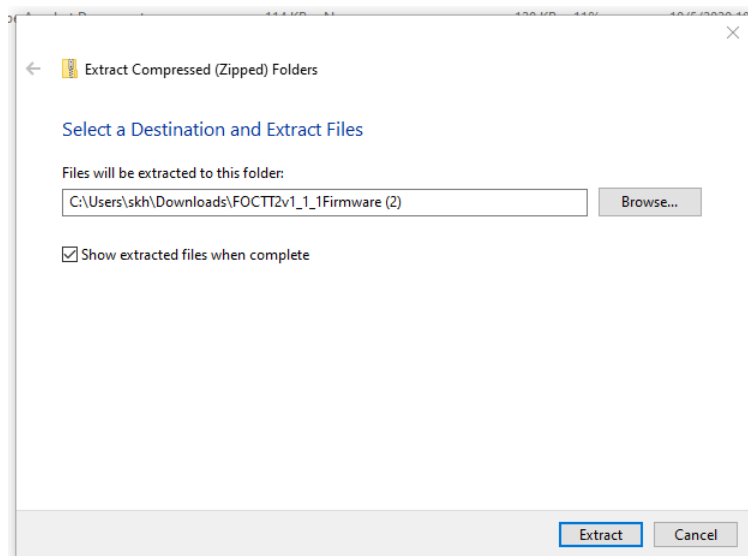

7. A new window will pop up. Find the .exe file again, now displayed with a blue icon. Double click on this file.

	Download the latest FOCTT2 firmware.pdf	5/2/2019 9:40 AM	Adobe Acrobat D
	FOCTT2_DRV1.01.zip	1/4/2019 12:34 PM	Compressed (zip)
	FOCTT2_FWUPv1_0_9.exe	4/9/2019 12:26 PM	Application
	FOCTT2v1_1.img	10/5/2020 10:50 AM	Disc Image File
	octx2_fw_update.ini	10/5/2020 10:50 AM	Configuration set
	OptiCam2_SoftwareLicenseAgreements....	10/5/2020 10:50 AM	Adobe Acrobat D
	ReleaseNotes_FOCTT2_FWUPv1_0_9.pdf	4/15/2019 7:49 AM	Adobe Acrobat D
	ReleaseNotes_FOCTT2v1_1_1.pdf	10/5/2020 10:50 AM	Adobe Acrobat D

8. A small window, called 'Panduit OCTT2 Firmware Update Tool' will pop up. Click on the 'Serial Port' dropdown and note any COM ports that may be listed. Sometimes, no COM port will be listed, this is okay.

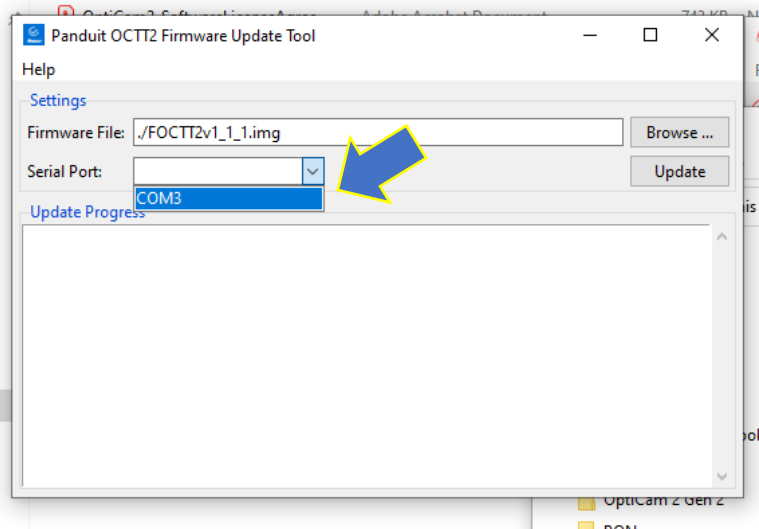


9. Plug in the USB cord to the computer, and the Micro USB end into the port on the left side of the OptiCam 2 tool. Note that this **MUST** be a data cord, such as Panduit part FOCTT2CORD. Cords that only charge devices will not work for this firmware update process.
10. If the tool is on firmware version 1.0.9 or older, go to the settings menu, scroll down to the **Tests** option, and select the **Firmware Update** option. The next screen will advise you to click on the thumb switch to power down the tool. Click the thumb switch once. In a second or two, the tool will power down. Do not hold the switch down.
11. If the tool is on firmware version 1.0.10 or later, go to the settings menu, scroll down to the **System** option, and select the **Firmware Update** option. The next screen will advise you to click down on the thumb switch to power down the tool. Click the thumb switch down once, towards the handle. In a second or two, the tool will power down. Do not hold the switch down.
12. Power the tool back up by clicking once on the thumb switch. A blue screen will be displayed, indicating the tool is ready to receive the new firmware package.




Image of the bootloader screen, indicating the tool is ready to accept the firmware update. **This screen will time out after 60 seconds if the update process is not initiated.** The user may have to restart the process from the Settings menu.

13. Return to the smaller Firmware Update Tool window on your computer, select the new COM port that is displayed, and click the Update button. Note that the COM port number may vary by user and computer, so what you see in this tutorial is just an example. The tool will only stay on this blue bootloader screen for about **60 seconds**, so it is important to click the update button before it times out. If it does time out, go back into the settings menu and proceed to the **Firmware Update** option again, as you did in step 10 or 11.

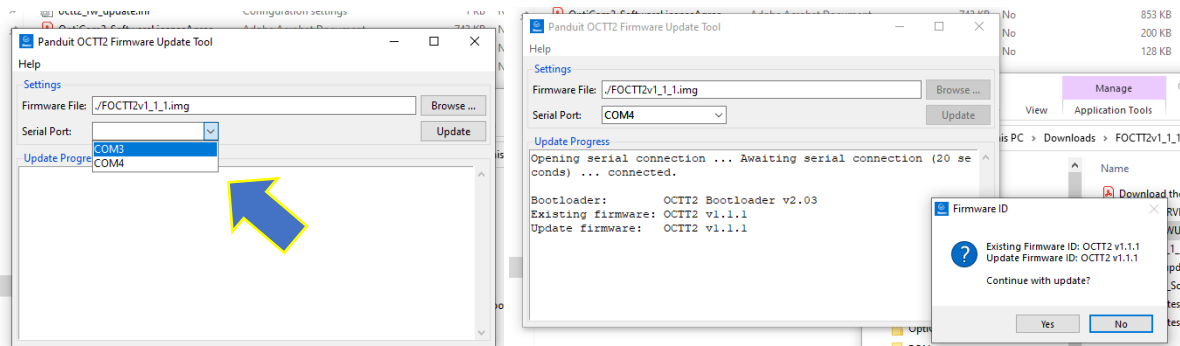

(L) The uploader tool showing a new COM port as an example. User experience may vary. (R) The pop-up window confirming the intended update, indicating current firmware edition and new firmware edition.

14. After you click the Update button, a window will pop up to validate that you intend to update the firmware from the previous version on the tool to the new one you have indicated. Click Yes. You will see the Update Tool quickly cycle through the process and, after just a few seconds, you will see that the Update was successful.

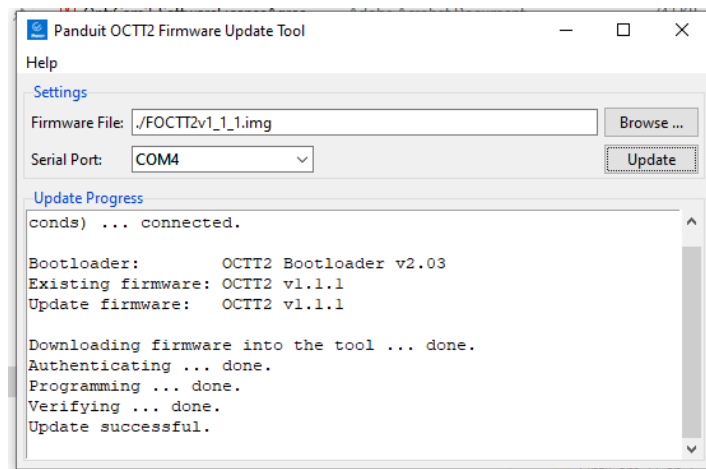

15. The tool is now updated to the latest firmware and will power down. Depending on the version you updated from, you may be asked to select a language for the tool. You may close the Firmware Update Tool on the computer.