




1. Snap groove portion of tie onto support strand.

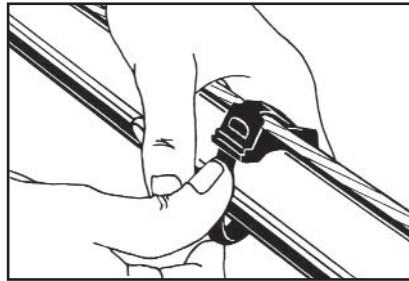

2. Position cable against tie spacer and thread tail through slot in head. Push upwards on body of tie until snug.

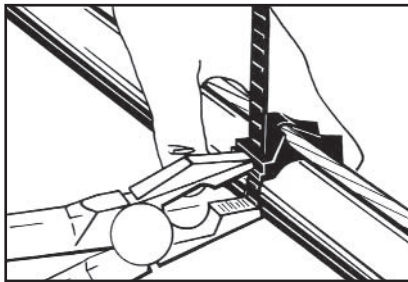



3. Use pliers utilizing tension steps on tie to tighten completely.

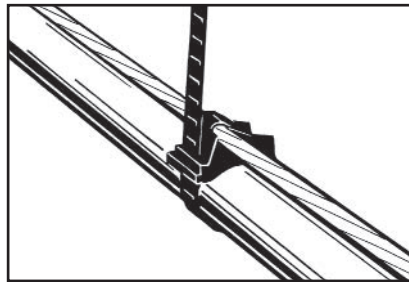


4. Support tie shown when properly installed. If releasability is not required, tip can be cut off.

TO RELEASE:


Use screwdriver to push locking tab towards support strand.

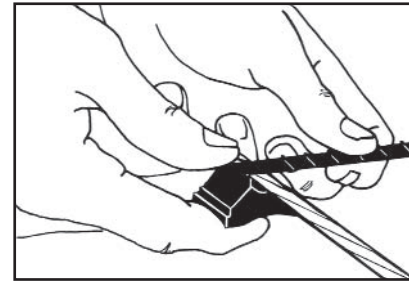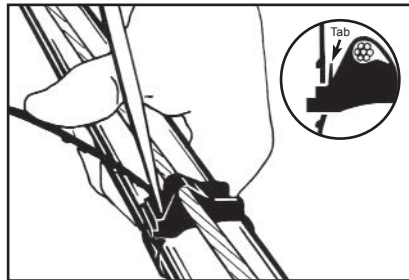


1. Snap groove portion of tie onto support strand.

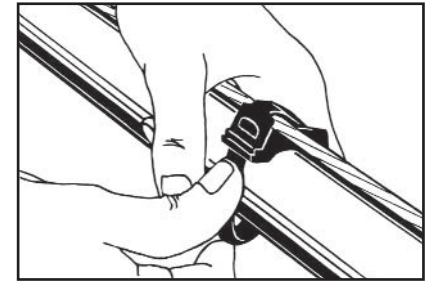

2. Position cable against tie spacer and thread tail through slot in head. Push upwards on body of tie until snug.

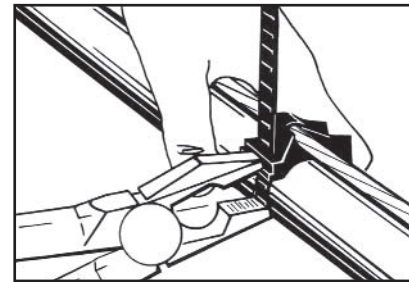

3. Use pliers utilizing tension steps on tie to tighten completely.

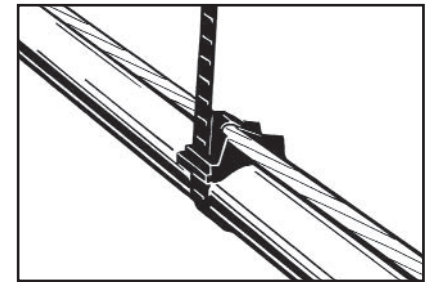

4. Support tie shown when properly installed. If releasability is not required, tip can be cut off.

TO RELEASE:

Use screwdriver to push locking tab towards support strand.

